


Yaw Rate and Lateral G Sensor

MANUAL TRANSMISSION AND DIFFERENTIAL

27. Yaw Rate and Lateral G Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

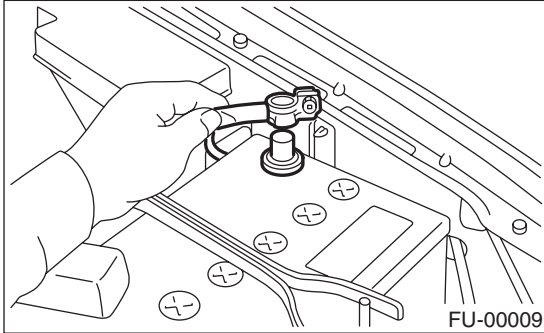


2) Remove the console cover. <Ref. to EI-47, Console Box.>

3) Disconnect the connector from yaw rate & lateral G sensor.

4) Remove the yaw rate & lateral G sensor from body.

CAUTION:

Do not drop or bump the yaw rate & lateral G sensor.

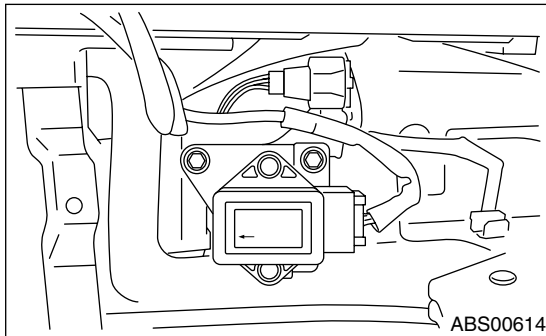

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Do not drop or bump the yaw rate & lateral G sensor.

Tightening torque:

18 N·m (1.8 kgf·m, 13 ft·lb)