



5) Tighten bolt which holds center exhaust pipe to hanger bracket.

Tightening torque:

35 ± 5 N·m (3.6 ± 0.5 kg-m, 26.0 ± 3.6 ft-lb)

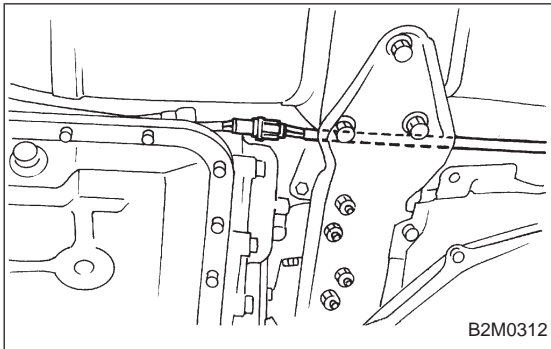


6) Connect rear oxygen sensor connector.

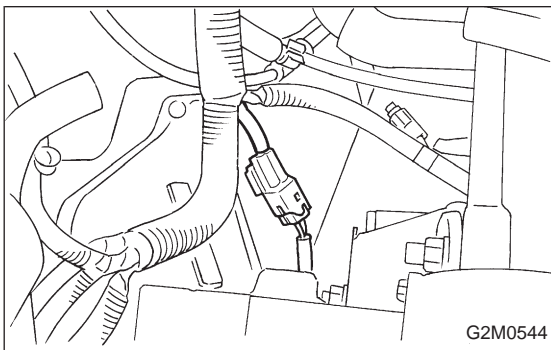

7) Lower the vehicle.

8) Connect front oxygen sensor connector.

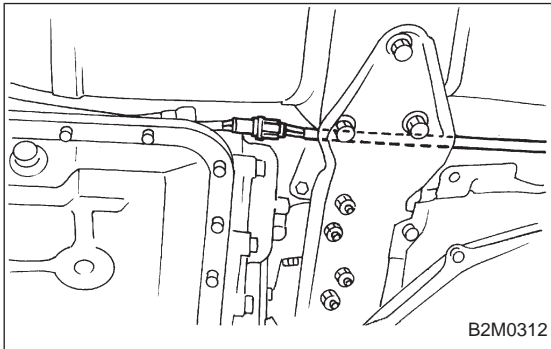


2. Rear Catalytic Converter


A: REMOVAL

1) Lift-up the vehicle.


2) Disconnect rear oxygen sensor connector.

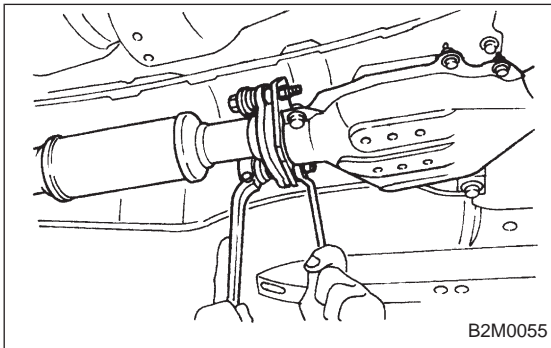

3) Separate center exhaust pipe and rear catalytic converter assembly from rear exhaust pipe.

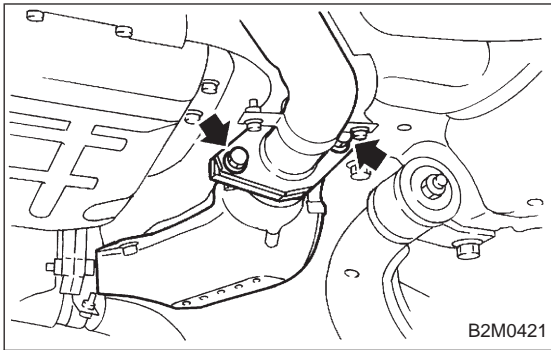


4) Separate center exhaust pipe and rear catalytic converter assembly from front catalytic converter.

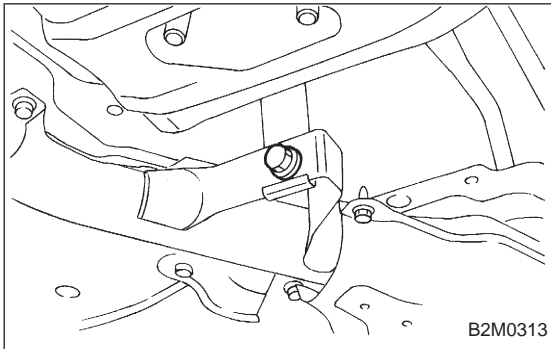

5) Remove center exhaust pipe and rear catalytic converter assembly from hanger bracket.

CAUTION:

- Be careful not to pull down center exhaust pipe.
- After removing center exhaust pipe, do not apply excessive pulling force on front catalytic converter and front exhaust pipe.

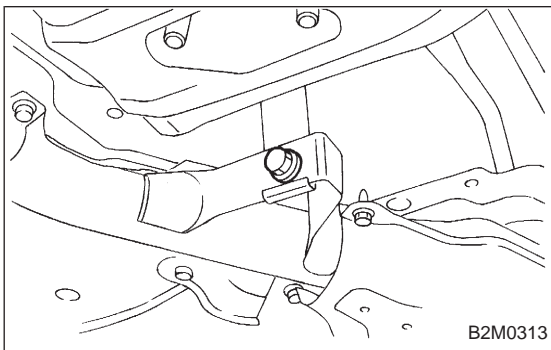


B: INSTALLATION

CAUTION:

Replace gaskets with new ones.

1) Install center exhaust pipe and rear catalytic converter assembly.


Temporarily tighten bolt which installs center exhaust pipe to hanger bracket.

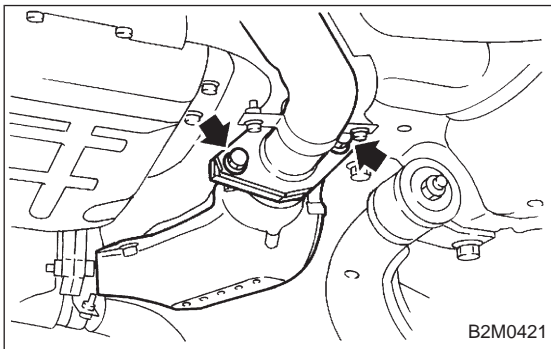

2) Install center exhaust pipe to front catalytic converter.

Tightening torque:


35 ± 5 N·m (3.6 ± 0.5 kg·m, 26.0 ± 3.6 ft·lb)

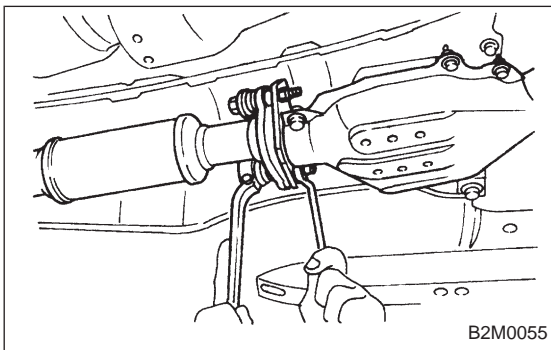

3) Install center exhaust pipe to rear exhaust pipe.

Tightening torque:


18 ± 5 N·m (1.8 ± 0.5 kg·m, 13.0 ± 3.6 ft·lb)

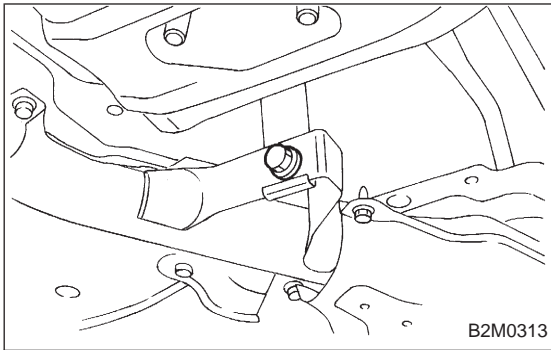


4) Tighten bolt which holds center exhaust pipe to hanger bracket.

Tightening torque:

35 ± 5 N·m (3.6 ± 0.5 kg-m, 26.0 ± 3.6 ft-lb)

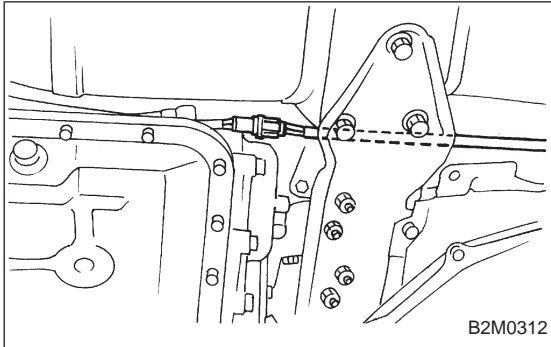

5) Connect rear oxygen sensor connector.

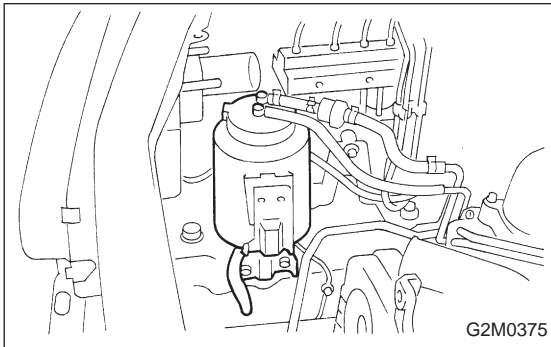

3. Canister


A: REMOVAL AND INSTALLATION

- 1) Disconnect canister hoses from evaporation pipes.
- 2) Remove canister with bracket.

3) Installation is in the reverse order of removal.

CAUTION:

Insert air vent hose of canister into the hole on body.

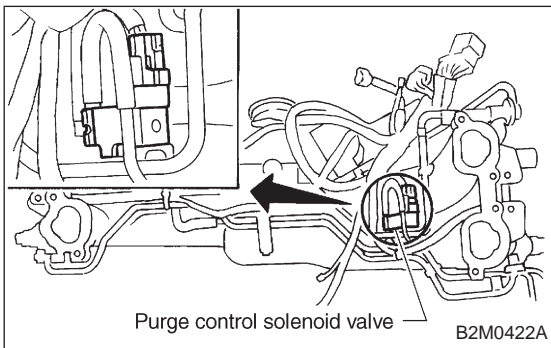

Purge control solenoid valve

B2M0422A

4. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION

- 1) Remove bolt which installs purge control solenoid valve onto intake manifold.

NOTE:

This figure shows the rear side of intake manifold.