



7. EGR Solenoid Valve

A: REMOVAL AND INSTALLATION

- 1) Remove bolt which installs EGR solenoid valve onto intake manifold.
- 2) Disconnect hoses and connector from EGR solenoid valve.

NOTE:

This figure shows the rear side of intake manifold.

- 3) Installation is in the reverse order of removal.

Tightening torque:

19 ± 5 N·m (1.9 ± 0.5 kg·m, 13.7 ± 3.6 ft·lb)