



5) Tighten bolt which holds center exhaust pipe to hanger bracket.

Tightening torque:


35±5 N·m (3.6±0.5 kg-m, 26.0±3.6 ft-lb)

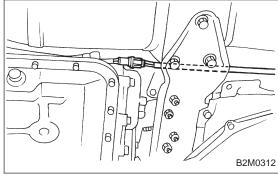

6) Connect rear oxygen sensor connector.

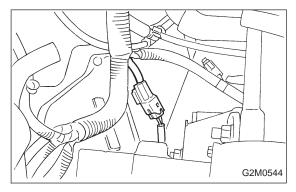


- 7) Lower the vehicle.
- 8) Connect front oxygen sensor connector.

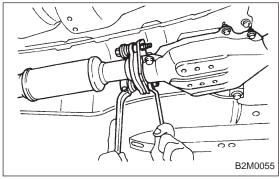

2. Rear Exhaust Pipe

A: REMOVAL

1) Separate rear exhaust pipe from center exhaust pipe.

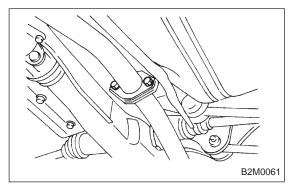


2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.


1. Front Exhaust Pipe and Center Exhaust Pipe - 2. Rear Exhaust Pipe

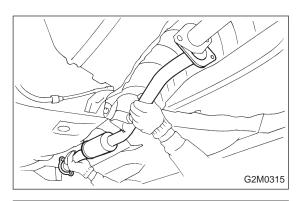

3) Remove rear exhaust pipe bracket from rubber cushion. NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to pipe bracket in advance.

SUBARU CRC (Part No. 004301003)

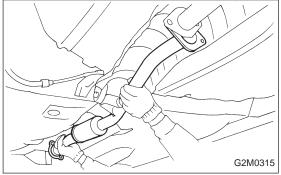

B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

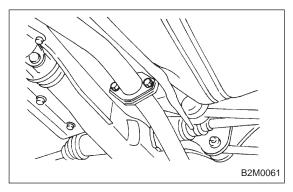

2) Install rear exhaust pipe to muffler.

Tightening torque:

48±5 N m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

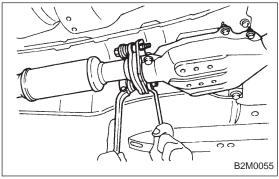

3) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:

18±5 N·m (1.8±0.5 kg-m, 13.0±3.6 ft-lb)