



- 16) Connect accelerator cable ①.
- 17) Connect cruise control cable ②. (With cruise control model)

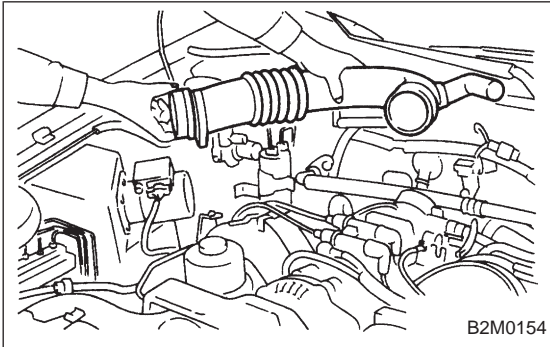


- 18) Install air cleaner element, air cleaner upper cover and air intake duct.
- 19) Connect connector to mass air flow sensor.

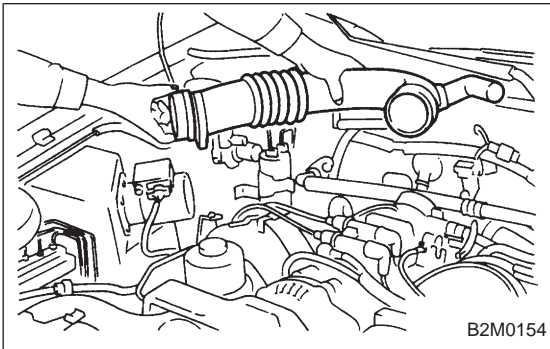


## 5. Engine Coolant Temperature Sensor

### A: REMOVAL AND INSTALLATION

- 1) Remove air intake duct.

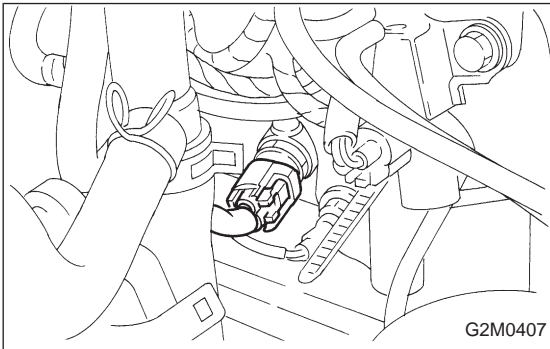

- 2) Disconnect connector from engine coolant temperature sensor.
- 3) Remove engine coolant temperature sensor.

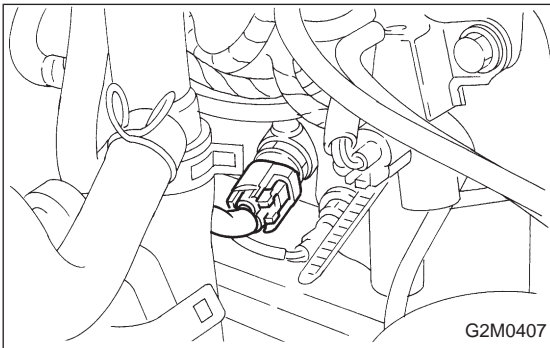

- 4) Installation is in the reverse order of removal.

#### **Tightening torque:**

**25±3 N·m (2.5±0.3 kg·m, 18.1±2.2 ft·lb)**