




## 3. Fuel Tank - 4. Fuel Filler Pipe

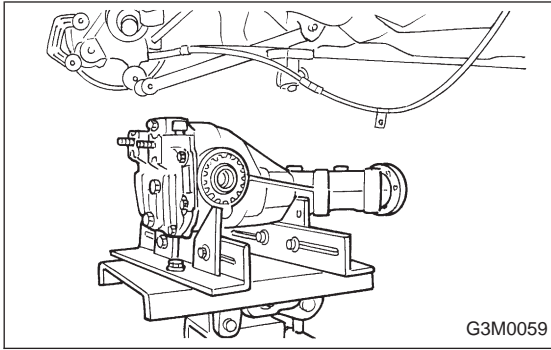


6) Install rear differential assembly. <Ref. to 3-4 [W2F0].>

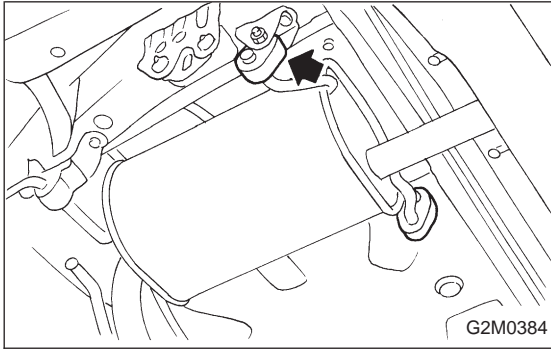


7) Install muffler assembly.

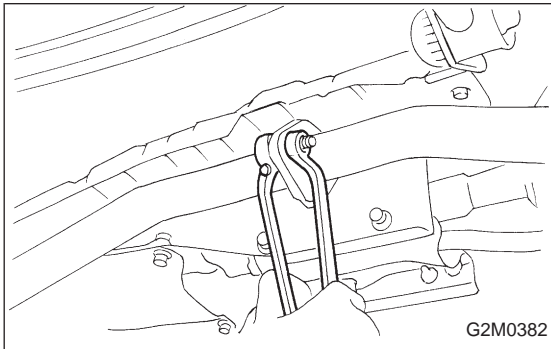

8) Install heat sealed cover.  
9) Install rear exhaust pipe.

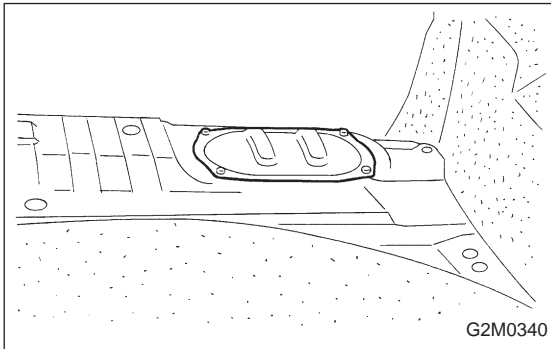


10) Lower the vehicle, and connect connector to fuel pump.  
11) Install access hole lid.

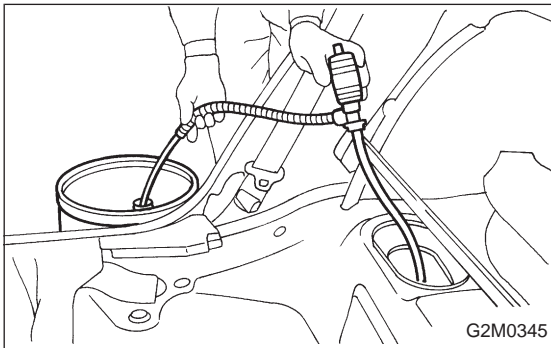


## 4. Fuel Filler Pipe

### A: REMOVAL


- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Drain fuel from fuel tank. <Ref. to 2-8 [W1B0].>

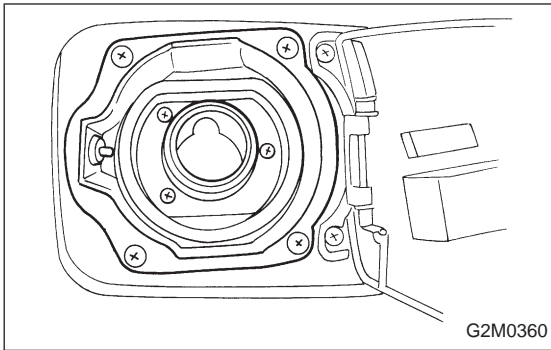


- 3) Remove right rear wheel.
- 4) Open fuel filler flap and remove filler cap.
- 5) Remove screws holding packing in place.

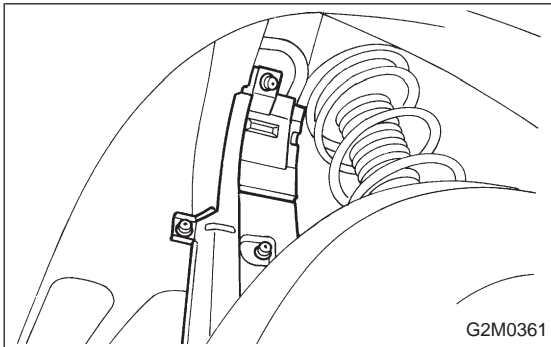

- 6) Lift-up the vehicle.
- 7) Remove fuel filler pipe protector.

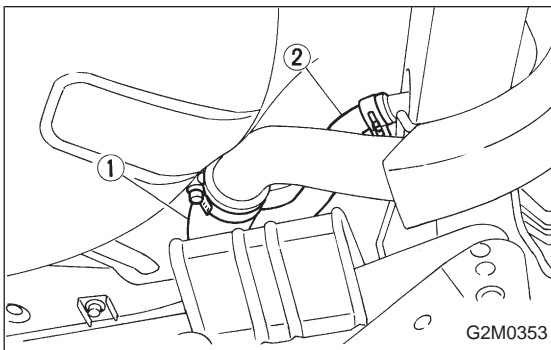

- 8) Remove clip, and separate air vent hose from pipe.
  - 9) Loosen clamp, and separate fuel filler hose from pipe.
- ① Fuel filler hose
  - ② Air vent hose
- 10) Remove fuel filler pipe to under side of the vehicle.

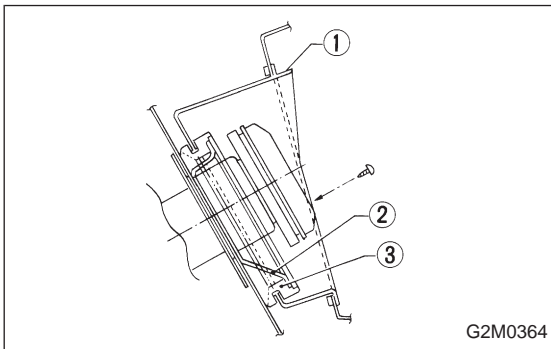


### B: INSTALLATION

- 1) Hold fuel filler flap open.
- 2) Set fuel saucer ① with rubber packing ③, and insert fuel filler pipe into hole from the inner side of apron.
- 3) Align holes in fuel filler pipe neck and set cup ②, and tighten screws.

#### NOTE:

If edges of rubber packing are folded toward the inside, straighten it with a screwdriver.

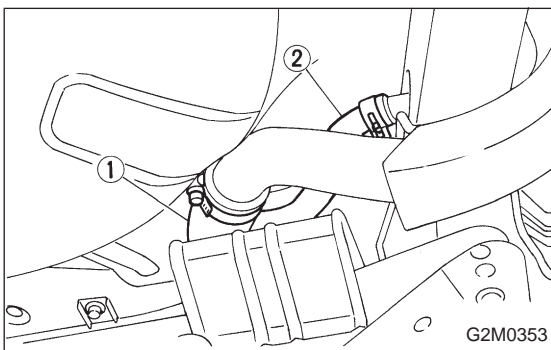


- 4) Insert fuel filler hose approximately 25 to 30 mm (0.98 to 1.18 in) over the lower end of fuel filler pipe and tighten clamp.

- ① Fuel filler hose
- ② Air vent hose

#### CAUTION:


**Do not allow clips to touch air vent hose and rear suspension crossmember.**

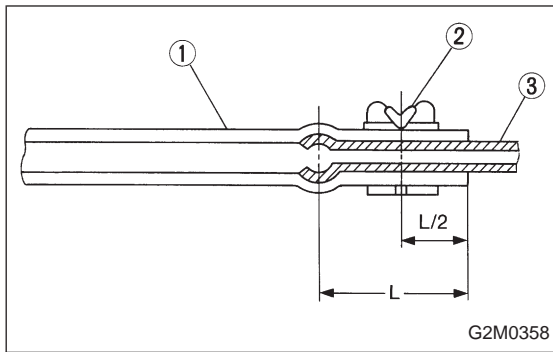

5) Insert air vent hose approximately 25 to 30 mm (0.98 to 1.18 in) into the lower end of air vent pipe and hold clip.

- ① Hose
- ② Clip
- ③ Pipe

$L = 25 - 30 \text{ mm (0.98 - 1.18 in)}$

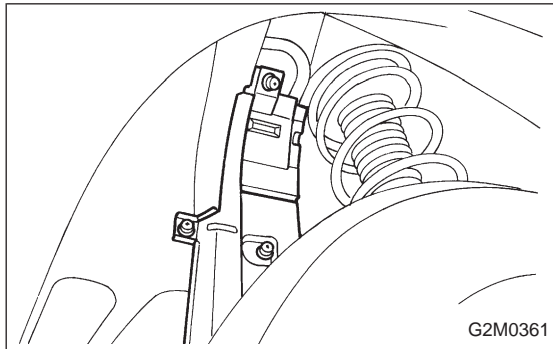


- 6) Install fuel filler pipe protector.
- 7) Install right rear wheel.

## 5. Fuel Filter

### A: REMOVAL

1) Release fuel pressure. <Ref. to 2-8 [W1A0].>

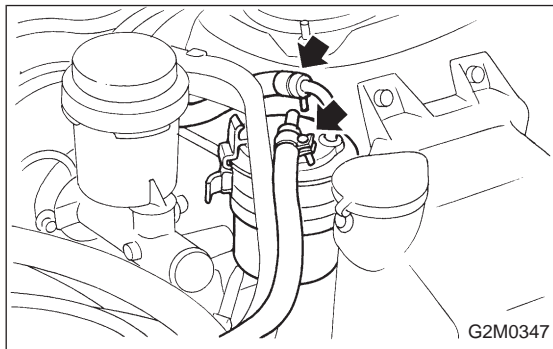

- 2) Disconnect fuel delivery hoses from fuel filter.
- 3) Remove filter from holder.

### B: INSPECTION

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if replacement interval has been reached, replace it.
- 3) If water is found in it, shake and expel the water from inlet port.