


5. Transmission Case, Transmission Cover and Control Device

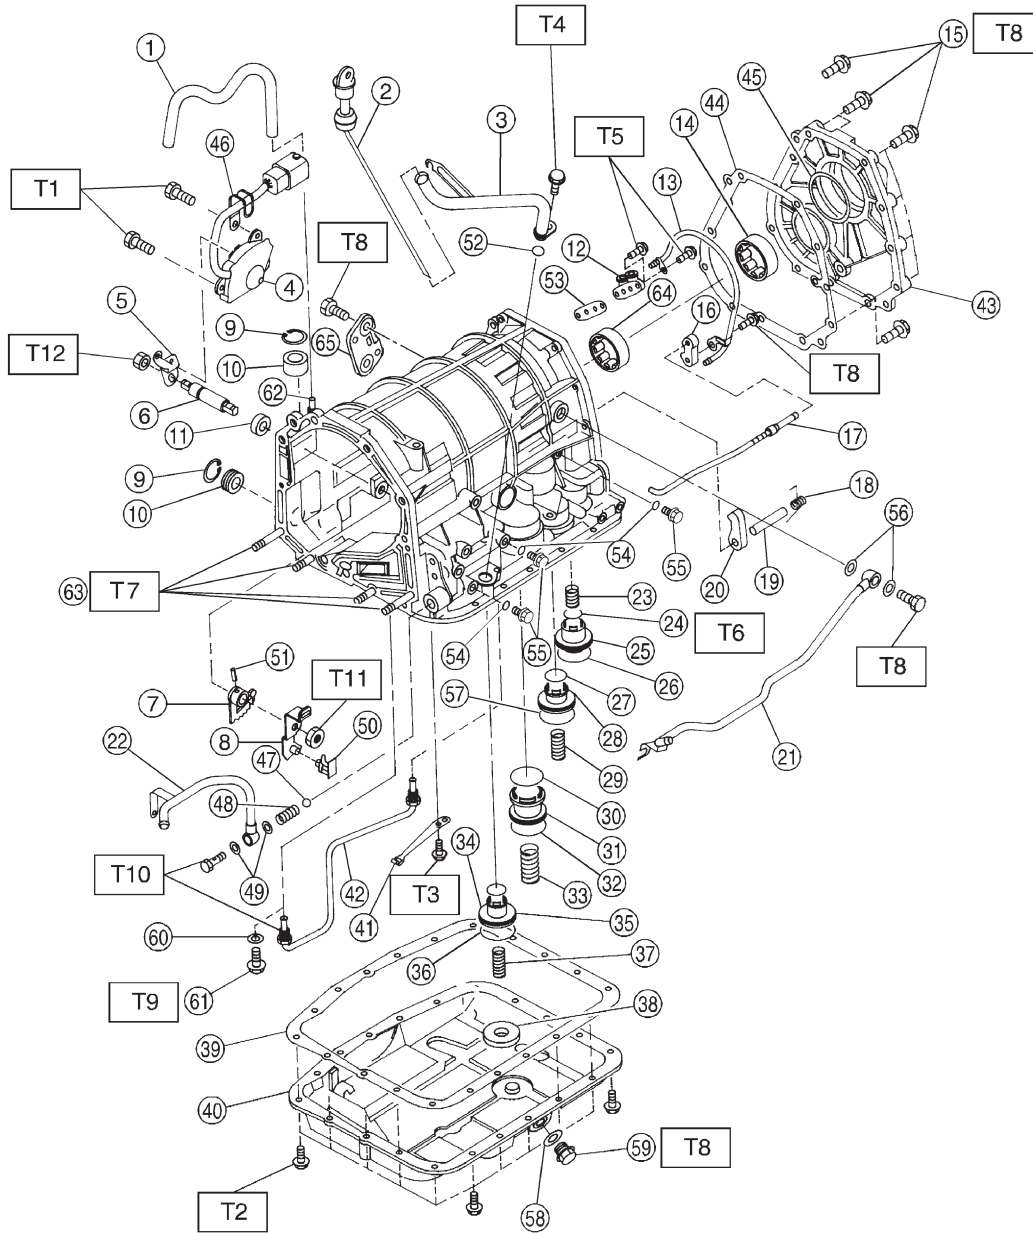

B3M0349A

① Air breather hose	④① Detention spring
② Oil level gauge	④② Pipe (AWD model)
③ Oil charger pipe	④③ Transmission cover (FWD model)
④ Inhibitor switch	④④ Gasket
⑤ Range select lever	④⑤ Shim
⑥ Manual shaft	④⑥ Clip
⑦ Manual plate	④⑦ Ball
⑧ Manual lever	④⑧ Spring
⑨ Snap ring	④⑨ Gasket
⑩ Plug	④⑩ Stopper
⑪ Oil seal	④⑪ Spring pin
⑫ Relief valve	④⑫ Gasket
⑬ Pipe	④⑬ Gasket
⑭ Roller bearing	④⑭ O-ring
⑮ Flange bolt	④⑮ Test plug
⑯ Parking support	④⑯ Gasket
⑰ Parking rod	④⑰ O-ring
⑱ Return spring	④⑱ Gasket
⑲ Shaft	④⑲ Drain plug
⑳ Parking pawl	④⑳ Gasket (FWD model)
㉑ Inlet pipe	④㉑ Plug (FWD model)
㉒ Outlet pipe	④㉒ Nipple
㉓ Spring	④㉓ Stud bolt
㉔ O-ring	④㉔ Ball bearing
㉕ Accumulator piston (N-D)	④㉕ Plate ASSY
㉖ O-ring	
㉗ O-ring	
㉘ Accumulator piston (2-3)	
㉙ Spring	
㉚ O-ring	
㉛ Accumulator piston (1-2)	
㉜ O-ring	
㉝ Spring	
㉞ O-ring	
㉟ Accumulator piston (3-4)	
㊱ O-ring	
㊲ Spring	
㊳ Magnet	
㊴ Gasket	
㊵ Oil pan	

Tightening torque: N·m (kg-m, ft-lb)

T1: 3.4±0.5 (0.35±0.05, 2.5±0.4)

T2: 4.9±0.5 (0.50±0.05, 3.6±0.4)

T3: 5.9±1.0 (0.60±0.10, 4.3±0.7)

T4: 6.4±0.5 (0.65±0.05, 4.7±0.4)

T5: 7.8±1.0 (0.80±0.10, 5.8±0.7)

T6: 12.7±1.0 (1.30±0.10, 9.4±0.7)

T7: 17.7±2.9 (1.80±0.30, 13.0±2.2)

T8: 24.5±2.0 (2.50±0.20, 18.1±1.4)

T9: 30.9±3.4 (3.15±0.35, 22.8±2.5)

T10: 34.3±2.9 (3.50±0.30, 25.3±2.2)

T11: 47.1±2.0 (4.80±0.20, 34.7±1.4)

T12: 47.1±4.9 (4.80±0.50, 34.7±3.6)
