


## 6. Diagnostics Chart for On-board Diagnosis System

### A: BASIC DIAGNOSTICS PROCEDURE

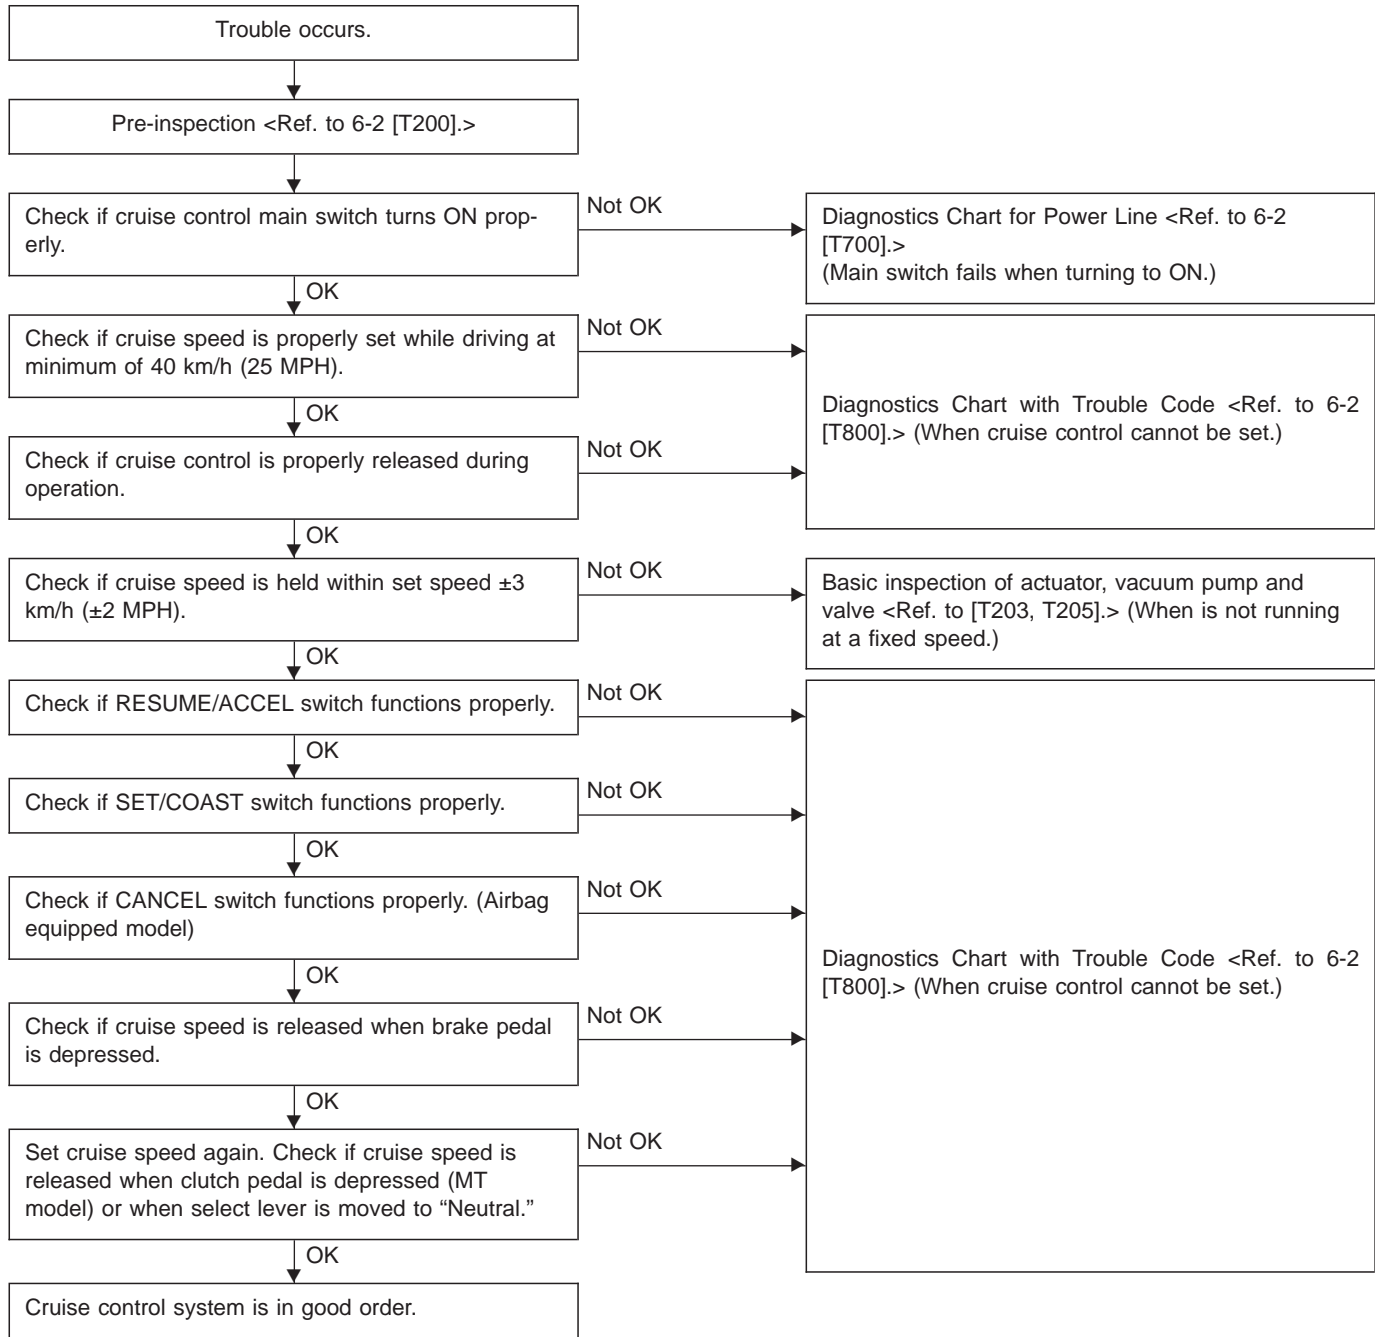

## B: ON-BOARD DIAGNOSIS WITH SELECT MONITOR

### 1. GENERAL

The on-board diagnosis function of the cruise control system uses an external select monitor.

The on-board diagnosis function operates in two categories, which are used depending on the type of problems;

- Cruise cancel conditions diagnosis
- Real-time diagnosis

**Applicable cartridge No.: 498349601**

- Cruise cancel conditions diagnosis

This category of diagnosis requires actual vehicle driving in order to determine the cause, (as when cruise speed is cancelled during driving although cruise cancel condition is not entered).



Cruise control module memory stores the cancel condition (Code No.) which occurred during driving. When there are plural cancel conditions (Code No.), they are shown in order, for 2 seconds per Code No., on the select monitor.

### CAUTION:

- The cruise control memory stores not only the cruise “cancel” which occurred (although “cancel” operation is not entered by the driver), but also the “cancel” condition input by the driver.
- The content of memory is cleared when ignition switch or cruise main switch is turned OFF.

- Real-time diagnosis

The real-time diagnosis function is used to determine whether or not the input of output signal system is in good order, according to signal emitted from switches, sensors, etc.

Vehicle cannot be driven at cruise speed because problems occurs in the cruise control system or its associated circuits.



Monitor the signal conditions from switches and sensors.

**2. CRUISE CANCEL CONDITIONS DIAGNOSIS**

- 1) Connect select monitor.
- 2) Start the engine and turn cruise control main switch to ON.
- 3) Set select monitor in "FB0" mode.
- 4) Drive vehicle at least 40 km/h (25 MPH) with cruise speed set.
- 5) If cruise speed is canceled itself (without doing any cancel operations), a trouble code will appear on select monitor display.

**CAUTION:**

- A trouble code will also appear when cruise cancel is effected by driver. Do not confuse.
- Have a co-worker ride in vehicle to assist in diagnosis during driving.

**NOTE:**

Trouble code will be cleared by turning ignition switch or cruise control main switch to OFF.

**3. REAL-TIME DIAGNOSIS**

- 1) Connect select monitor.
- 2) Turn ignition switch and cruise control main switch to ON.
- 3) Set select monitor in "FA0" mode.
- 4) Ensure that normal indication is displayed when controls are operated as indicated below:
  - When SET/COAST switch is pressed.
  - When RESUME/ACCEL switch is pressed.
  - When brake pedal is depressed. (Stop and brake switch turns ON.)
  - When clutch pedal is depressed. (MT model)
  - When select lever is set to N position. (AT model)