


Door locks

■ Locking and unlocking from the outside

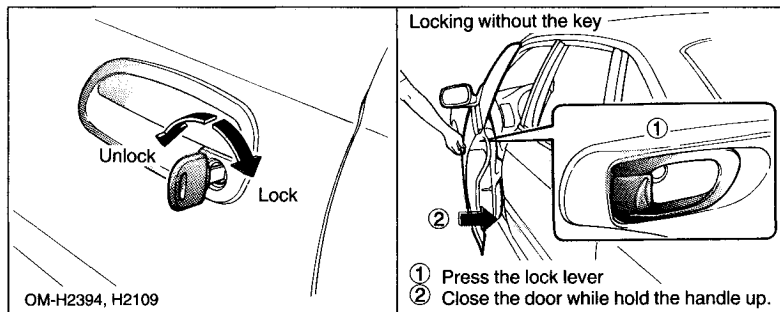

To lock the door from the outside with the key, turn the key toward the rear. To unlock the door, turn the key toward the front.

Lift the outside door handle to open an unlocked door.


To lock the front door from the outside without the key, press the end of the lock lever down on the door and hold the outside door handle up while closing the door.

To lock the rear door from the outside without the key, press the end of the lock lever down on the door and close the door.

NOTE

Make sure that you do not leave the key inside the vehicle when locking the doors from the outside without the key.

■ Locking and unlocking from the inside

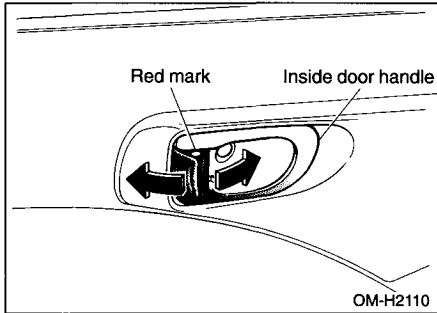


To lock the door from the inside, press the end of the lock lever down. To unlock the door from the inside, pull the front end of the lock lever.

The red mark on the lock lever appears when the door is unlocked.

Pull the inside door handle to open an unlocked door.

■ Child safety locks

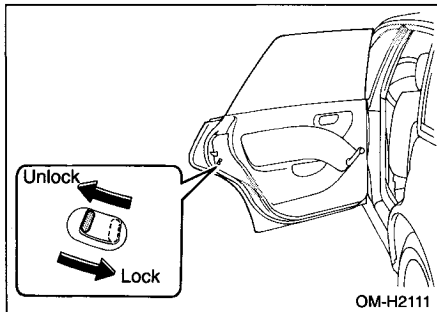


⚠ WARNING

Always use the child safety lock whenever a child rides in the rear seat. Serious injury could result if a child accidentally opened the door and fell out.

Each rear door has a child safety lock that prevents the doors from being opened even if the inside door handle is pulled.

When the child safety lock lever is in the lock position, the door cannot be opened from inside regardless of the lock position. The door can only be opened from the outside.

Power door locks (if equipped)

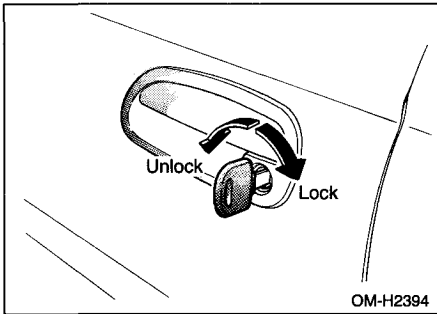

■ Locking and unlocking from the outside

All doors and the rear gate lock when the driver's door is locked with a key. And they unlock when it is unlocked with a key.

■ Locking and unlocking from the inside

All doors and the rear gate lock when the lock lever of the driver's door is locked. And they unlock when it is unlocked.

To lock the door from the inside, press the end of the lock lever down. To unlock the door from the inside, pull the end of the lock lever.

The driver's door can be unlocked and opened in one simple motion by pulling the inside driver's door handle.