


■ Combination meter

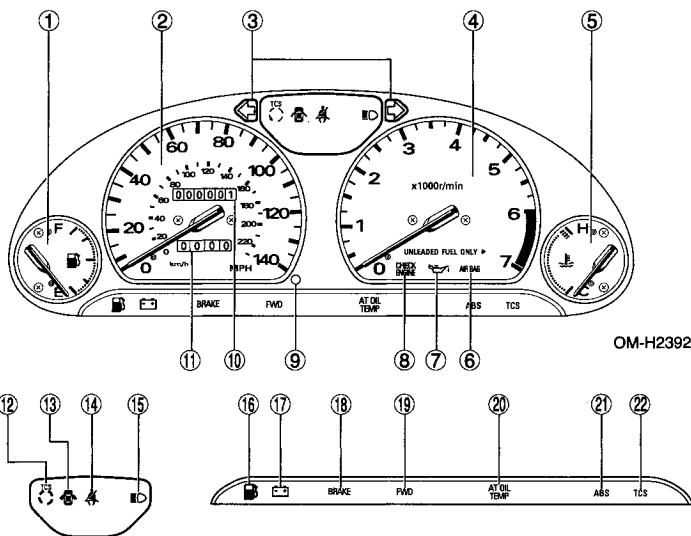

OM-H2392

OM-H2393

- | | |
|---|--|
| ① Fuel gauge (page 3-5) | ⑬ Door open warning light (page 3-10) |
| ② Speedometer (page 3-4) | ⑭ Seatbelt warning light (page 3-6) |
| ③ Turn signal indicator light (page 3-10) | ⑮ High beam indicator light (page 3-10) |
| ④ Tachometer (page 3-4) | ⑯ Low fuel warning light (page 3-10) |
| ⑤ Temperature gauge (page 3-5) | ⑰ Charge warning light (page 3-7) |
| ⑥ SRS AIRBAG warning light (page 3-6) | ⑱ Brake system warning light (page 3-7) |
| ⑦ Oil pressure warning light (page 3-7) | ⑲ Front-wheel drive warning light (page 3-10) |
| ⑧ CHECK ENGINE warning light/Malfunction indicator light (page 3-8) | ⑳ AT oil temperature warning light (page 3-10) |
| ⑨ Trip meter reset knob (page 3-4) | ㉑ ABS warning light (page 3-8) |
| ⑩ Odometer (page 3-4) | ㉒ TCS warning light (page 3-9) |
| ⑪ Trip meter (page 3-4) | |
| ⑫ TCS indicator light (page 3-9) | |