 


Hazard warning flasher

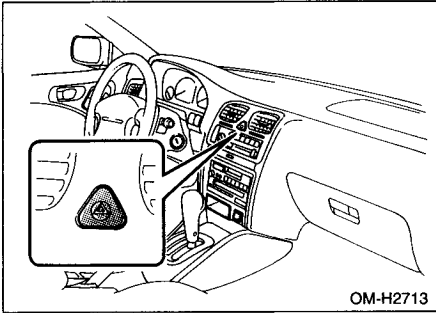

The hazard warning flasher is used to warn other drivers.

Push the hazard warning button to turn on the hazard warning flasher. To turn off the flasher, push the button again. The hazard warning flasher works with the ignition switch in any position.

NOTE

 
When the hazard warning flasher is on, the turn signals do not work.

Light control

■ Light switch

WARNING

To prevent battery discharge resulting from accidentally leaving your lights on when your vehicle is parked, the light switch operates only when the ignition switch is in the “ON” position. In any other position, the vehicle’s lights will be out.

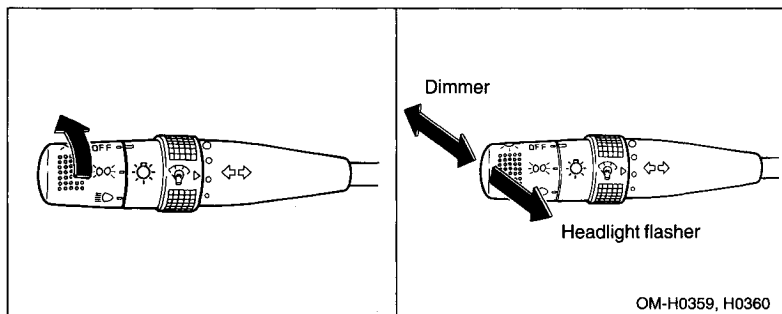

The light switch operates only when the ignition switch is in the "ON" position.

▼ Headlights

To turn on the headlights, turn the knob on the end of the turn signal lever.

 first position

Position lights, instrument panel illumination, tail lights and license plate light are on.

 second position

Headlights, position lights, instrument panel illumination, tail lights, and license plate light are on.

▼ High/low beam change (dimmer)

To change from low beam to high beam, push the turn signal lever forward. When the headlights are on high beam, the high beam indicator light is also on.

To switch back to low beam, pull the lever back.

▼ Headlight flasher



CAUTION

Do not hold the lever in the flashing position for more than just a few seconds.

To flash the headlights, pull the lever toward you and then release it. The high beam will stay on for as long as you hold the lever. The headlight flasher works even though the lighting switch is in the "OFF" position.

When the headlights are on high beam, the high beam indicator light also comes on.

▼ **Daytime running light system (for CANADA models)**

 
! WARNING

The tail lights, parking lights, and side marker lights are not turned on by the daytime running light system. The light switch must always be turned to the "ON" position when it is dark outside.

The low beam headlights will automatically come on at reduced brightness when the engine has started, under the following conditions:

- The parking brake is fully released.
- The automatic transmission selector lever is set at other than the "P" position.
- The light switch is in the "OFF" position.


▼ **Turn signal**

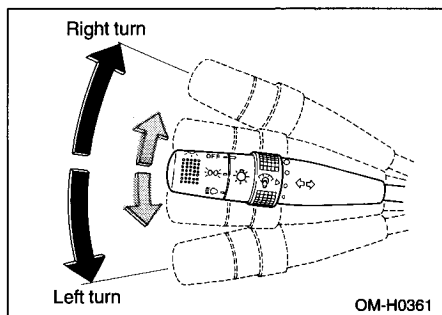



To activate the right turn signal, push the turn signal lever up. To activate the left turn signal, push the turn signal lever down. When the turn is finished, the lever will return automatically.


To signal a lane change, push the turn signal lever up or down slightly and hold it during lane change. The turn signal indicator lights will flash in the direction of the turn or lane change. The lever will return automatically to the neutral position when you release it.

  ■ Illumination brightness control

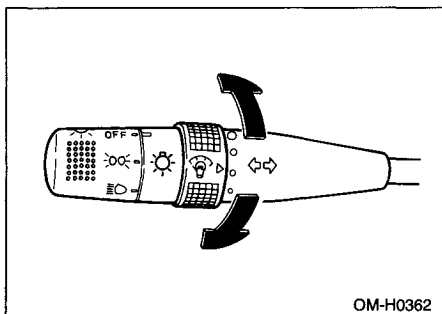

When the lighting switch is in the “ ” or “ ” position, turn the dial to adjust the brightness of the instrument panel illumination.

 ■ Position light switch

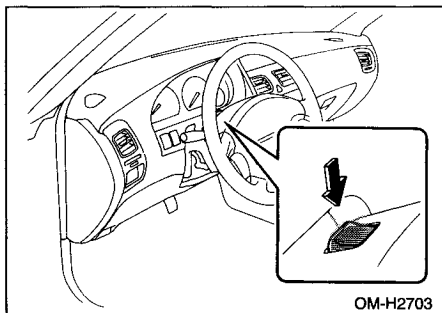


The position light switch operates regardless of the ignition switch position.

Push the rear end of the position light switch to turn on the position lights, tail lights and licence plate lights. To turn off the position lights, push the front end of the position light switch. Avoid leaving these lights on for a long time because that will run down the battery.

■ **Fog light switch (if equipped)**

 The fog lights operate only when the light switch is in the "☰☷☷" position. Push the fog light switch to turn the fog lights on. Press the switch again to turn them off.

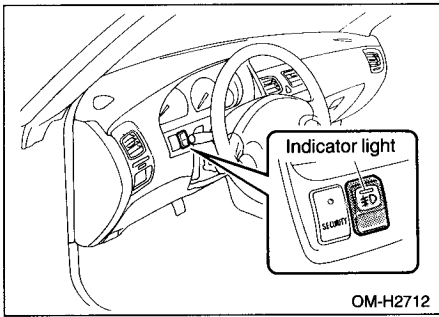

OM-H2712

The indicator light located on the switch will illuminate when the fog lights are on.