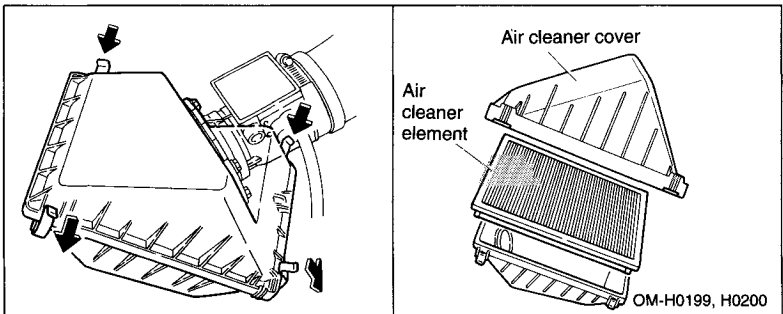

Air cleaner element

The air cleaner element functions as a filter screen. When the element is perforated or removed, engine wear will be excessive and engine life shortened.

The air cleaner element is a viscous type. It is unnecessary to clean or wash the element.

■ Replacing the air cleaner element

Replace the air cleaner element according to the maintenance schedule in the warranty and maintenance booklet. Under extremely dusty conditions, replace it more frequently. It is recommended that you always use genuine SUBARU parts.



1. Unsnap the four clamps holding the air cleaner element cover.
2. Remove the air cleaner cover.
3. Clean the inside of the air cleaner cover with a damp cloth.
4. Replace the old air cleaner element with a new one.
5. Reinstall the air cleaner cover and snap on the four clamps.