
Spark plugs

■ Replacing the spark plugs



CAUTION

- When disconnecting the spark plug cables, always grasp the spark plug cap, not the cables.
- Make sure the cables are replaced in the correct order.

Replace the spark plugs according to the maintenance schedule in the warranty and maintenance booklet.

■ Recommended spark plugs

2.2 Liter models

RC10YC4 (Champion)

[Alternate]

BKR6E-11 (NGK), K20PR-U11 (NIPPON DENSO)


2.5 Liter models

PFR5B-11 (NGK)

Drive belts

■ Inspection

The alternator, power steering pump, and air conditioner compressor depend on drive belts. Satisfactory performance requires that belt tension be correct.

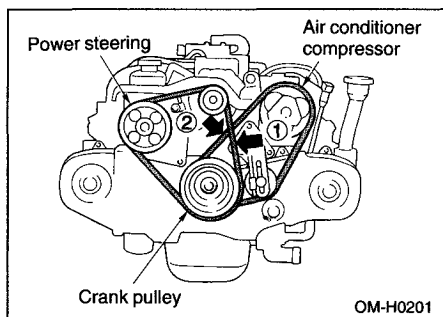

in. (mm)

	Deflection	
	New belt	Used belt
①	0.28 — 0.35 (7.0 — 9.0)	0.35 — 0.43 (9.0 — 11.0)
②	0.30 — 0.33 (7.5 — 8.5)	0.35 — 0.40 (9.0 — 10.0)

To check belt tension, place a straightedge (ruler) across two adjacent pulleys and apply a force of 98 N (22 lb, 10 kg) midway between the pulleys by using a spring scale. Belt deflection should be the amount specified. If a belt is loose, cracked, or worn, contact your SUBARU dealer.

Manual transmission oil

■ Checking the oil level

Check the oil level monthly.

1. Park the vehicle on a level surface and stop the engine.