

Installation of accessories

Always consult your SUBARU dealer before installing fog lights or any other electrical equipment in your vehicle. Such accessories may cause the electronic system to malfunction if they are incorrectly installed or if they are not suited for the vehicle.


Checking the headlight aim

Before checking of the headlight aim:


1. Set the light switch to OFF position. Be sure that the area around the headlights has not sustained any accident damage or other type of deformation.
2. Park the vehicle on level ground and remove any heavy objects from the cargo area of the vehicle.
3. Check the tires for correct inflation pressure.
4. Make certain that the vehicle's gas tank is full and that someone is seated in the driver's seat.
5. Bounce the vehicle several times to normalize the suspension.

■ To check the headlight aim

To check the headlight aim, check the vertical and horizontal gauges.

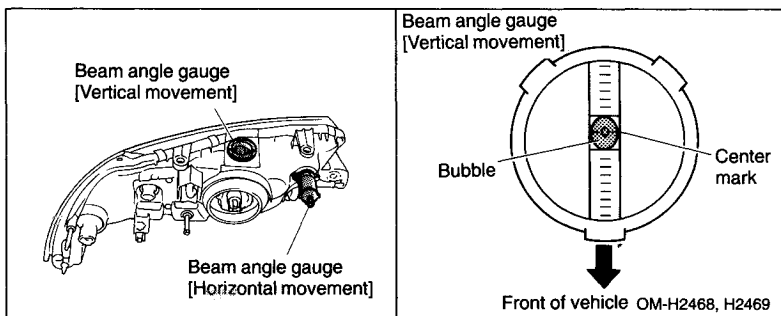

1. Look at the beam angle gauge (vertical movement). The bubble on the gauge should not deviate from the center of the gauge by more than four segments on either side of the gauge.

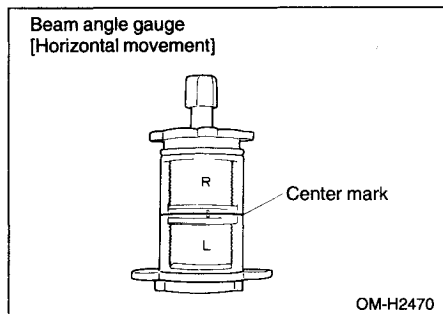

2. Look at the beam angle gauge (horizontal movement). The center mark should not deviate from the line on the outer case by more than two segments on either side of the gauge.

If the beam angle gauge deviates from the center, take the vehicle to your SUBARU dealer for adjustment of the headlight aim.