
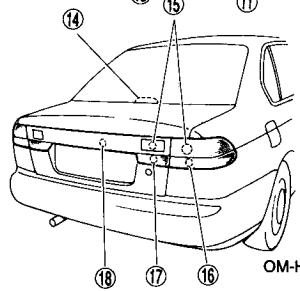
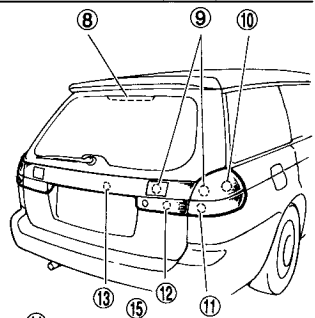
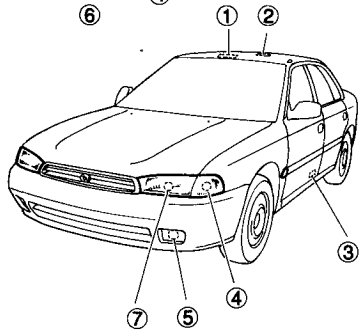


# Replacing bulbs

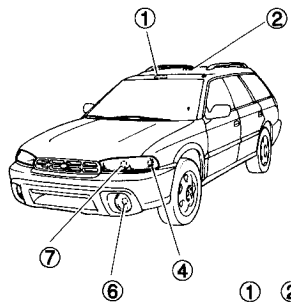

OM-H2746


- ① Spot light
- ② Room light
- ③ Step light
- ④ Front turn signal, parking light and front side marker light
- ⑤ Fog light
- ⑥ Fog light (OUTBACK models)
- ⑦ Headlight
- ⑧ High mount stop light
- ⑨ Brake/tail light
- ⑩ Rear side marker light
- ⑪ Rear turn signal light
- ⑫ Backup light
- ⑬ License plate light
- ⑭ High mount stop light
- ⑮ Brake/tail light
- ⑯ Rear turn signal light
- ⑰ Back-up light
- ⑱ License plate light

| Wattate           | Bulb No.   |
|-------------------|------------|
| (12V-8W)          | —          |
| (12V-8W)          | —          |
| (12V-3.4W)        | —          |
| (12V-27/8W Amber) | 1157NA     |
| (12V-55W)         | H3         |
| (12V-55W)         | 9006       |
| (12V-60/55W)      | HB2 (H4)   |
| (12V-13W)         | 912        |
| (12V-27/8W)       | 1157       |
| (12V-5W)          | 168        |
| (12V-27W)         | 1156       |
| (12V-27W)         | 1156       |
| (12V-3.8W or 5W)  | 194 or 168 |
| (12V-18W)         | 921        |
| (12V-27/8W)       | 1157       |
| (12V-27W)         | 1156       |
| (12V-27W)         | 1156       |
| (12V-27W)         | 1156       |
| (12V-3.8W or 5W)  | 194 or 168 |

## ■ Headlight

### CAUTION

Halogen headlight bulbs become very hot while in use. If you touch the bulb surface with bare hands or greasy gloves, finger prints or grease on the bulb surface develop into hot spots, causing the bulb to break. If there are finger prints or grease on the bulb surface, wipe them away with a soft cloth moistened with alcohol.

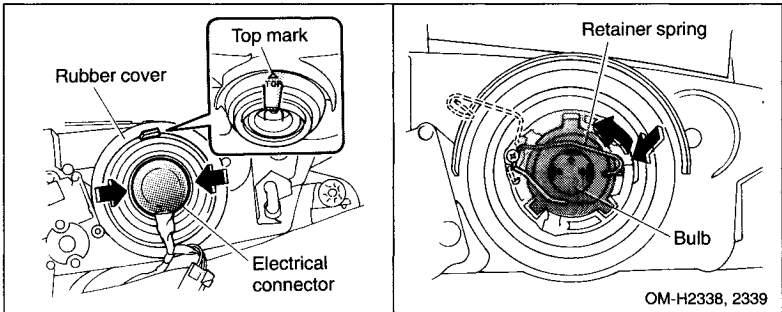


1. Disconnect the electrical connector, then remove the rubber cover.
2. Remove the retainer spring.
3. Replace the bulb, then set the retainer spring securely.
4. Install the rubber cover with the top mark facing up, then reconnect the electrical connector.

– CONTINUED –


■ Front fog light (except OUTBACK models – if equipped)

**⚠ CAUTION**

Halogen light bulbs become very hot while in use. If you touch the bulb surface with bare hands or greasy gloves, finger prints or grease on the bulb surface develop into hot spots, causing the bulb to break. If there are finger prints or grease on the bulb surface, wipe them away with a soft cloth moistened with alcohol.

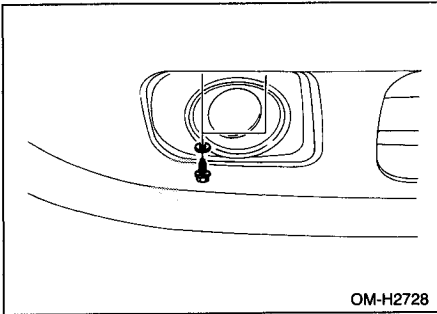

1. Remove the front fog light assembly by removing the two bolts.
2. Disconnect the connector.
3. Remove the front fog light case cap by turning it counterclockwise.

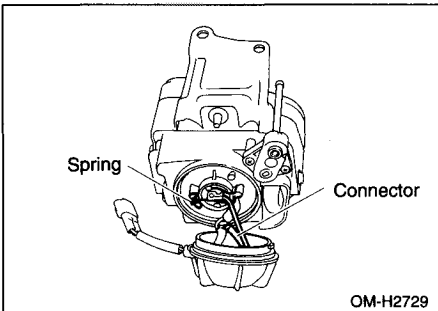


4. Disconnect the connector behind the case cap.
5. Release the retainer spring.
6. Replace the bulb with a new one. Then reconnect the connectors and reinstall the removed parts in the reverse order of removal.

■ Front fog light (OUTBACK models)

**⚠ CAUTION**


Halogen light bulbs become very hot while in use. If you touch the bulb surface with bare hands or greasy gloves, finger prints or grease on the bulb surface develop into hot spots, causing the bulb to break. If there are finger prints or grease on the bulb surface, wipe them away with a soft cloth moistened with alcohol.

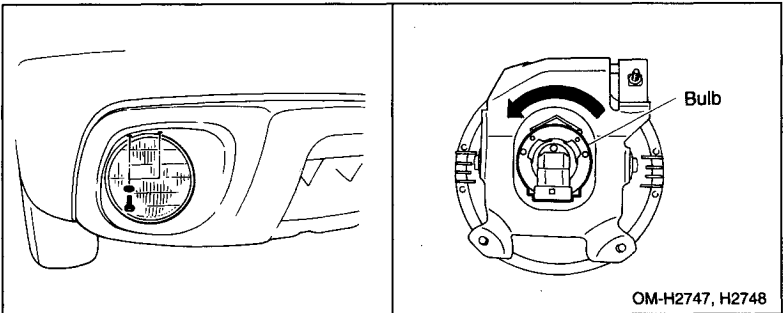

1. Remove the front fog light assembly by removing the two bolts.
2. Disconnect the connector.
3. Remove the front fog light bulb by turning it counterclockwise.
4. Replace the bulb with a new one. Then reconnect the connectors and reinstall the removed parts in the reverse order of removal.


## ■ Front turn signal, parking light and front side marker light

1. Remove the front grille.

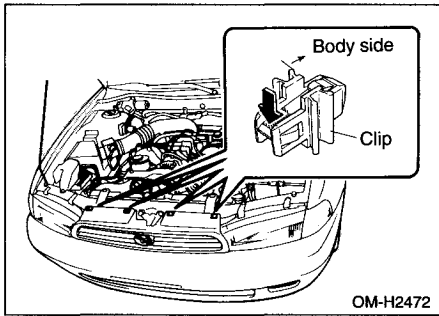

(1) Remove the four upper clips from radiator panel. To facilitate removal, press the portion shown in the illustration using screwdriver.

(2) Pull front grill to detach it from two lower clips. (Two lower clips remain on radiator panel.)

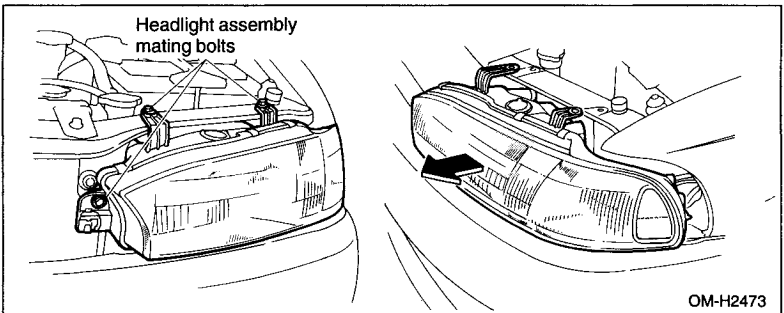

2. Remove the three headlight assembly mounting bolts then move the headlight assembly forward until it pops out from the fender.



3. Remove the bulb holder from the headlight assembly by turning it counterclockwise.

4. Pull the bulb out of the socket. Install a new bulb.

5. Set the bulb holder into the headlight assembly and turn it clockwise until it locks.

6. Set the headlight assembly into the fender. Tighten the mounting bolts.
7. Set the front grille.
  - (1) Attach all clips to the grille. Align them with clip holes in the radiator panel and push the grille into place.

■ **Rear combination lights**

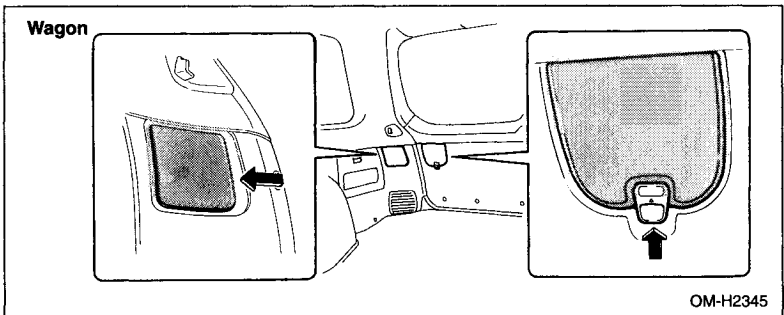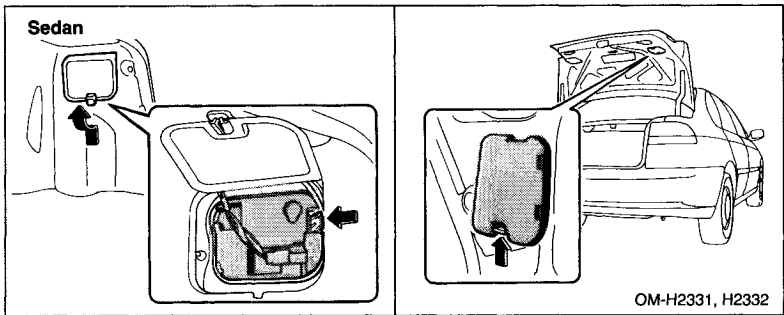


1. Unlatch the rear combination light cover by pulling the knob. Open the cover up.
2. Remove the bulb holder from the rear combination light assembly by turning it counterclockwise.
3. Remove the bulb from the socket by pushing it and turning counterclockwise. Install a new bulb.

**- CONTINUED -**


4. Set the bulb holder into the rear combination light assembly and turn it clockwise until it locks.
5. Close the cover and latch the lock.

### ■ License plate light

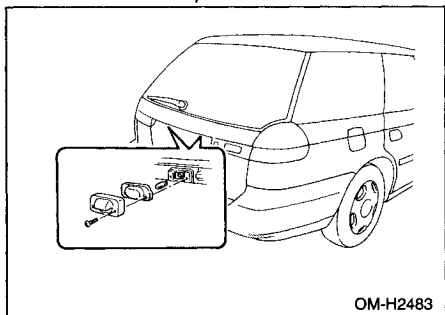

1. Remove the mounting screws using a phillips screwdriver.
2. Remove the cover and lens.
3. Pull the bulb out of the socket. Install a new bulb.
4. Reinstall the lens and cover.
5. Tighten the mounting screws.


■ Interior light, spot light, luggage compartment light and step light

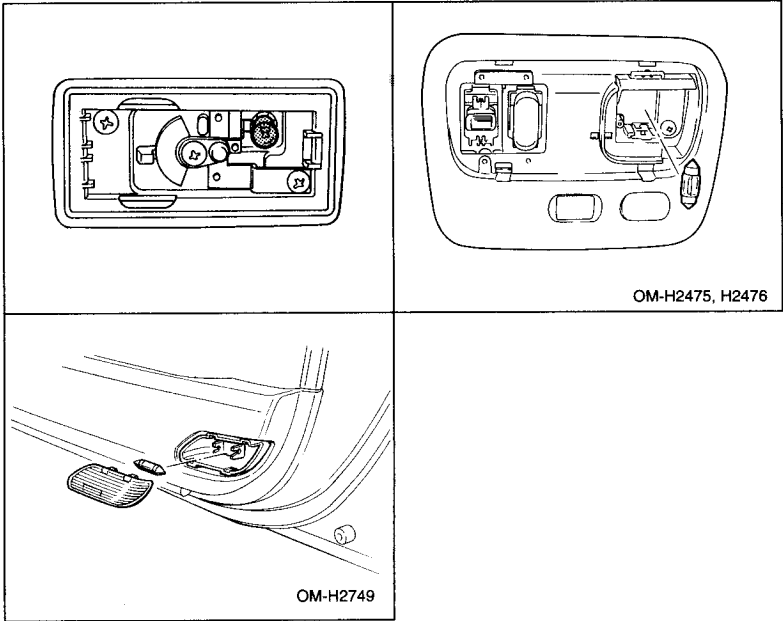

1. Remove the lens by prying the edge of the lens with a regular screwdriver.
2. Pull the bulb out of the socket. Install a new bulb.
3. Reinstall the lens.





## ■ Trunk light

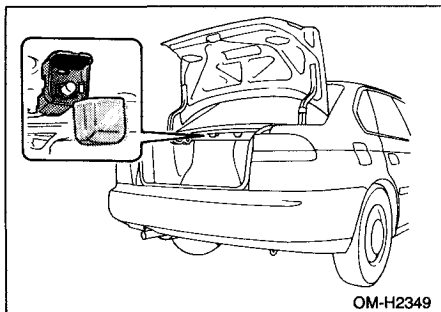

1. Remove the cover by pulling it out.
2. Pull the bulb out of the socket. Install a new bulb.
3. Reinstall the cover.

## ■ High mount stop light

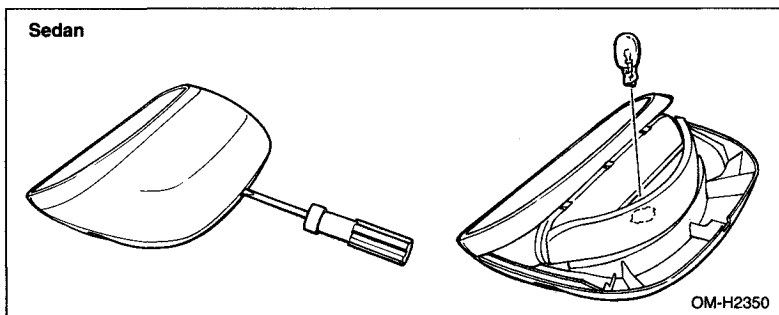

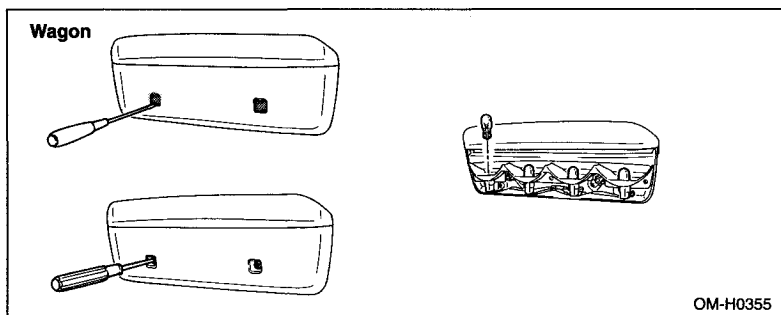

▼ Sedan

1. Remove the high mount stop light cover by prying on the edge with a screwdriver.
2. Pull the bulb out of the socket. Install a new bulb.
3. Reinstall the cover.

▼ Wagon

1. Remove the mounting screw covers by prying on the edge with a screwdriver.
2. Remove the mounting screws using a phillips screwdriver and then remove the high mount stop light cover.
3. Pull the bulb out of the socket. Install a new bulb.
4. Reinstall the cover.
5. Tighten the mounting screws then reinstall the covers.

**NOTE**

Other bulbs may be difficult for owner to replace. Have your SUBARU dealer replace these bulbs if necessary.