


Fuses and circuits

■ Fuse panel located under the dashboard

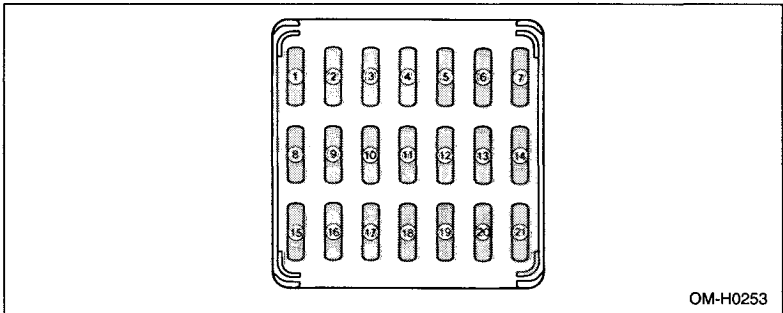


OM-H0253

Fuse panel	Fuse rating	Circuit
1	15A	<ul style="list-style-type: none">● Back-up light● Turn signal light
2	20A	<ul style="list-style-type: none">● Windshield wiper and washer
3	20A	<ul style="list-style-type: none">● Accessory socket● Remote controlled rear view mirrors
4	15A	<ul style="list-style-type: none">● Seat heater
5	10A	<ul style="list-style-type: none">● Tail light (right side)
6	15A	<ul style="list-style-type: none">● Front fog light
7	20A	<ul style="list-style-type: none">● Rear window defogger
8	15A	<ul style="list-style-type: none">● SRS AIRBAG
9	10A	<ul style="list-style-type: none">● Illumination brightness control
10	Empty	

Fuse panel	Fuse rating	Circuit
11	20A	● Power door lock
12	20A	● Brake light ● Horn
13	20A	● Cooling fan
14	10A	● Automatic transmission control unit
15	10A	● Meter ● AIRBAG indicator light
16	15A	● Engine ignition system ● SRS AIRBAG
17	15A	● Radio
18	10A	● Cruise control ● ABS control
19	20A	● ABS solenoid
20	15A	● Heater fan
21	15A	● Heater fan

■ Fuse panel located in the engine compartment

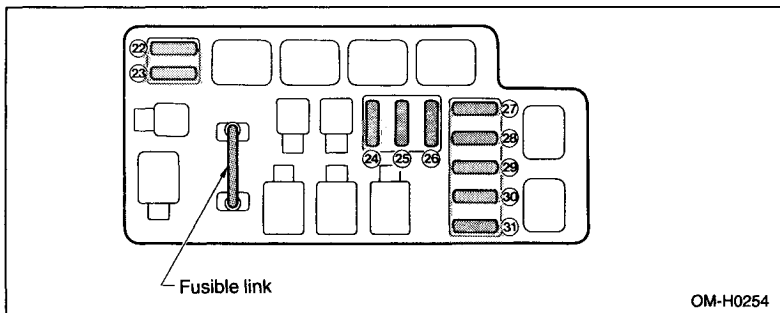

Fuse panel	Fuse rating	Circuit
22	20A	● Cooling fan
23	10A	● Air conditioner
24	Spare	(Not used)
25	Spare	(Not used)
26	Spare	(Not used)
27	15A	● Hazard warning flasher
28	20A	● Lighting switch
29	15A	● Headlight (left side)
30	15A	● Clock ● Interior light
31	15A	● Headlight (right side)