



1. SRS Airbag System
1. INSTALLATION

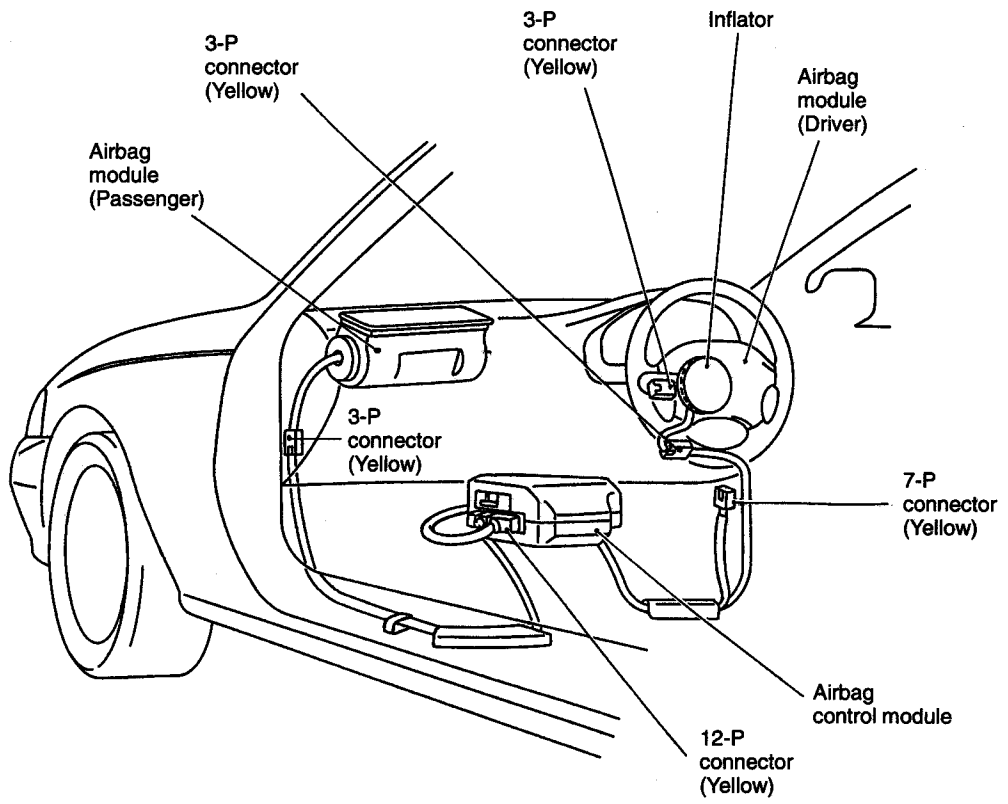

B5H0431A

2. FUNCTION

The SRS airbag is provided as an auxiliary driver and passenger front seat restraint system to be used in combination with the seat belt. When an impact greater than a set level is applied to the front of the vehicle, the sensor senses it and generates an electrical pulse to inflate the bag in the airbag module, thus preventing the upper bodies of the driver and passenger in the front seat from impacting the steering wheel, instrument panel and windshield.

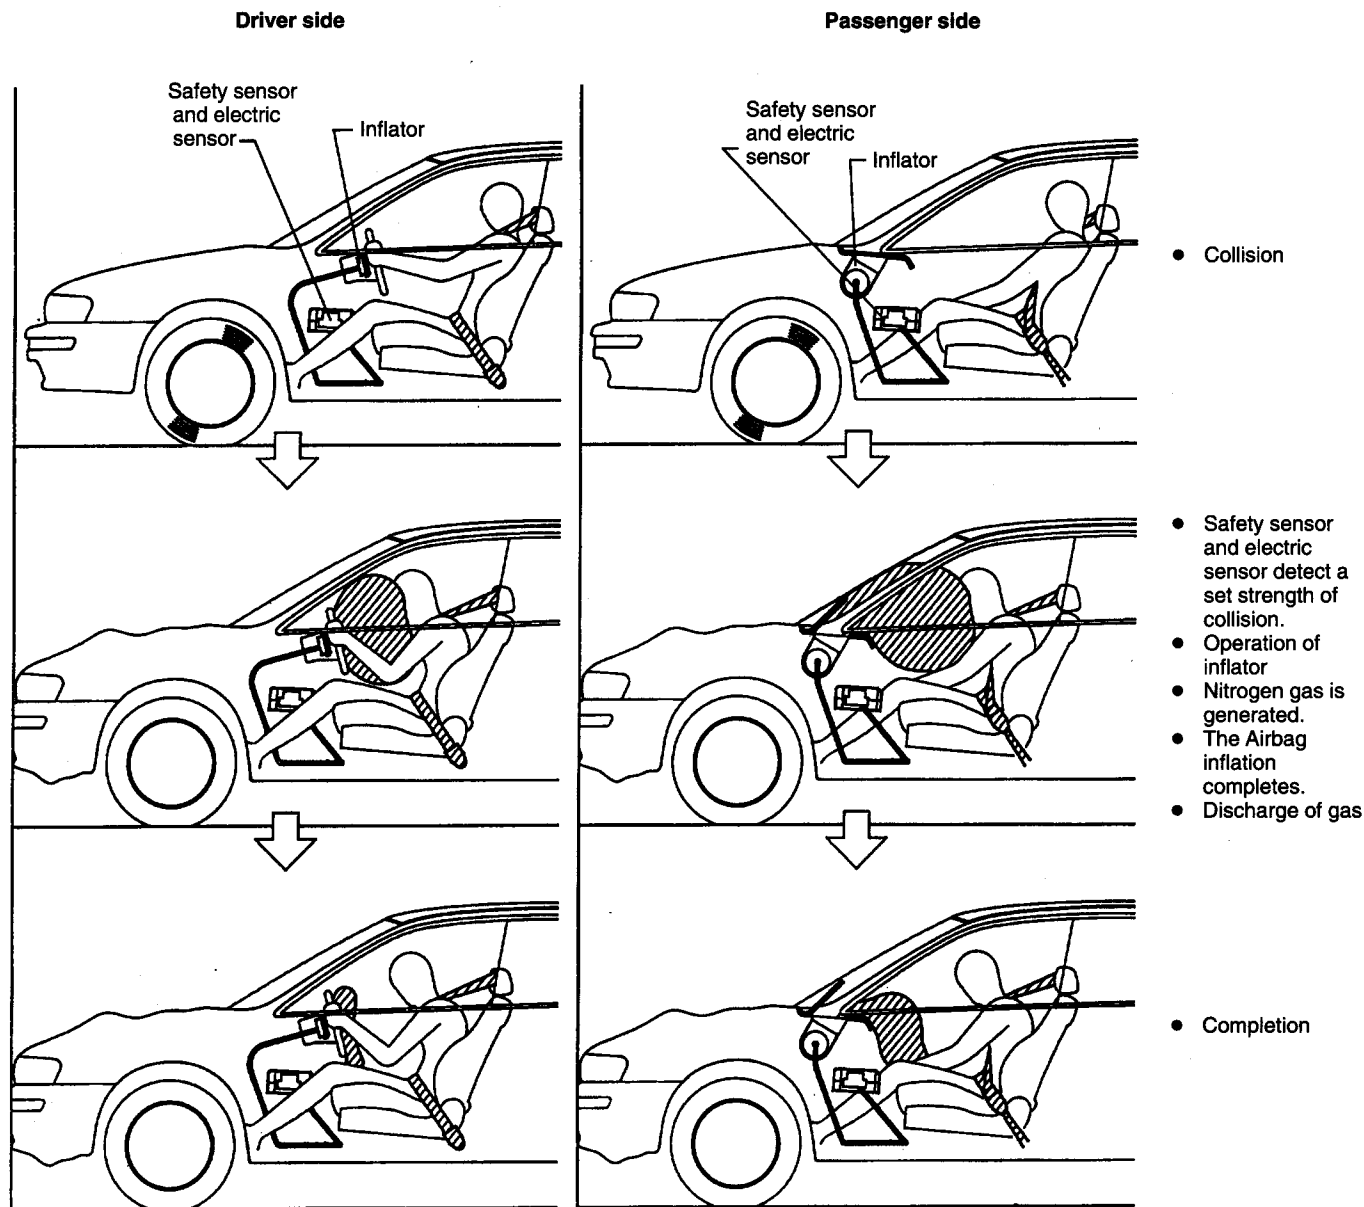

H5H0656A