


1. SRS Airbag

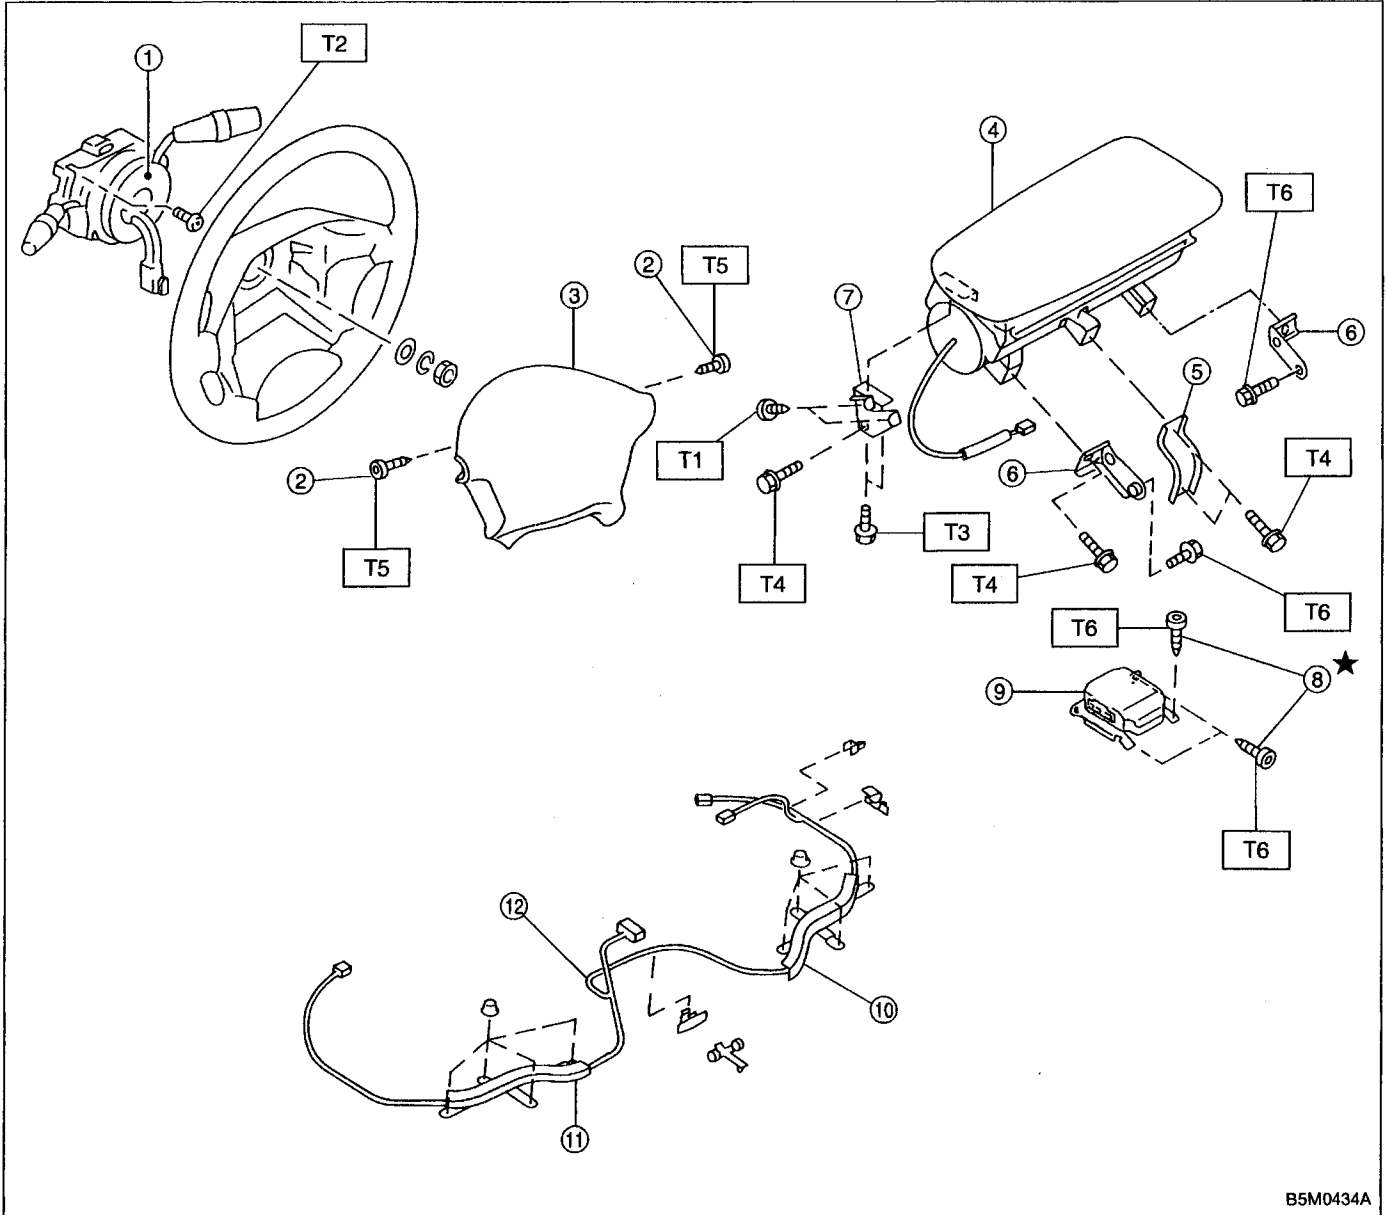

B5M0434A

- ① Combination switch ASSY with roll connector
- ② TORX® bolt
- ③ Airbag module ASSY (Driver)
- ④ Airbag module ASSY (Passenger)
- ⑤ BRKT B
- ⑥ BRKT P AB
- ⑦ BRKT SD A
- ⑧ TORX® bolt
- ⑨ Airbag control module
- ⑩ Protector RH
- ⑪ Protector LH
- ⑫ Airbag main harness

Tightening torque: N-m (kg-m, ft-lb)

- T1: 1.8 ± 0.5 (0.18 ± 0.05, 1.3 ± 0.4)
- T2: 2.5 ± 0.5 (0.25 ± 0.05, 1.8 ± 0.4)
- T3: 4.4 ± 1.5 (0.45 ± 0.15, 3.3 ± 1.1)
- T4: 7.4 ± 0.5 (0.75 ± 0.05, 5.4 ± 0.4)
- T5: 10 ± 2 (1.0 ± 0.2, 7.2 ± 1.4)
- T6: 32 ± 10 (3.3 ± 1.0, 23.9 ± 7.2)