


### 3. Airbag Module


#### A: REMOVAL

##### 1. DRIVER SIDE

- 1) Set front wheels in straight ahead position.
- 2) Turn ignition switch off.
- 3) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

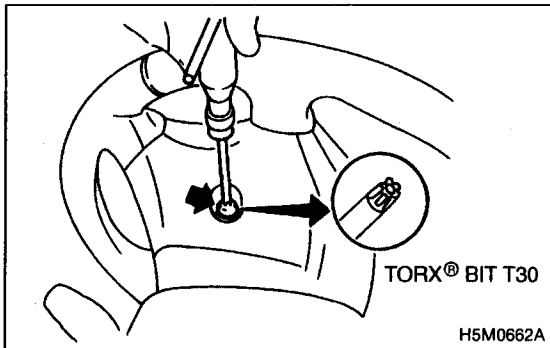

- 4) Using TORX® BIT T30, remove two TORX® bolts.

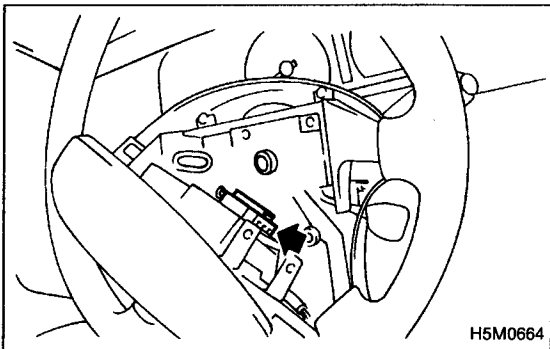

- 5) Disconnect airbag connector on back of airbag module. <Ref. to 5-5 [M2-6].☆1 >

- 6) Refer to "**CAUTION**" for handling of a removed airbag module. <Ref. to 5-5 [W300].☆1 >