


1. SRS Airbag

1. LHD MODEL

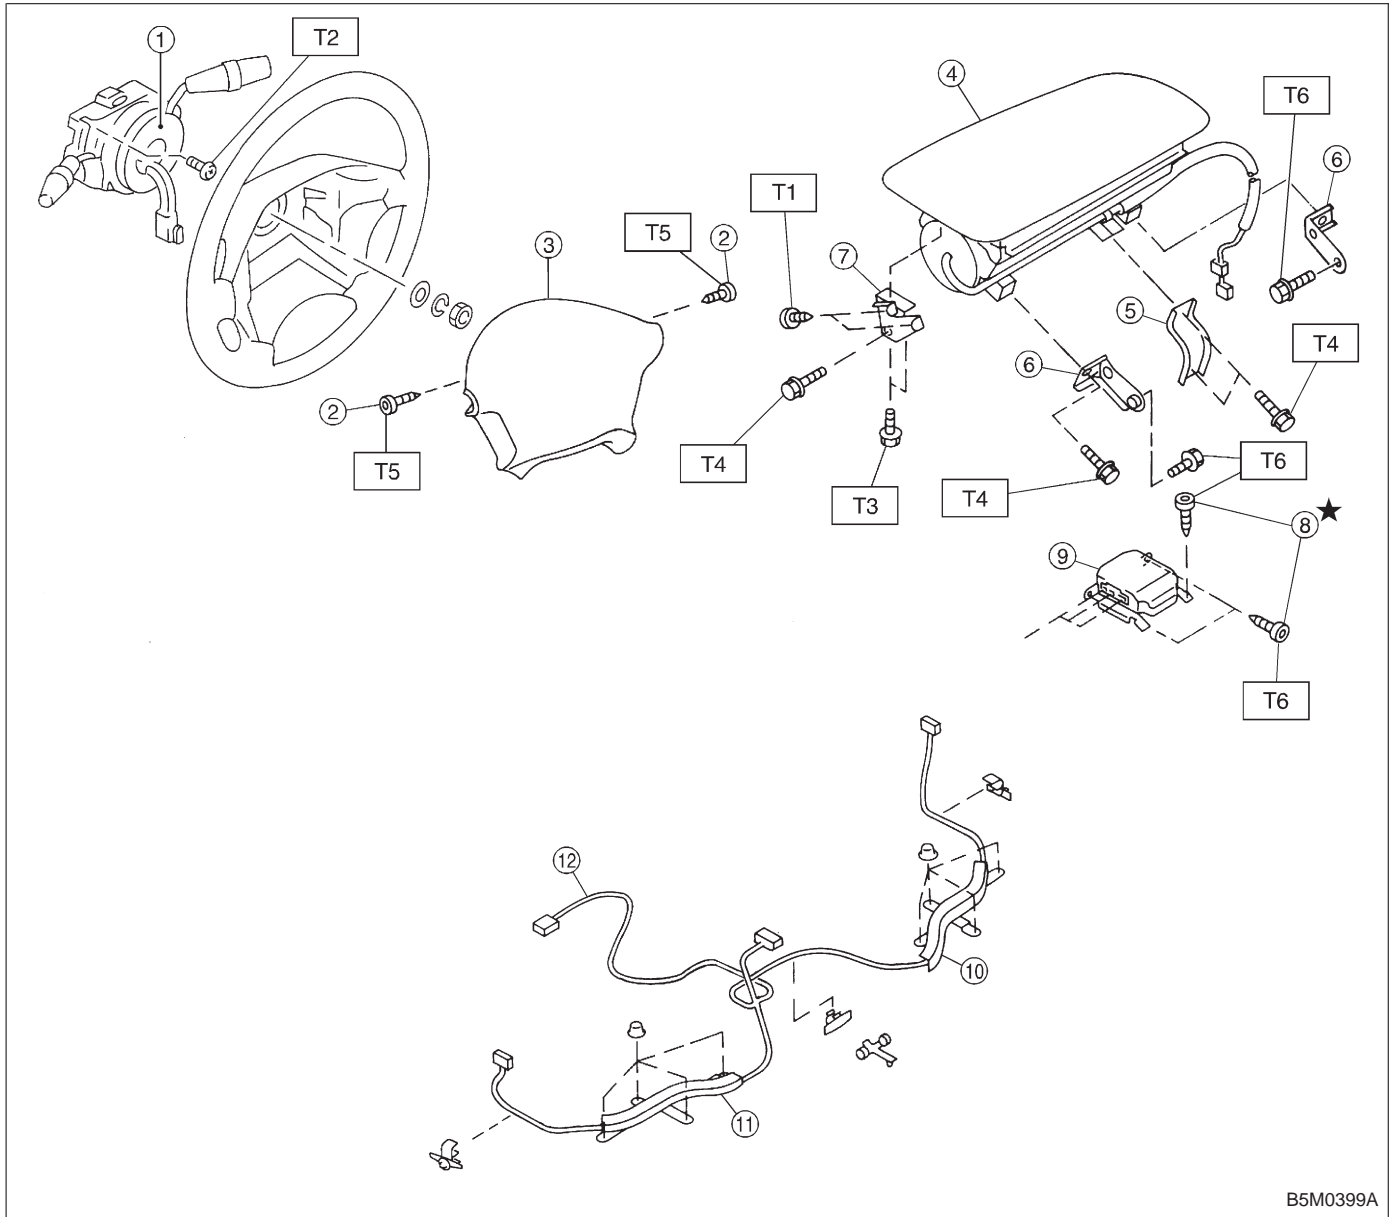


B5M0399A

- ① Combination switch ASSY with roll connector
- ② TORX® bolt
- ③ Airbag module ASSY (Driver)
- ④ Airbag module ASSY (Passenger)
- ⑤ BRKT B
- ⑥ BRKT P AB
- ⑦ BRKT SD A
- ⑧ TORX® bolt
- ⑨ Airbag control module
- ⑩ Protector RH
- ⑪ Protector LH
- ⑫ Airbag main harness

Tightening torque: N·m (kg·m, ft·lb)

- T1: 1.8±0.5 (0.18±0.05, 1.3±0.4)
- T2: 2.5±0.5 (0.25±0.05, 1.8±0.4)
- T3: 4.4±1.5 (0.45±0.15, 3.3±1.1)
- T4: 7.4±0.5 (0.75±0.05, 5.4±0.4)
- T5: 10±2 (1.0±0.2, 7.2±1.4)
- T6: 32±10 (3.3±1.0, 23.9±7.2)

2. RHD MODEL

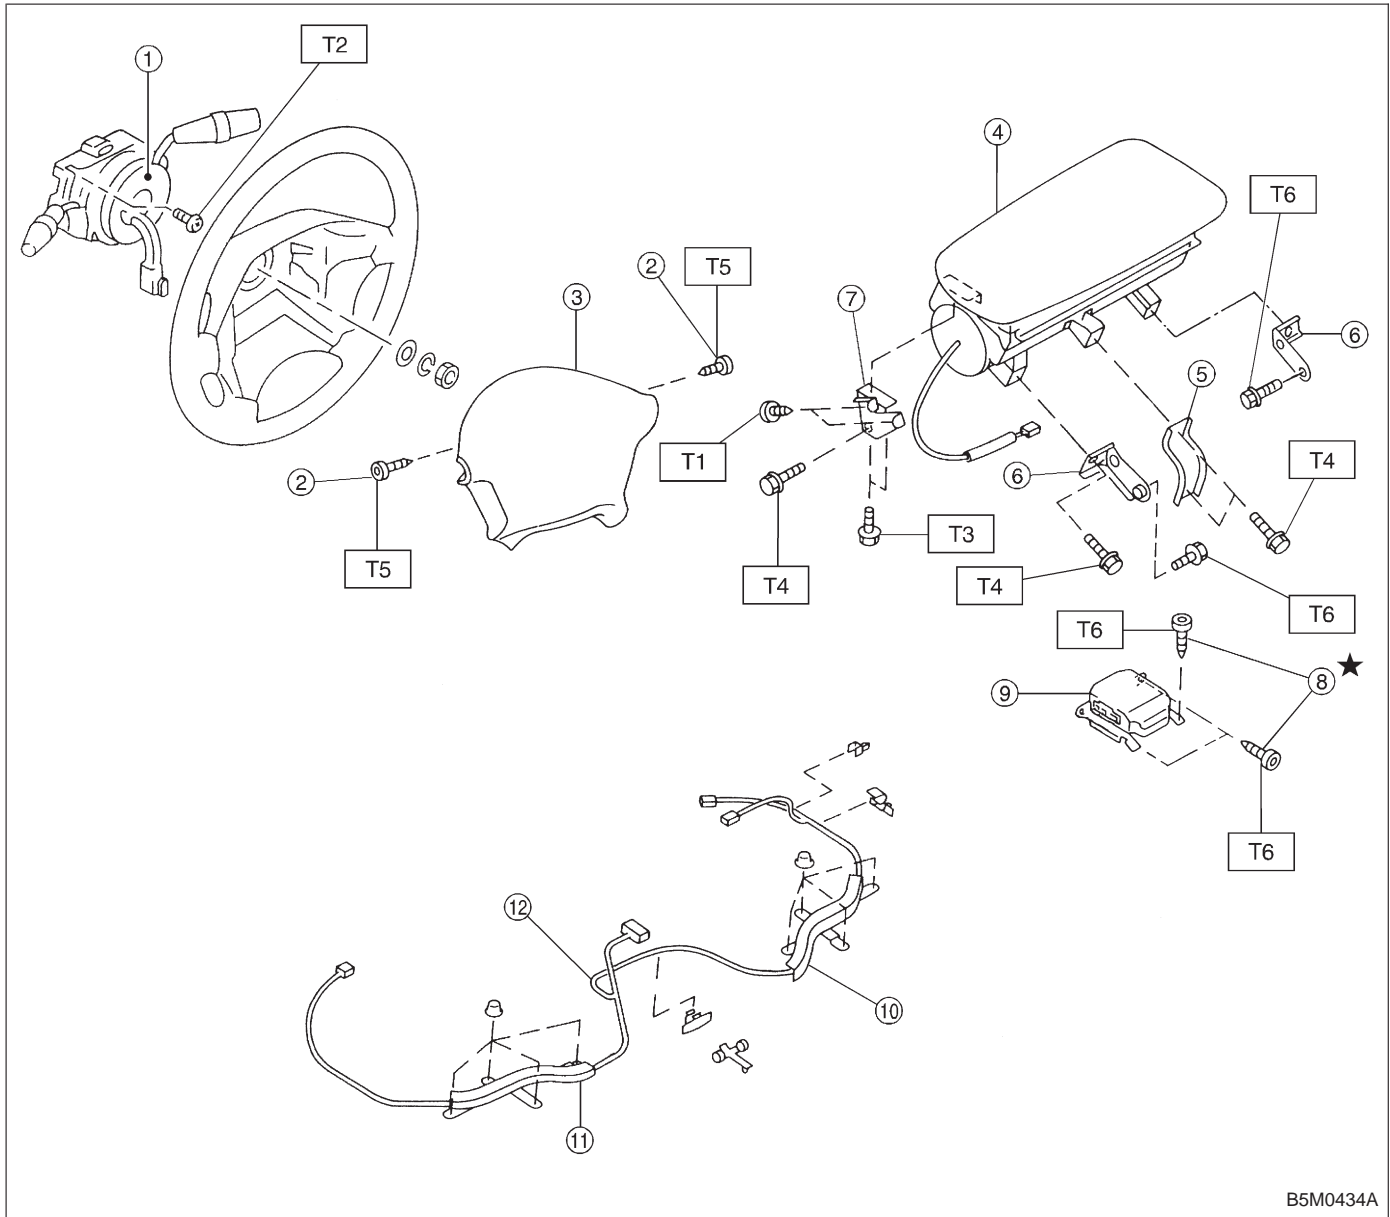

B5M0434A

- ① Combination switch ASSY with roll connector
- ② TORX® bolt
- ③ Airbag module ASSY (Driver)
- ④ Airbag module ASSY (Passenger)
- ⑤ BRKT B
- ⑥ BRKT P AB
- ⑦ BRKT SD A
- ⑧ TORX® bolt
- ⑨ Airbag control module
- ⑩ Protector RH
- ⑪ Protector LH
- ⑫ Airbag main harness

Tightening torque: N·m (kg·m, ft·lb)

- T1: 1.8±0.5 (0.18±0.05, 1.3±0.4)
- T2: 2.5±0.5 (0.25±0.05, 1.8±0.4)
- T3: 4.4±1.5 (0.45±0.15, 3.3±1.1)
- T4: 7.4±0.5 (0.75±0.05, 5.4±0.4)
- T5: 10±2 (1.0±0.2, 7.2±1.4)
- T6: 32±10 (3.3±1.0, 23.9±7.2)