

11) On AWD model, after removing fuel sub meter unit, drain fuel from there.


WARNING:

Do not use a motor pump when draining fuel.


2. On-Car Services

A: MEASUREMENT OF FUEL PRESSURE

- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Connect connector to fuel pump.

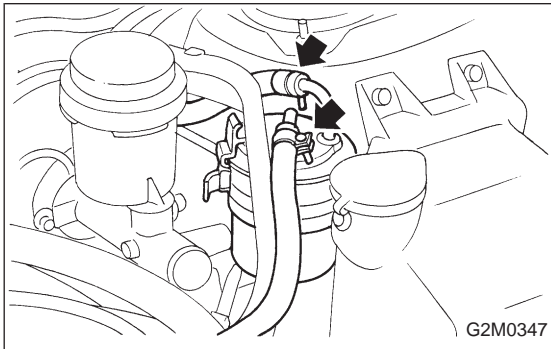

3) Disconnect fuel delivery hoses from fuel filter, and connect fuel pressure gauge.

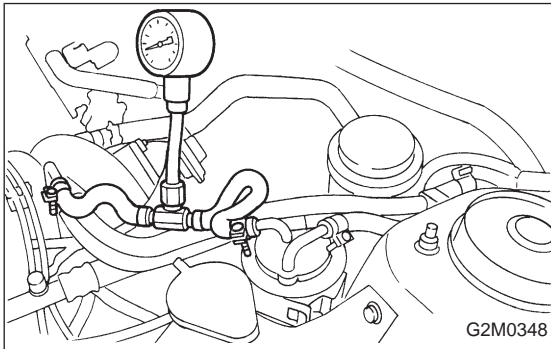

- 4) Start the engine.
- 5) Measure fuel pressure while disconnecting pressure regulator vacuum hose from collector chamber.

Fuel pressure:

235 — 265 kPa (2.4 — 2.7 kg/cm², 34 — 38 psi)

6) After connecting pressure regulator vacuum hose, measure fuel pressure.

Fuel pressure:

177 — 206 kPa (1.8 — 2.1 kg/cm², 26 — 30 psi)

WARNING:

Before removing fuel pressure gauge, release fuel pressure.

NOTE:

If out of specification as measured at step 6), check or replace pressure regulator and pressure regulator vacuum hose.