


Power windows (For right hand drive vehicles only)


WARNING

- When operating power windows, be extremely careful to prevent anyone's fingers or head from being caught in the window.
- Always lock the passengers' windows using the lock switch when children are riding in the vehicle.
- Before leaving the vehicle, always be sure to remove the key from the ignition switch for safety if a child remains in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window.

The power windows operate only when the ignition switch is in the "ON" position.

■ Power window switch cluster

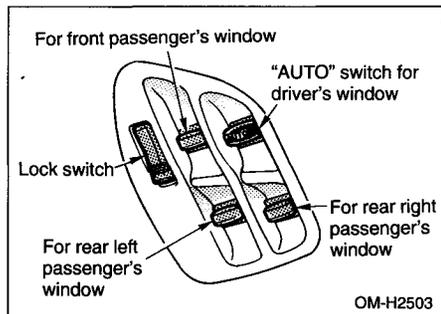

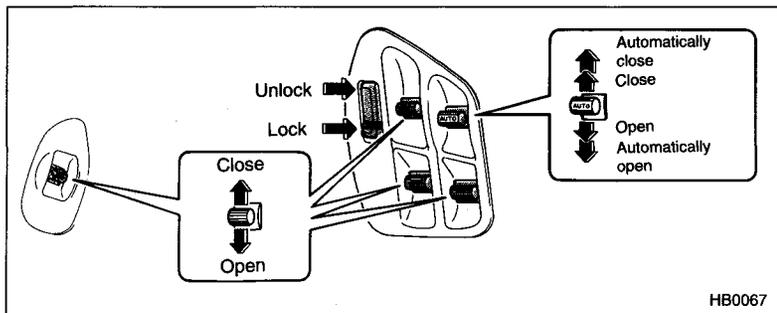

All door windows can be controlled by the power window switch cluster at the driver side door.

▼ **To open or close the driver's window**

AUTO switch: This switch has two functions.

Push the switch down or up until it clicks and release it, the window will fully open or close. To stop the window halfway, push the opposite side of switch lightly.

Push the switch down or up lightly and hold it. The window will open or close as long as it is held.

▼ **To open or close the passengers' windows**


To open the passengers' window, push the appropriate switch down and hold it until the window reaches the desired position. To close the window, push the switch up and hold it until it reaches the desired position.

▼ **To lock the passengers' windows**

To lock the passengers' windows, push the lower part of the lock switch. When the lock switch is in the "LOCK" position, the passengers' windows cannot be opened or closed.

– CONTINUED –

■ Passengers' switches

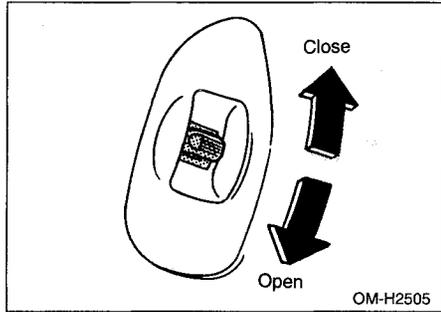

When the lock switch on the power window switch cluster, located on the driver's side door, is in the "LOCK" position, the passengers' windows cannot be operated with the passengers' switches.

To open the window, push the switch down and hold it until the window reaches the desired position. To close the window, push the switch up and hold it until the window reaches the desired position.

Trunk lid (Sedan)

WARNING

To prevent dangerous exhaust gas from entering the vehicle, always keep the trunk lid closed while driving.