


Gauges

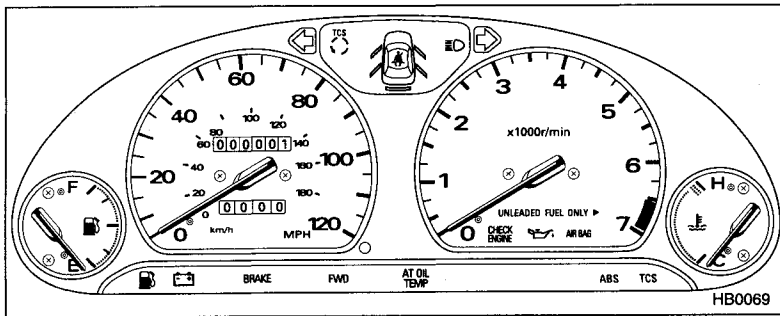

■ Speedometer

The speedometer shows the vehicle speed.

■ Odometer

The odometer shows the total distance that the vehicle has been driven.

■ Trip meter

The trip meter shows the distance that the vehicle has been driven since you last set it to zero.

To set the trip meter to zero, press the knob.

■ Tachometer (if equipped)

⚠ CAUTION

Do not operate the engine with the pointer of the tachometer in the red zone. In this range, fuel injection will be cut by the engine control module to protect the engine from overrevving. The engine will resume running normally after the engine speed is reduced below the red zone.

The tachometer shows the engine speed in thousands of revolutions per minute.

– CONTINUED –

■ Fuel gauge

The fuel gauge shows approximately the amount of the fuel in the tank. The pointer does not return to "E" even though the ignition switch is in the "ACC" or "LOCK" position.

The pointer may move slightly during braking, turning or acceleration due to fuel level movement within the tank.


■ Temperature gauge



CAUTION

If the pointer exceeds the normal operating range, safely stop the vehicle as soon as possible.

See "In case of emergency" in this manual.

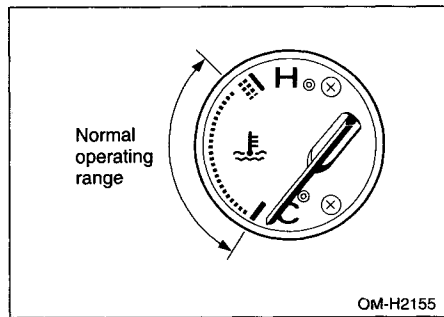

The temperature gauge shows engine coolant temperature when the ignition switch is in the "ON" position.

The coolant temperature will vary in accordance with the outside temperature and driving conditions.

We recommend that you drive moderately until the pointer of the temperature gauge reaches near the middle of the range. Engine operation is optimum with the engine coolant at this temperature range and high revving operation when the engine is not warmed up enough should be avoided.