


---

## Hazard warning flasher

---

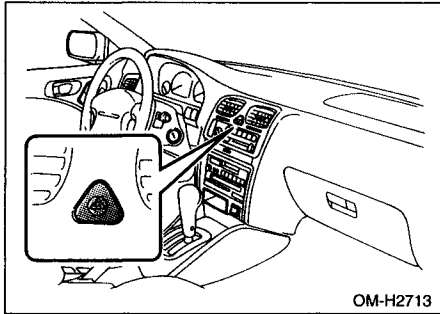

The hazard warning flasher is used to warn other drivers when you have to park your vehicle under emergency conditions. The hazard warning flasher works with the ignition switch in any position.

When you have to park your vehicle under emergency conditions, pull off the roads safely and park away from the traffic if it is possible.

To turn on the hazard warning flasher, push the hazard warning button on the instrument panel. To turn off the flasher, push the button again.

### NOTE

When the hazard warning flasher is on, the turn signals do not work.

---


## Light controls

---

### ■ Light switch

#### **WARNING**

To prevent battery discharge resulting from accidentally leaving your lights on when your vehicle is parked, the light switch operates only when the ignition switch is in the "ON" position. In any other position, the vehicle's lights will be out. If you park your vehicle on a roadside at night, use hazard warning flasher to alert the other drivers.

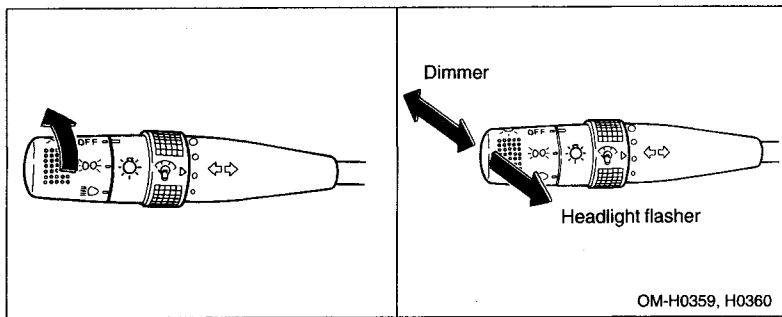

The light switch operates only when the ignition switch is in the "ON" position.

▼ **Headlights**

To turn on the headlights, turn the knob on the end of the turn signal lever.

☰ first position

Position lights, instrument panel illumination, tail lights and license plate light are on.

☰ second position

Headlights, position lights, instrument panel illumination, tail lights, and license plate light are on.

▼ **High/low beam change (dimmer)**

To change from low beam to high beam, push the turn signal lever forward. When the headlights are on high beam, the high beam indicator light "☰" on the instrument panel is also on.

To switch back to low beam, pull the lever back to the detent position.

▼ **Headlight flasher**

**⚠ CAUTION**

**Do not hold the lever in the flashing position for more than just a few seconds.**

- CONTINUED -

To flash the headlights, pull the lever toward you and then release it. The high beam will stay on for as long as you hold the lever. The headlight flasher works even though the lighting switch is in the "OFF" position.

When the headlights are on high beam, the high beam indicator light "≡D" on the instrument panel also comes on.

#### ▼ Daytime running light system (for CANADA models)


### ⚠ WARNING

The tail lights, parking lights, and side marker lights are not turned on by the daytime running light system. The light switch must always be turned to the "≡D" position when it is dark outside.

The low beam headlights will automatically come on at reduced brightness when the engine has started, under the following conditions:

- The parking brake is fully released.
- The automatic transmission selector lever is set at other than the "P" position.
- The light switch is in the "OFF" position.


#### ▼ Turn signals

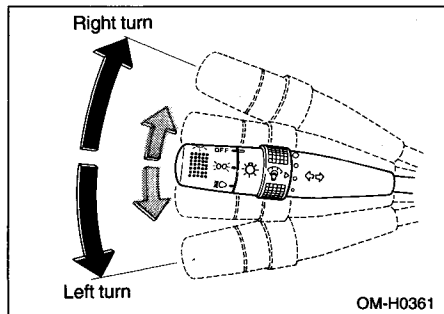

To activate the right turn signal, push the turn signal lever up. To activate the left turn signal, push the turn signal lever down. When the turn is finished, the lever will return automatically. If the lever will not return after cornering, return the lever to the neutral position by hand.

To signal a lane change, push the turn signal lever up or down slightly and hold it during lane change. The turn signal indicator lights will flash in the direction of the turn or lane change. The lever will return automatically to the neutral position when you release it.

■ **Illumination brightness control**

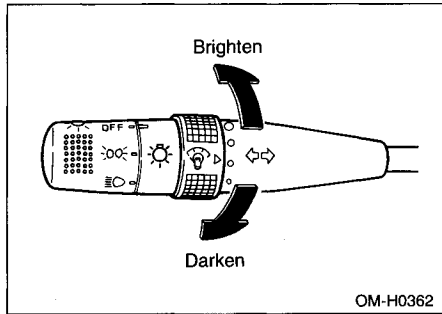


When the lighting switch is in the "☀️" or "💡" position, you can adjust brightness of the instrument panel illumination for better visibility.

To brighten, turn the control dial counterclockwise.

To darken, turn the control dial clockwise.

**- CONTINUED -**

### ■ Parking light switch

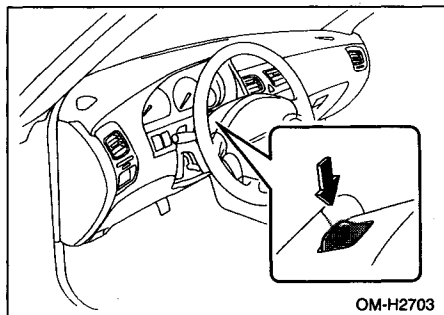

The parking light switch operates regardless of the ignition switch position.

By pushing the rear end of this switch, following lights will come on.

- Parking lights
- Front and rear side marker lights
- Tail lights
- License plate lights

To turn off, push the front end of the parking light switch.


Avoid leaving these lights on for a long time because that will run down the battery.

### ■ Fog light switch (if equipped)

The fog lights operate only when the headlights are on low beam.

Push the fog light switch to turn the fog lights on.

Press the switch again to turn them off.

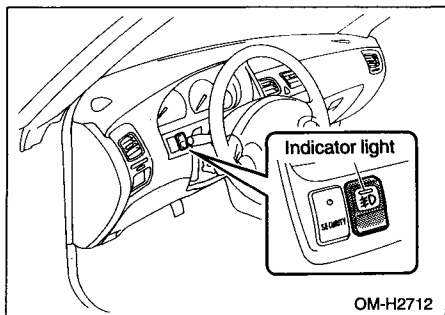

The indicator light located on the switch will illuminate when the fog lights are on.

## Wiper controls

### **⚠ WARNING**

**In freezing weather, do not use the windshield washer until the windshield is sufficiently warmed by the defroster.**

**Otherwise the washer fluid can freeze on the windshield, blocking your view.**

### **⚠ CAUTION**

- **Do not operate the washer continuously for more than ten seconds, or when the washer fluid tank is empty. This may cause overheating of the washer motor. Check the washer fluid level frequently, such as at fuel stops.**

- **Do not operate the wipers when the windshield or rear window is dry. This may scratch the glass, damage the wiper blades and cause the wiper motor to burn out. Before operating the wiper on a dry windshield or rear window, always use the windshield washer.**

- **In freezing weather, be sure the wiper blades are not frozen to**

– CONTINUED –