


## Engine compartment overview

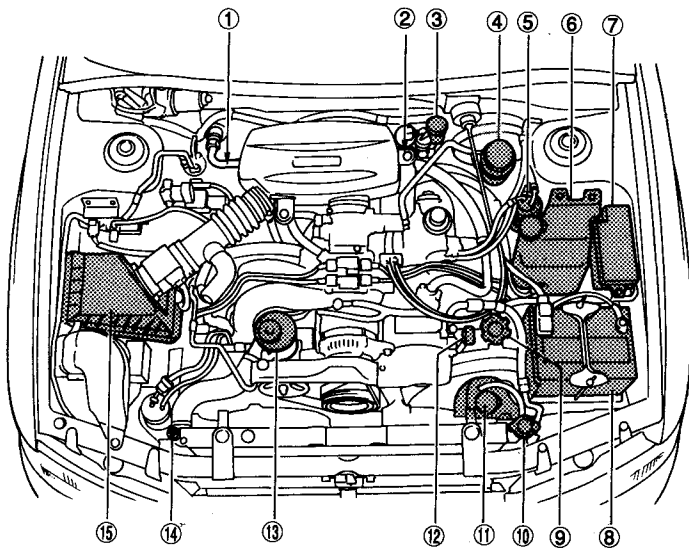

HB0040

- |  |   |
|--|---|
| ① Manual transmission oil level gauge (MT) (page 10-21) or Differential gear oil level gauge (AT) (page 10-24) | ⑦ Fuse box (page 10-44)                       |
| ② Automatic transmission fluid level gauge (page 10-23)  | ⑧ Battery (page 10-31)                        |
| ③ Clutch fluid reservoir (2.5L, MT) (page 10-29)   | ⑨ Engine oil filler cap (page 10-7)           |
| ④ Brake fluid reservoir (page 10-28)   | ⑩ Radiator cap (page 10-12)                   |
| ⑤ Fuel filter (page 10-32)   | ⑪ Engine coolant reservoir (page 10-12)       |
| ⑥ Windshield washer tank (page 10-32)  | ⑫ Engine oil level gauge (page 10-7)          |
|  | ⑬ Power steering fluid reservoir (page 10-26) |
|  | ⑭ Air vent plug (Page 10-12)                  |
|  | ⑮ Air cleaner (page 10-17)                    |