


4. Schematic

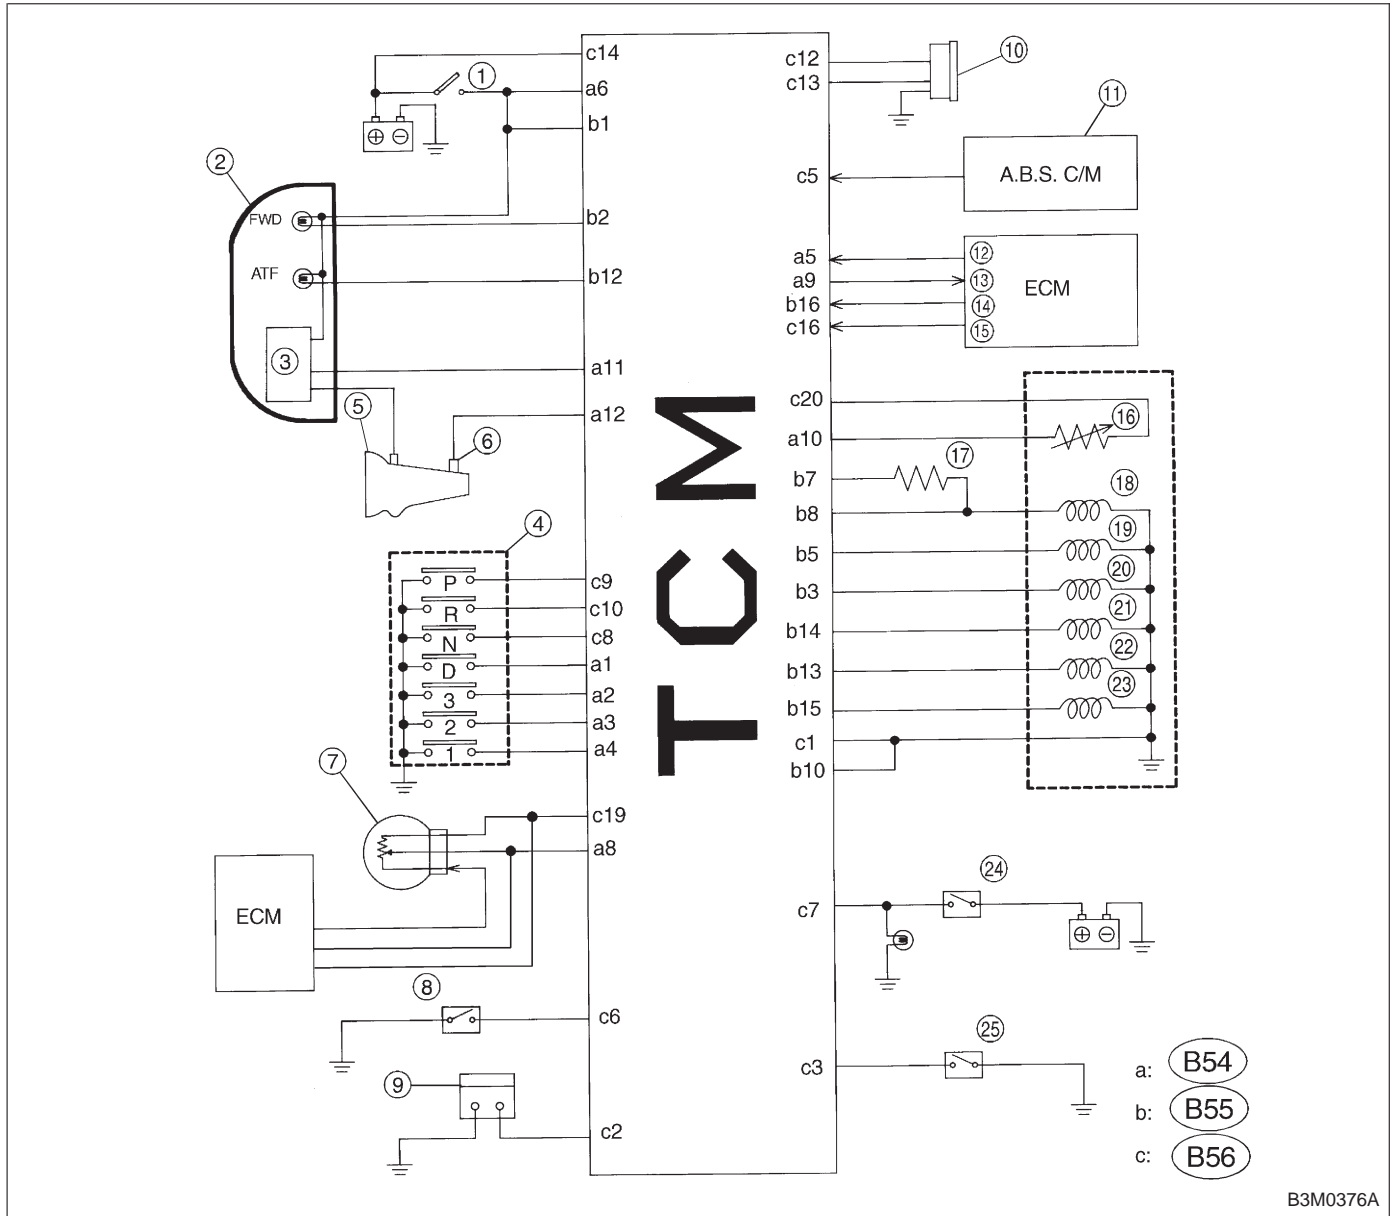

B3M0376A

- ① Ignition switch
- ② Combination meter
- ③ Speedometer circuit
- ④ Inhibitor switch
- ⑤ Vehicle speed sensor 2
- ⑥ Vehicle speed sensor 1
- ⑦ Throttle position sensor
- ⑧ Diagnosis switch
- ⑨ FWD switch (AWD)

- ⑩ Data link connector
- ⑪ ABS control module
- ⑫ Engine speed signal
- ⑬ Torque control signal
- ⑭ Mass air flow signal
- ⑮ ATF temperature sensor
- ⑯ Dropping resistor

- ⑰ Duty solenoid A
- ⑱ Duty solenoid B
- ⑲ Duty solenoid C (AWD)
- ⑳ Shift solenoid 1
- ㉑ Shift solenoid 2
- ㉒ Shift solenoid 3
- ㉓ Brake switch
- ㉔ Cruise set switch