
3. Electrical Components Location

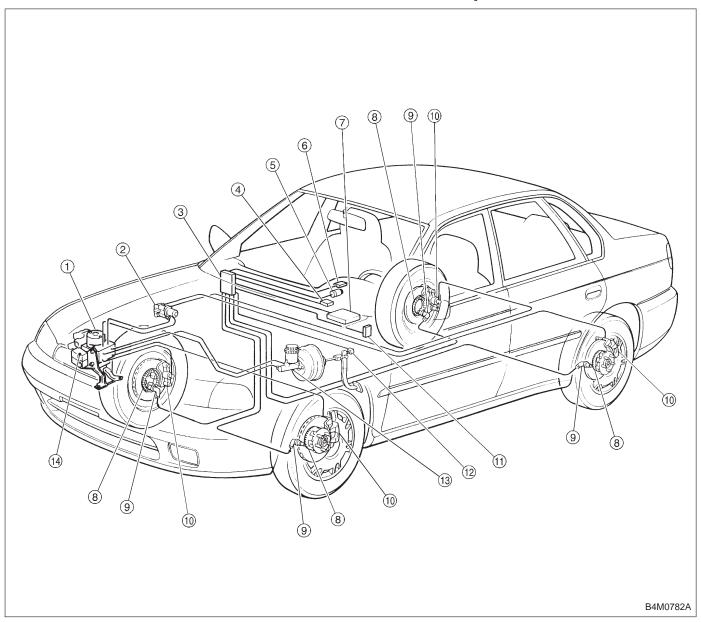

- 1) Hydraulic control unit (H/U)
- Proportioning valve
- 3 ABS control module (ABSCM)
- Diagnosis connector
- ABS warning light
- 6 Data link connector (for Subaru select monitor)
- 7 Transmission control module (only AT vehicle)

- (8) Tone wheel
- ABS sensor
- (1) Wheel cylinder
- (f) G sensor (only AWD vehicle)
- Brake switch
- Master cylinder
- (4) Relay box

BRAKES [ABS 5.3 TYPE]

