
6. Basic Diagnostic Procedure

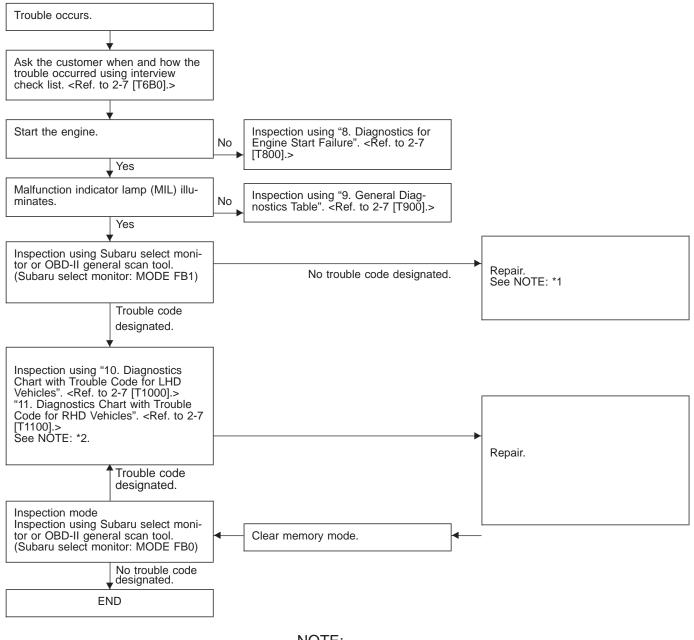

NOTE:

•*1: If trouble code is not shown on display although the MIL illuminates, perform diagnostics of the MIL (CHECK ENGINE LIGHT) circuit or combination meter. <Ref. to 2-7 [T700].>

•*2: Carry out the basic check, only when trouble code about automatic transmission is shown on display. <Ref. to 2-7 [T6A0].>

A: BASIC CHECK ITEMS FOR AT

When trouble code about automatic transmission is shown on display, carry out the following basic check. After that, carry out the replacement or repair work.

- 1) ATF level check
- 2) Differential gear oil level check
- 3) ATF leak check
- 4) Differential gear oil leak check
- 5) Brake band adjustment
- 6) Stall test
- 7) Line pressure test
- 8) Transfer clutch pressure test
- 9) Time lag test
- 10) Road test
- 11) Shift characteristics
- NOTE:

As for the method, refer to 3-2 [W2A0], [W2B1], [W300].

B: CHECK LIST FOR INTERVIEW

1. CHECK LIST NO. 1

Check the following items when problem has occurred.

NOTE:

Use copies of this page for interviewing customers.

Customaria noma			
Customer's name		Engine no.	
Date of sale		Fuel brand	
Date of repair		Odometer reading	kn
Vin no.			miles
Weather	 □ Fine □ Cloudy □ Rainy □ Snowy □ Various/Others: 		
Outdoor temperature	F(°C)		
	□ Hot □ Warm □ Cool □ Cold		
Place	 Highway Suburbs Inner city Uphill Downhill Rough road Others: 		
Engine temperature	 Cold Warming-up After warming-up Any temperature Others: 		
Engine speed	rpm	ı	
Vehicle speed	MPF	1	
Driving conditions	 Not affected At starting While idling At racing While accelerating While cruising While decelerating While turning (RH/LH) 		
Headlight		Rear defogger	
Blower		Radio	
A/C compressor		CD/Cassette	
Cooling fan		Car phone	
Front wiper		СВ	
Rear wiper			

2. CHECK LIST NO. 2

Check the following items about the vehicle's state when MIL turns on.

NOTE:

Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. Yes/ No
 Low fuel warning light Charge indicator light AT diagnostics indicator light ABS warning light TCS warning light Engine oil pressure warning light
b) Fuel level
Lack of gasoline: □ Yes/□ No Indicator position of fuel gauge:
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: _ Yes/ _ No
What:
d) Intentional connecting or disconnecting of hoses: □ Yes/□ No
What:
e) Installing of parts other than genuine parts: □ Yes/□ No
What: Where:
f) Occurrence of noise: Yes/ No
From where: What kind:
g) Occurrence of smell: □ Yes/□ No
From where:What kind:
h) Intrusion of water into engine compartment or passenger compartment: Ves/ No
i) Troubles occurred
 Engine does not start. Engine stalls during idling. Engine stalls while driving. Engine speed decreases. Engine speed does not decrease. Rough idling Poor acceleration Back fire After fire No shift Excessive shift shock