


15. Condenser Fan Assembly

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Disconnect harness connector from fan motor.
- 3) Remove condenser fan bolt from radiator.
- 4) Pull condenser fan assembly.
- 5) Install the condenser fan assembly in the reverse order of removal.

Tightening torque:

T: 7.4 ± 2.0 N·m (0.75 ± 0.2 kg·m, 5.4 ± 1.4 ft·lb)

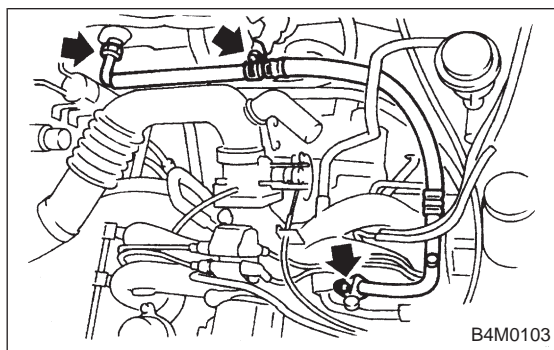

16. Flexible Hose

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Discharge refrigerant using refrigerant recovery system. <Ref. to 4-7 [W601].>
- 3) Remove low-pressure hose.
 - (1) Remove hose attaching bolts.

CAUTION:

Plug the opening to prevent foreign matter from getting in.

- (2) Disconnect the connector at evaporator module.

- 4) Remove high-pressure hose.

- (1) Disconnect hose attaching bolt (compressor side).
- (2) Disconnect hose attaching bolt (condenser side).

CAUTION:

Plug the opening to prevent foreign matter from getting in.

- 5) Installation is in the reverse order of removal.
- 6) Charge refrigerant. <Ref. to 4-7 [W708].>

