**NOTE:**

Whenever turning adjusting nut, prevent PHV cable from revolving as shown in Figure.


9. Parking Brake Lever

A: REPLACEMENT

- 1) Remove console box from front floor.
- 2) Disconnect electric connector for parking brake switch.
- 3) Loosen parking brake adjuster, and remove inner cable end from equalizer.
- 4) Remove parking brake lever.
- 5) Install parking brake lever in the reverse order of removal.

Tightening torque (Lever installing bolt and nut):

18±5 N·m (1.8±0.5 kg·m, 13.0±3.6 ft-lb)

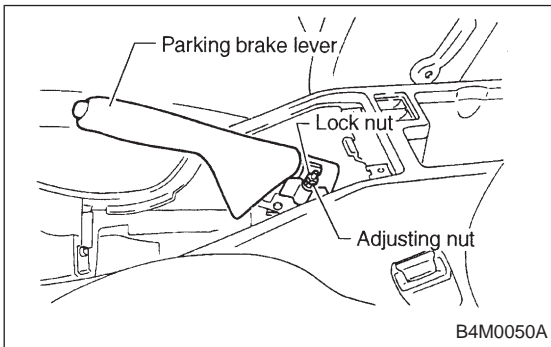

- 6) Adjust parking brake lever by turning adjusting nut until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kg, 44 lb).
- 7) Tighten lock nut.

Tightening torque (Lock nut):

5.9±1.5 N·m (0.60±0.15 kg·m, 4.3±1.1 ft-lb)