


3. Fuel Flap

A: REMOVAL AND INSTALLATION

1. FUEL FLAP

- 1) Remove bolts which hold hinge to fuel flap, and detach fuel flap.

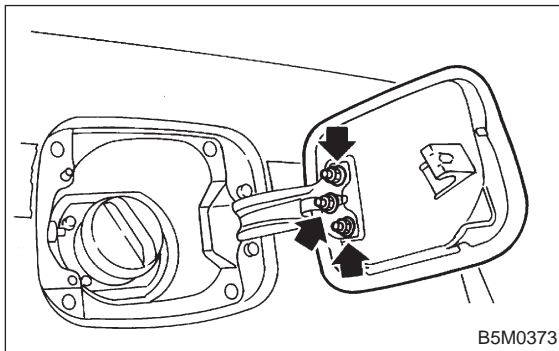


- 2) Installation is in the reverse order of removal.

CAUTION:

Make sure the clearance between fuel flap and vehicle body is equal at all points.

2. FUEL FLAP OPENER

- 1) Remove rear seats, center pillar lower cover, floor mat, rear arch cover/rear quarter trim (Wagon), and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle.

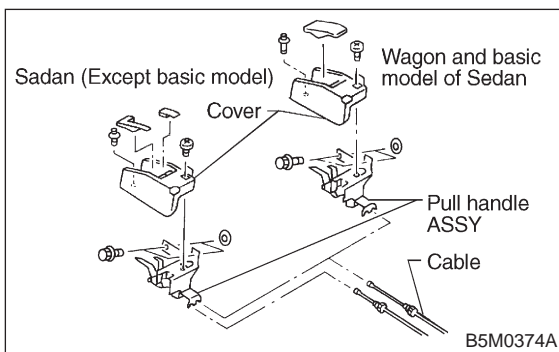

- 4) Detach pull handle by removing bolts.
- 5) Detach fuel lock holder by turning it.
- 6) Installation is in the reverse order of removal.

CAUTION:


- When installing cover to pull handle assembly, observe the following:
 - Be careful not to catch harness.
 - Engage pull handle assembly pawls firmly.
- After installing opener cable, ensure it moves smoothly.

4. Front Bumper

A: REMOVAL AND INSTALLATION

1. EXCEPT OUTBACK MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove two bolts from lower center of bumper.

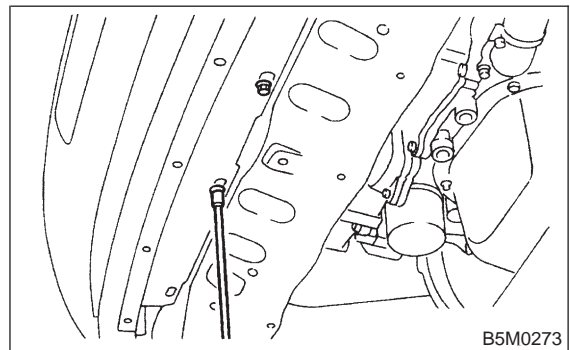


- 3) Remove mud guard. <Ref. to 5-1 [W9A1].>

NOTE:

It is not necessary to remove the entire mud guard. Remove clips from the front section of mud guard, if necessary.

- 4) Remove the canister. <Ref. to 2-1 [W3A0].>
- 5) Remove two bolts from side of bumper.

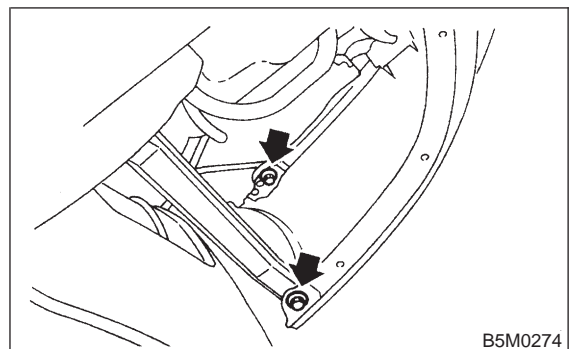

- 6) Remove front grill. <Ref. to 5-1 [W12A0].>
- 7) Remove headlight. <Ref. to 6-2 [W4B2].>
- 8) Remove clips from both sides of front bumper.

NOTE:

When removing, push the pin at the center of clip with a thin screwdriver.

