


1. SRS Airbag

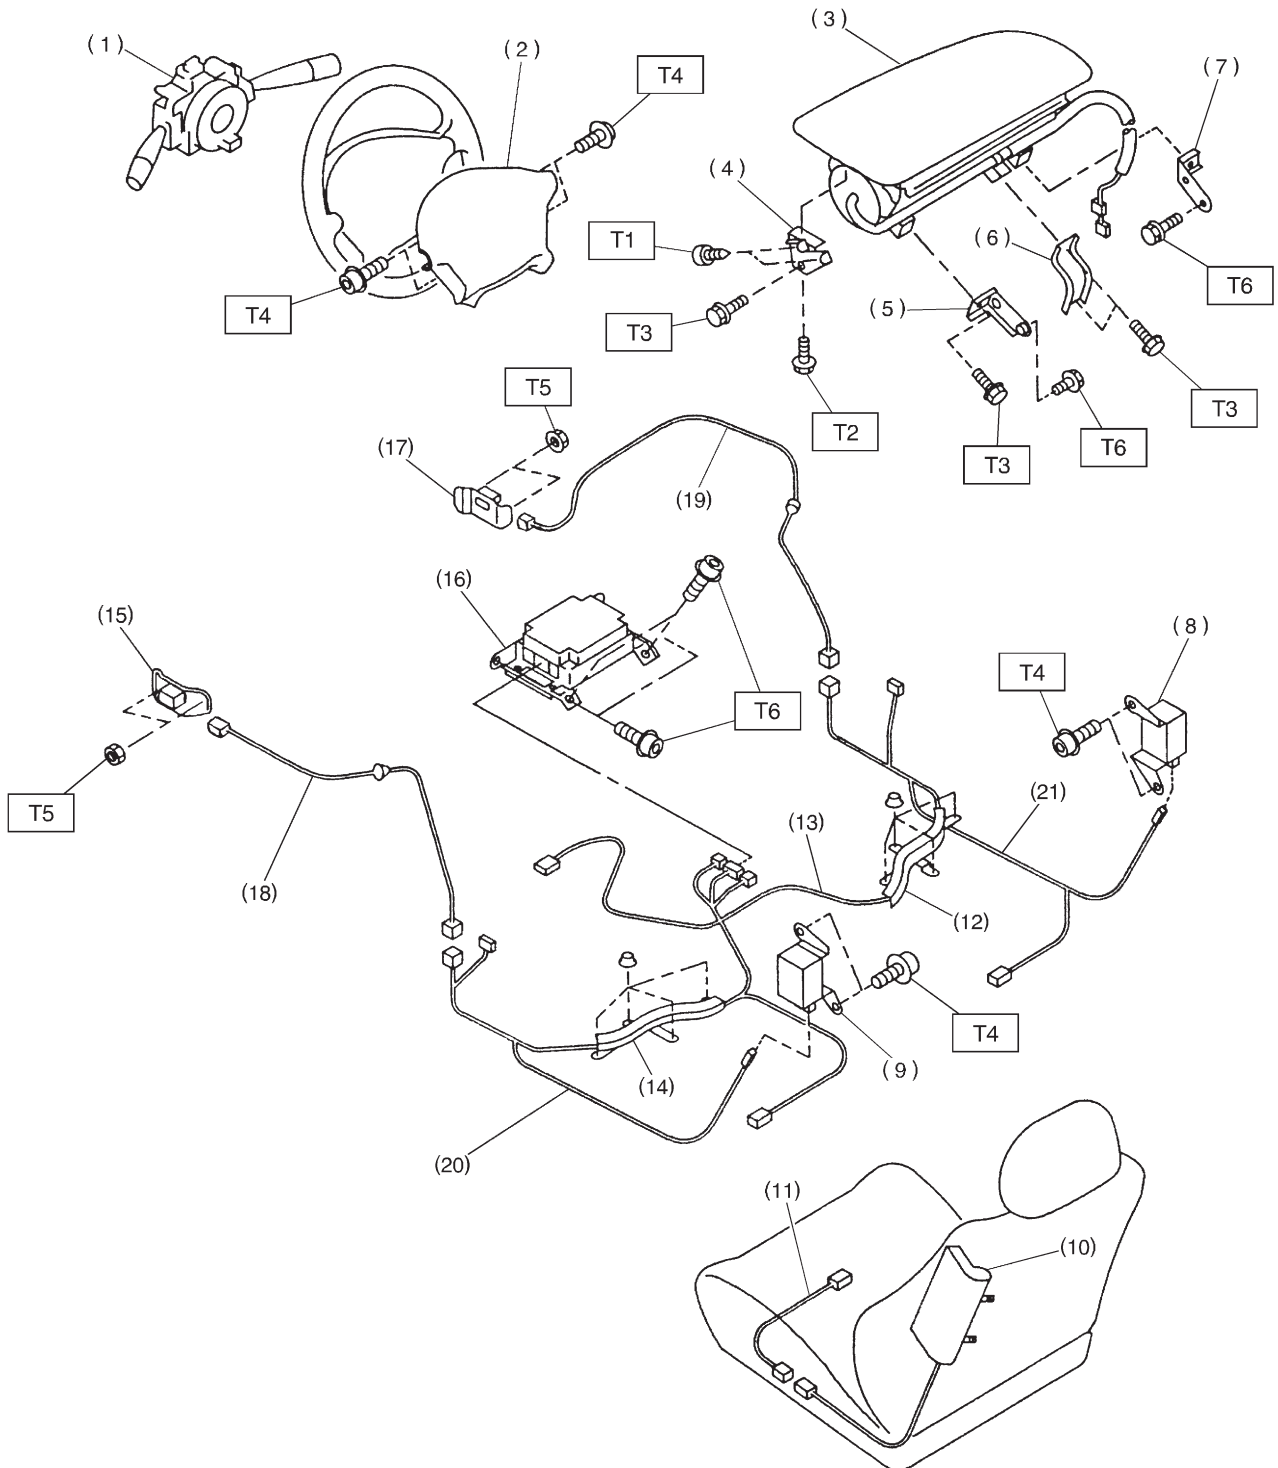

COMPONENT PARTS

[C100] **5-5**
1. SRS Airbag

- (1) Combination switch ASSY with roll connector
- (2) Airbag module ASSY (Driver)
- (3) Airbag module ASSY (Passenger)
- (4) BRKT SD A
- (5) BRKT P AB (LH)
- (6) BRKT B
- (7) BRKT P AB (RH)
- (8) Side airbag sensor (RH)
- (9) Side airbag sensor (LH)

- (10) Airbag module ASSY (Side)
- (11) Extension harness
- (12) Protector RH
- (13) Airbag main harness
- (14) Protector LH
- (15) Front sub sensor (LH)
- (16) Airbag control module
- (17) Front sub sensor (RH)
- (18) Front sub sensor harness (LH)
- (19) Front sub sensor harness (RH)
- (20) Side airbag harness (LH)

- (21) Side airbag harness (RH)

Tightening torque: N-m (kg-m, ft-lb)

T1: 1.8±0.5 (0.18±0.05, 1.3±0.4)

T2: 4.4±1.5 (0.45±0.15, 3.3±1.1)

T3: 7.4±0.5 (0.75±0.05, 5.4±0.4)

T4: 10±2 (1.0±0.2, 7.2±1.4)

T5: 20±4 (2.0±0.4, 14.5±2.9)

T6: 32±10 (3.3±1.0, 23.9±7.2)
