


## 5. Airbag Control Module

### A: REMOVAL AND INSTALLATION

**CAUTION:**


- Do not disassemble the airbag control module.

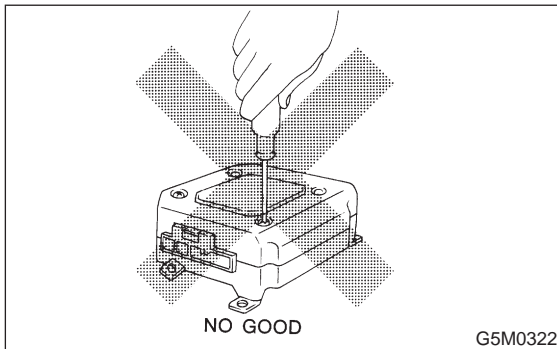

- If the airbag control module is deformed, or if water damage is suspected, replace the airbag control module with a new genuine part.



- After removal, keep the airbag control module on a dry, clean surface away from heat and light sources, and moisture and dust.

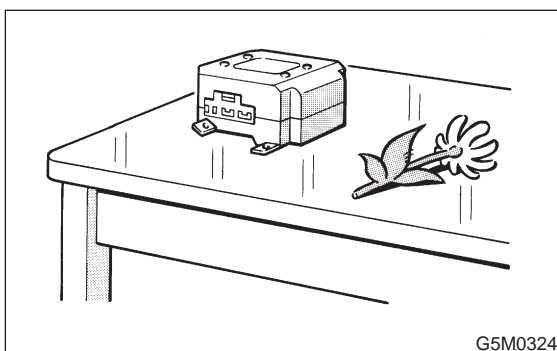


- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

- 3) Remove lower cover. <Ref. to 5-4 [W1A0].> Disconnect airbag connector (AB3) and (AB8) below steering column.

**CAUTION:**


Do not reconnect airbag connector at steering column until airbag control module is securely re-installed.

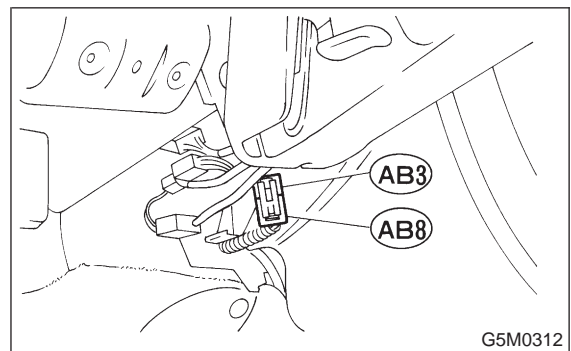

- 4) Remove console box. <Ref. to 5-4 [W1A0].>
- 5) Disconnect connector from airbag control module.
- 6) Using TORX® BIT T40 (Tamper resistant type), remove two TORX® bolts. Discard the old TORX® bolts.

**CAUTION:**

Use new TORX® bolts during re-assembly.

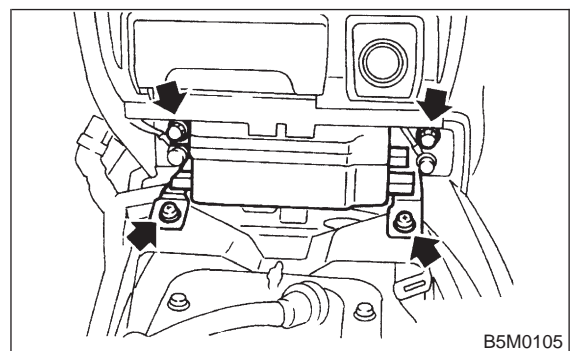

- 7) Installation is in the reverse order of removal.