


4. Schematic

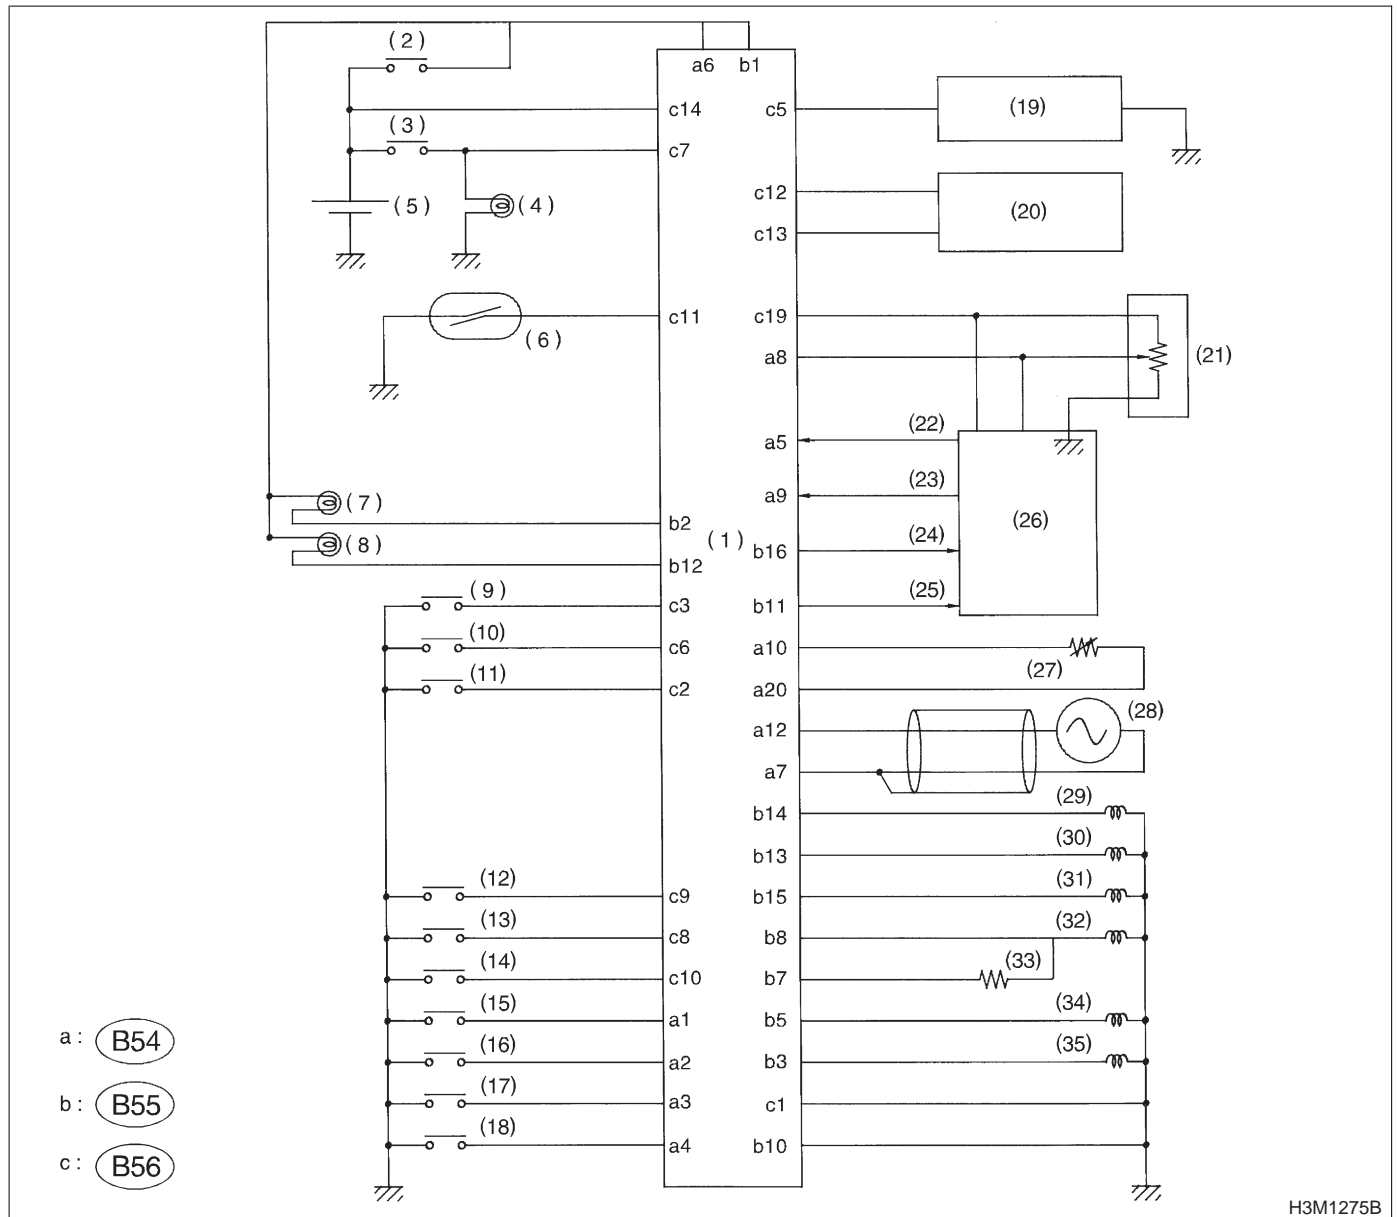

- | | | |
|---------------------------------|-------------------------------|-----------------------------|
| (1) Transmission control module | (13) "R" range switch | (25) AT diagnostics signal |
| (2) Ignition switch | (14) "N" range switch | (26) Engine control module |
| (3) Brake switch | (15) "D" range switch | (27) ATF temperature sensor |
| (4) Brake light | (16) "3" range switch | (28) Vehicle speed sensor 1 |
| (5) Battery | (17) "2" range switch | (29) Shift solenoid 1 |
| (6) Vehicle speed sensor 2 | (18) "1" range switch | (30) Shift solenoid 2 |
| (7) FWD indicator light | (19) ABS control module | (31) Shift solenoid 3 |
| (8) AT OIL TEMP indicator light | (20) Data link connector | (32) Duty solenoid A |
| (9) Cruise set switch | (21) Throttle position sensor | (33) Dropping resistor |
| (10) Diagnosis switch | (22) Engine speed signal | (34) Duty solenoid B |
| (11) FWD switch | (23) Mass air flow signal | (35) Duty solenoid C |
| (12) "P" range switch | (24) Torque control signal | |