


3. Tools for Diagnostics

CAUTION:

Be sure to use specified test harness A, E, F, G and H when measuring voltage, resistance, etc. of AIRBAG system component parts.

A: TEST HARNESS A

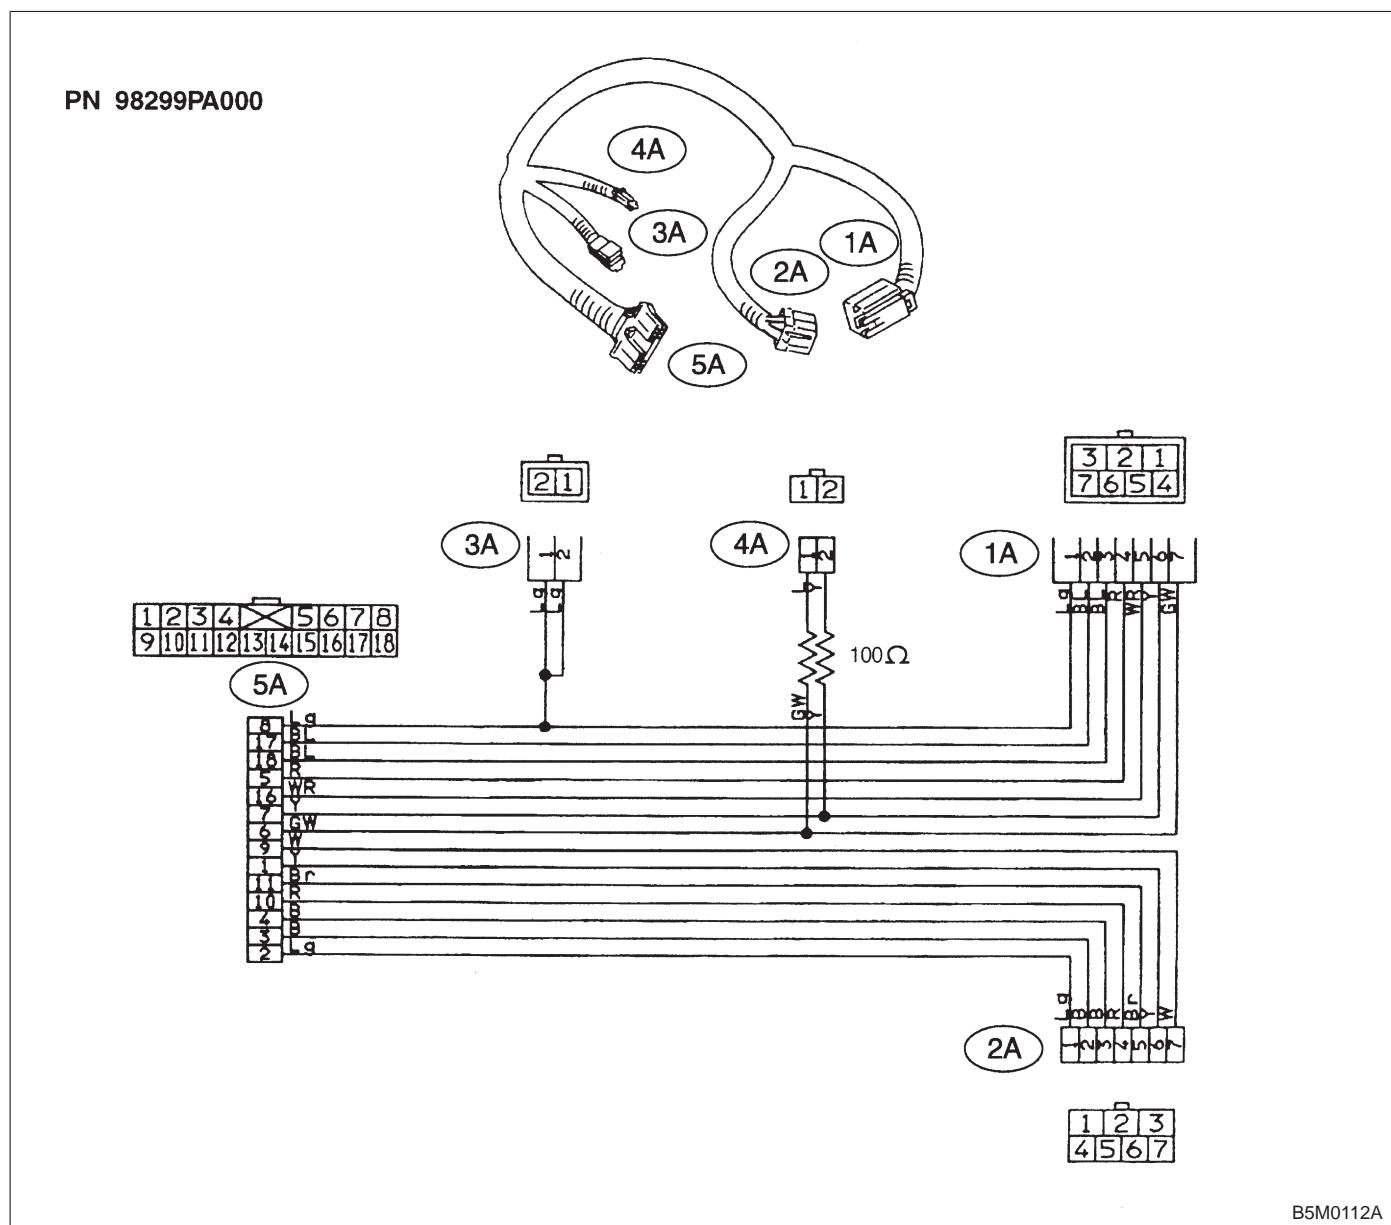

B5M0112A


SUPPLEMENTAL RESTRAINT SYSTEM

[T3B0] 5-5

3. Tools for Diagnostics

B: TEST HARNESS E


PN 98299FC000

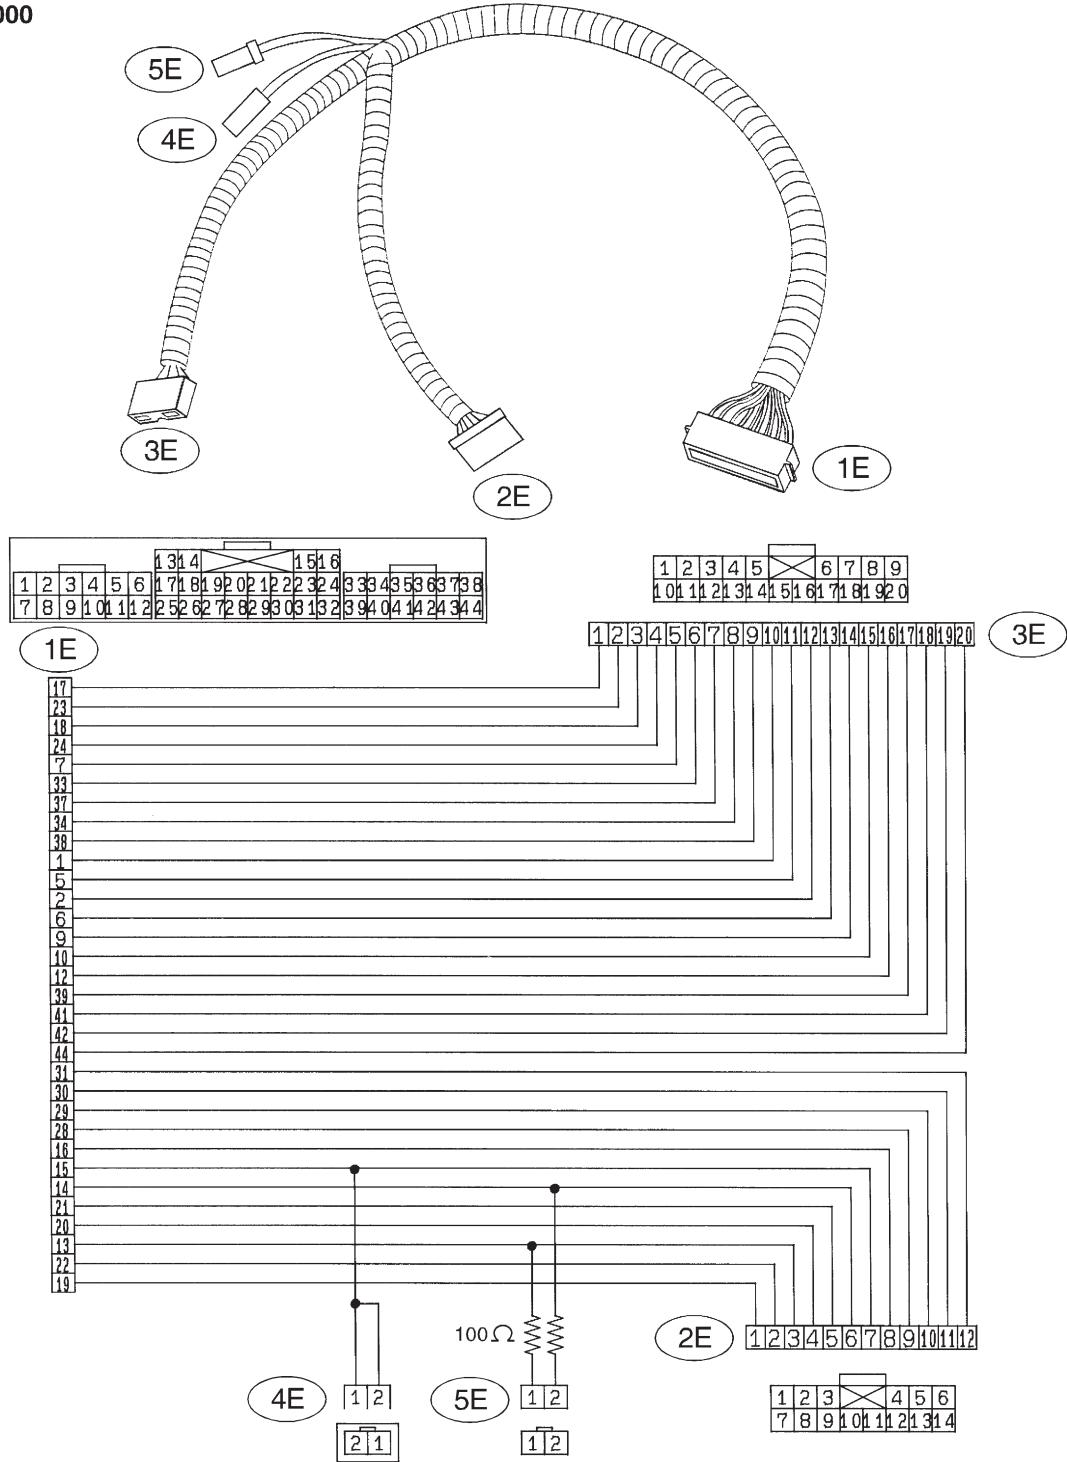

S5M0246A

C: TEST HARNESS F

PN 98299FC010

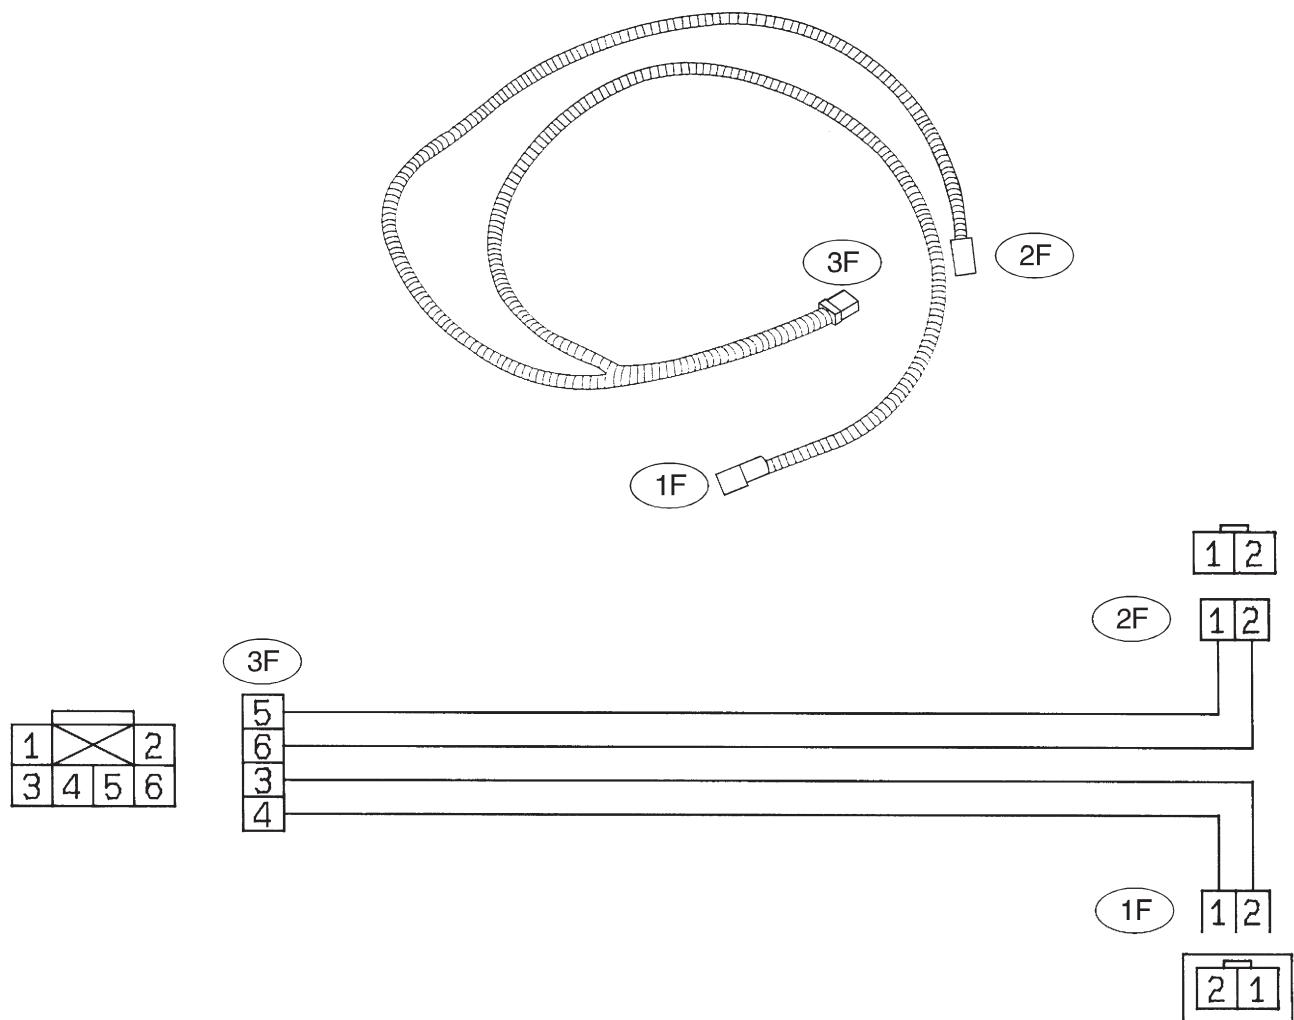


S5M0247A

SUPPLEMENTAL RESTRAINT SYSTEM

[T3D0] 5-5


3. Tools for Diagnostics

D: TEST HARNESS G

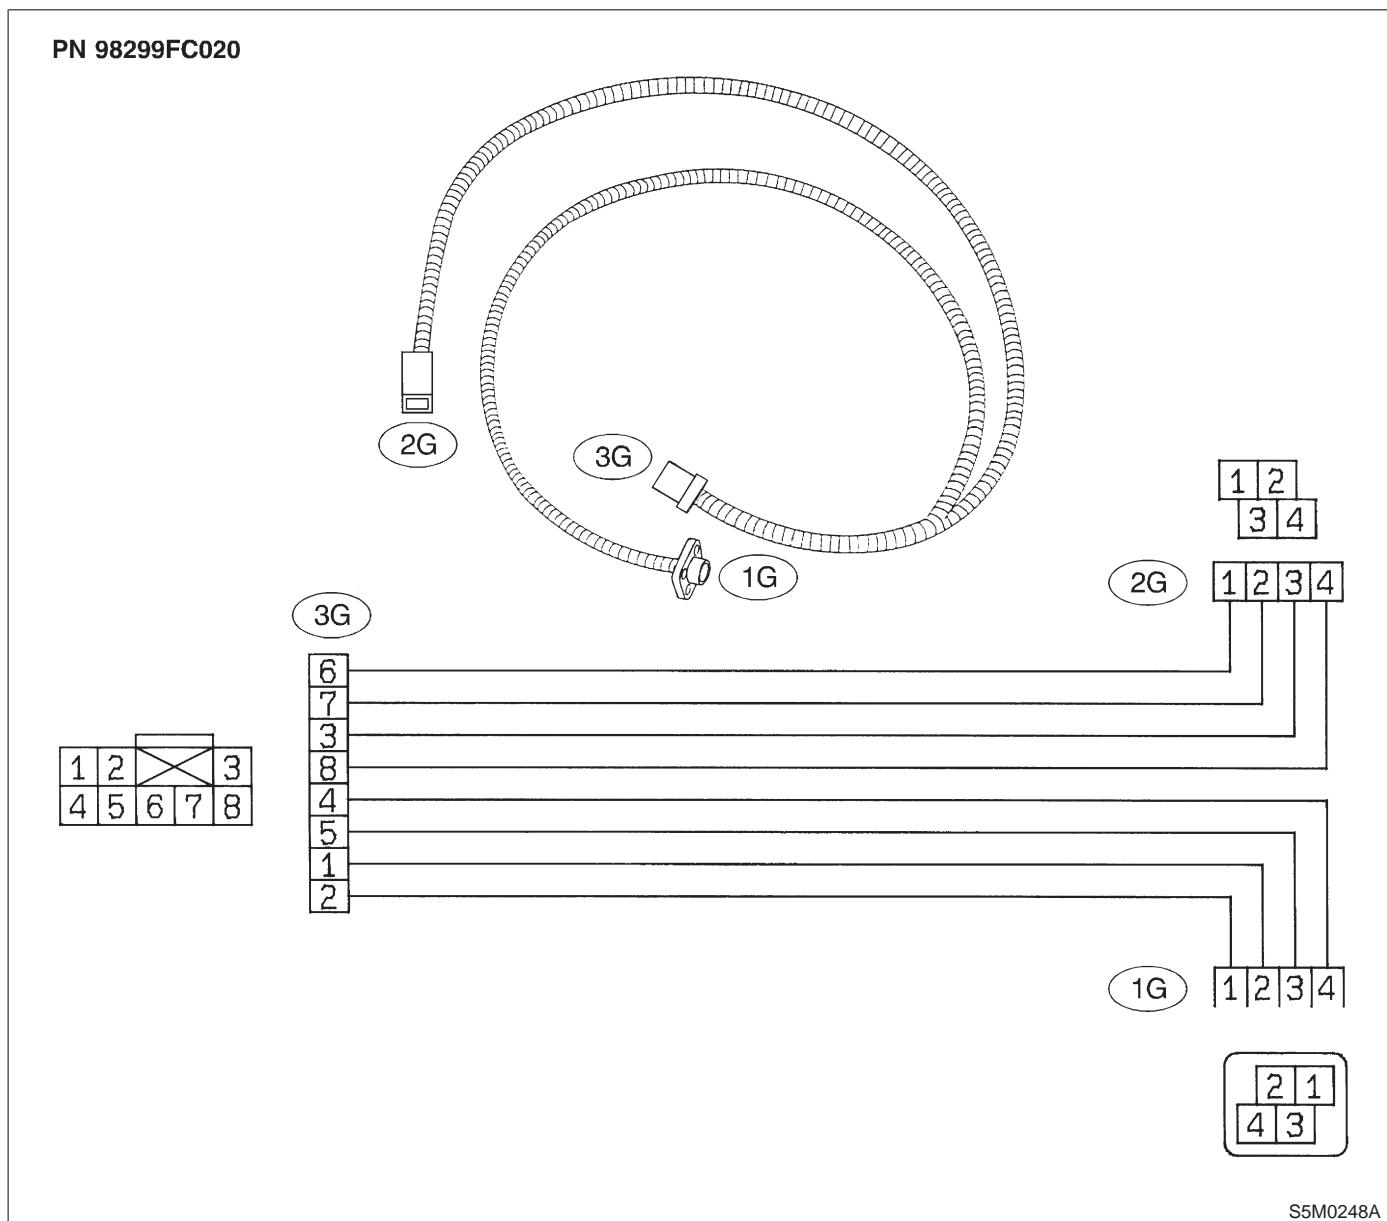

E: TEST HARNESS H

PN 98299FC030

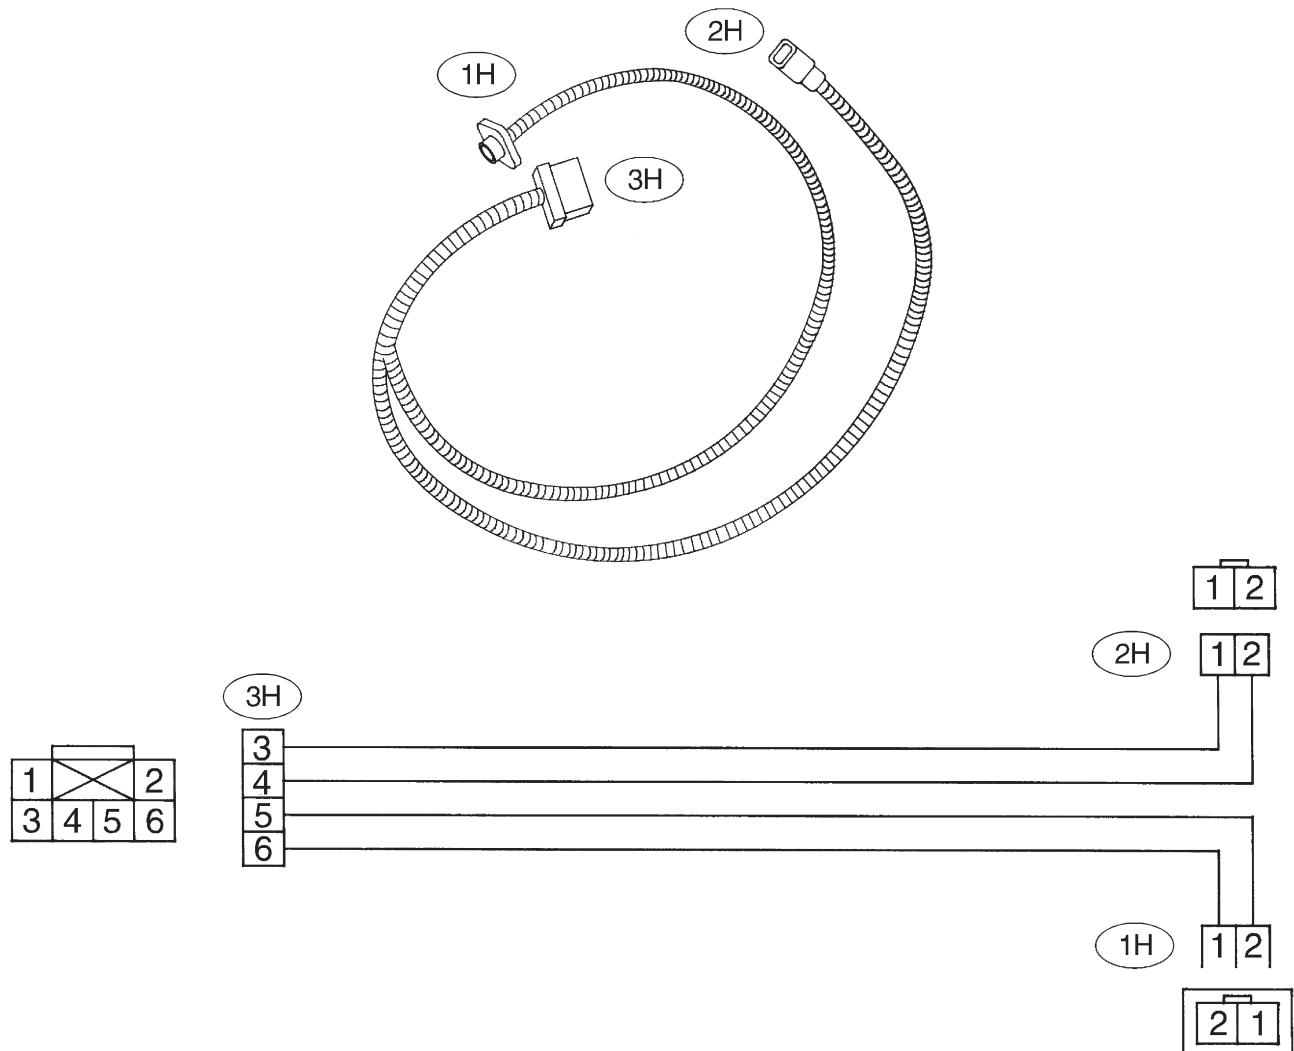

F: AIRBAG RESISTOR

The airbag resistor is used during diagnostics. The airbag resistor has the same resistance as the airbag module and thus provides safety when used instead of the airbag module. It also makes it possible to finish diagnostics in less time.

