


Check continuity between terminals (indicated in table) when terminal No. 1 is connected to battery and terminal No. 2 is grounded.


When current flows.	Between terminals No. 3 and No. 5	Continuity does not exist.
	Between terminals No. 3 and No. 4	Continuity exists.
When current does not flow.	Between terminals No. 3 and No. 5	Continuity exists.
	Between terminals No. 3 and No. 4	Continuity does not exist.
	Between terminals No. 1 and No. 2	Continuity exists.

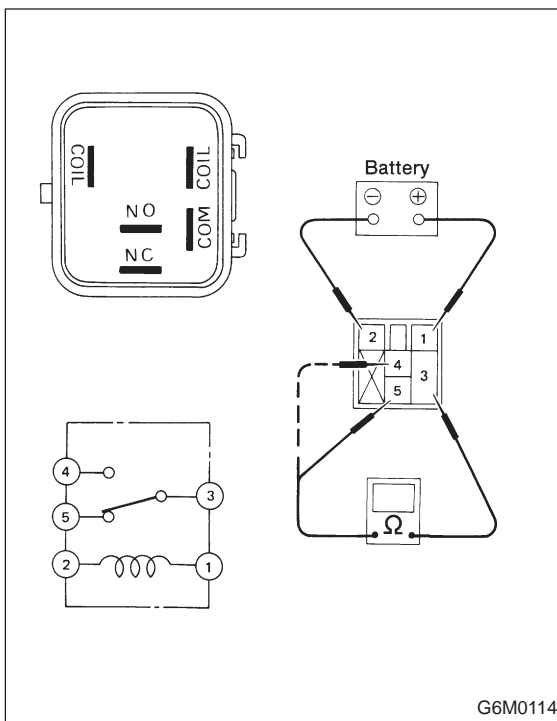

5. Front Fog Light

A: REMOVAL AND INSTALLATION

- 1) Disconnect ground cable from battery.
- 2) Remove the two bolts, then draw out the front fog light from front bumper.

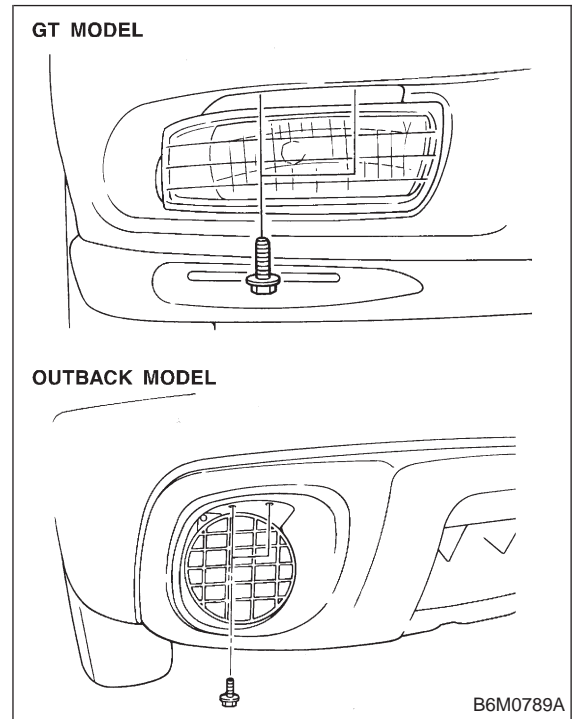

- 3) Disconnect the connector.
- 4) Installation is in the reverse order of removal.