

B6M0238

8. Back-up Light

A: REMOVAL AND INSTALLATION

1. BACK-UP LIGHT

Remove and install rear finisher. <Ref. to 6-2 [W6A2].>

2. BACK-UP LIGHT SWITCH (MT MODEL)

Remove and install back-up light switch. <Ref. to 3-1 [W5B2].>

3. INHIBITOR SWITCH (AT MODEL)

Remove and install inhibitor switch (R position switch). <Ref. to 3-2 [W3B0].>


B: INSPECTION

1. INHIBITOR SWITCH (AT MODEL)

Inspect inhibitor switch. <Ref. to 3-2 [W3A0].>

2. HAZARD SWITCH

Move hazard switch to each position and check continuity between terminals.

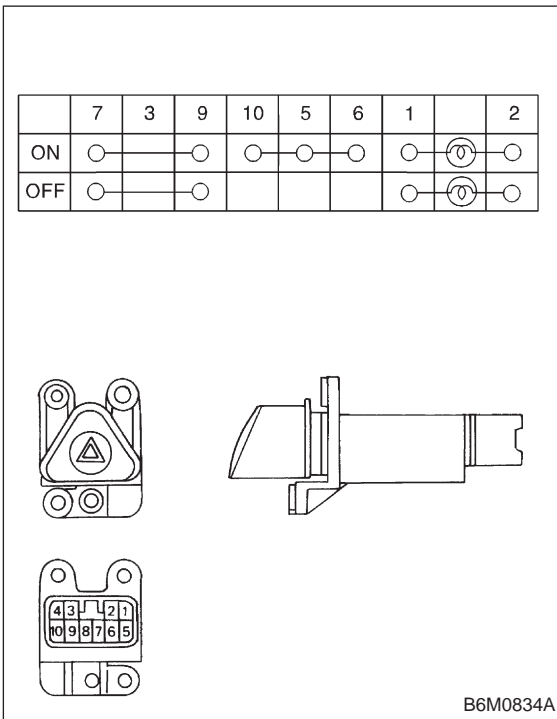

B6M0834A