


14. Combination Meter


A: REMOVAL AND INSTALLATION

1. COMBINATION METER

- 1) Move steering wheel fully down.
- 2) Remove screws which secure meter visor.

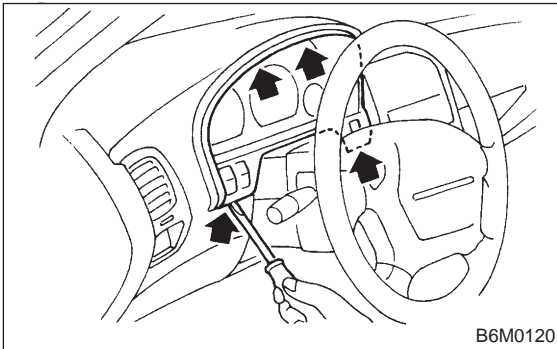

- 3) Remove visor from instrument panel.
- 4) Disconnect connectors from meter visor.
- 5) Remove screws which secure combination meter, and pull combination meter out.

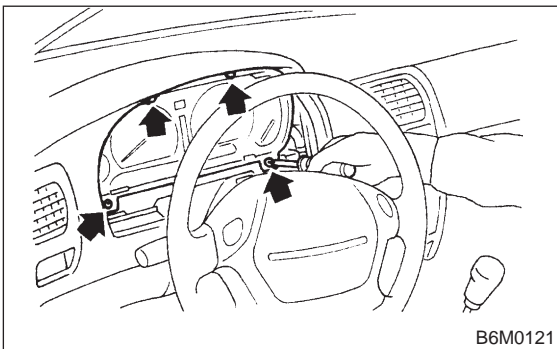


- 6) Disconnect connectors from back of combination meter.
- 7) Installation is in the reverse order of removal.

CAUTION:

When installing combination meter, be sure to connect connectors to backside of combination meter.

B: BULB REPLACEMENT

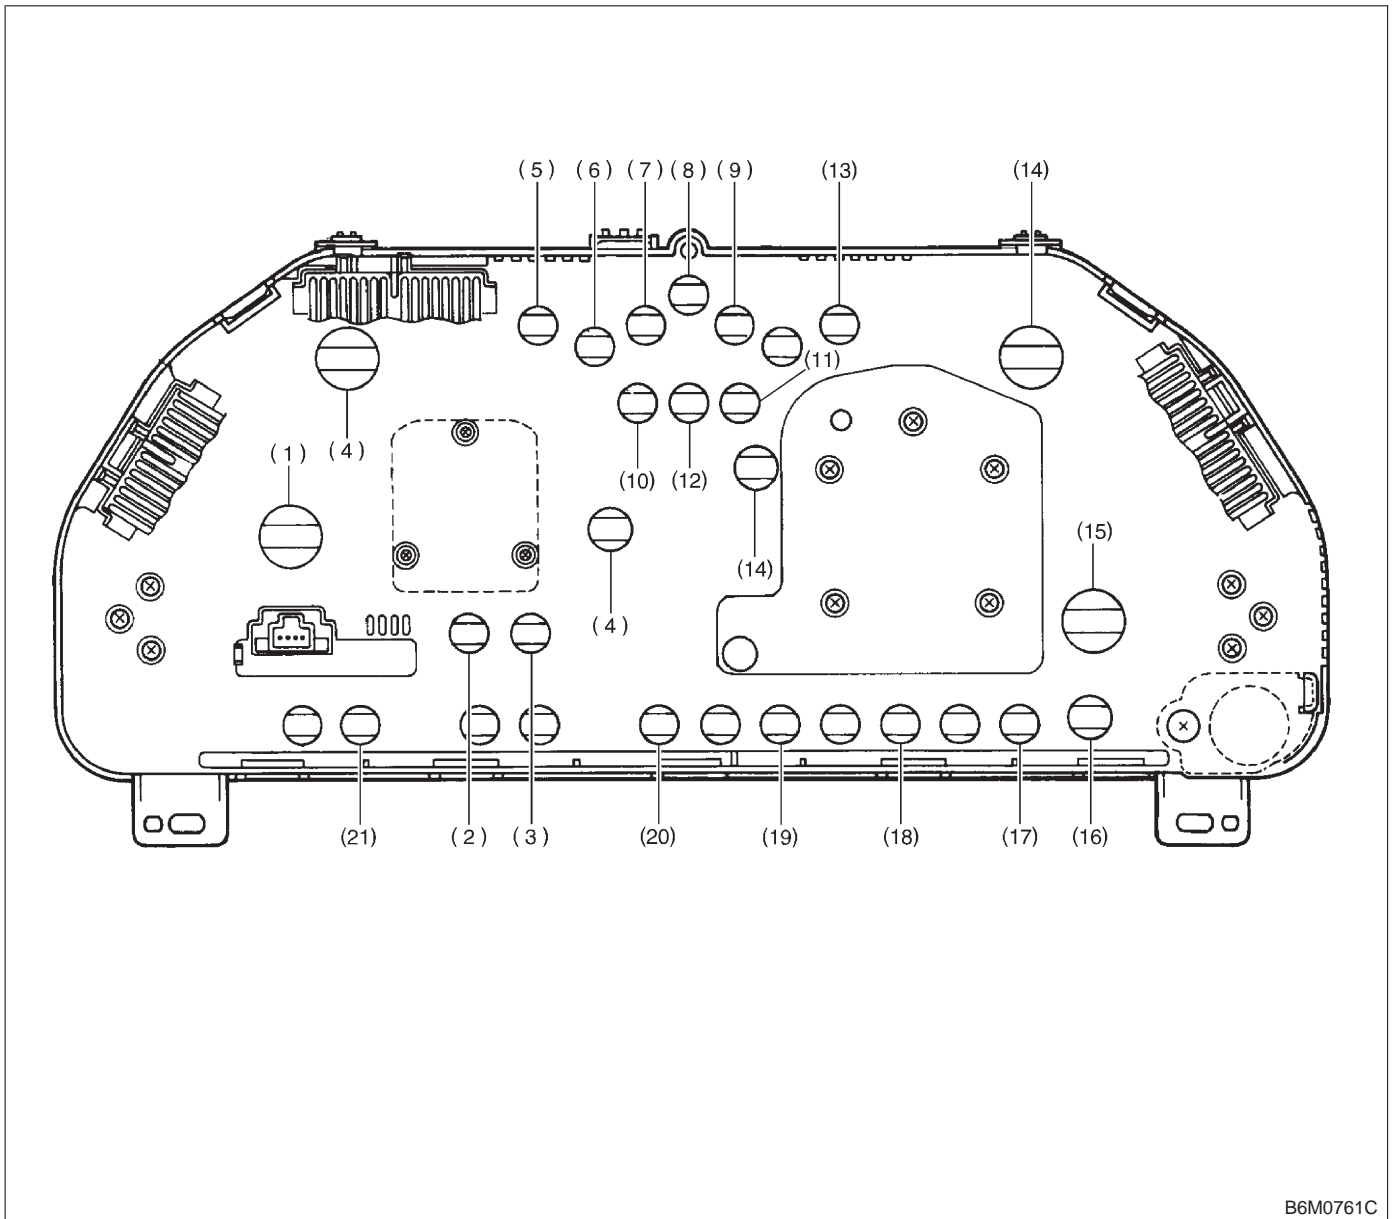

B6M0761C

- | | | |
|---|-------------------------------|--|
| (1) Tachometer and temperature gauge illumination | (7) Door open (Front-Right) | (15) Speedometer and fuel gauge illumination |
| (2) Oil pressure | (8) Seat belt | (16) Low fuel |
| (3) CHECK ENGINE (Malfunction Indicator Light) | (9) Door open (Front-Left) | (17) Charge |
| (4) Tachometer illumination | (10) Door open (Rear-Right) | (18) Brake fluid level/parking brake |
| (5) Turn signal (RH) | (11) Door open (Rear-Left) | (19) FWD |
| (6) Headlight beam | (12) Rear gate open (Wagon) | (20) AT oil temperature |
| | (13) Turn signal (LH) | (21) ABS |
| | (14) Speedometer illumination | |