



6. Ignitor

A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.

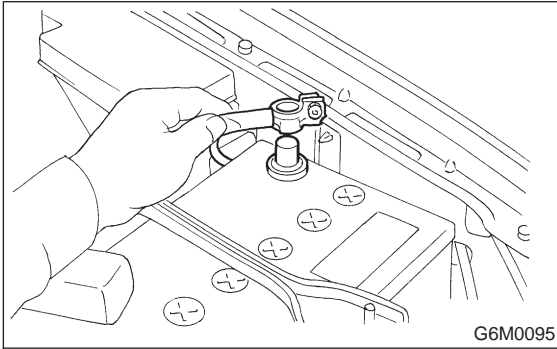

- 2) Disconnect connector from ignitor.

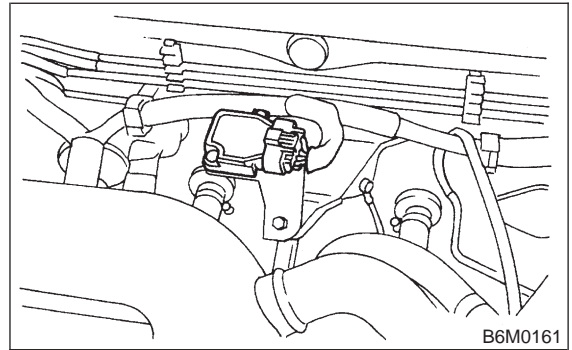

- 3) Remove screws which hold ignitor onto body.
- 4) Installation is in the reverse order of removal.