



- 5) Connect rear oxygen sensor connector. (Except California spec. vehicles)

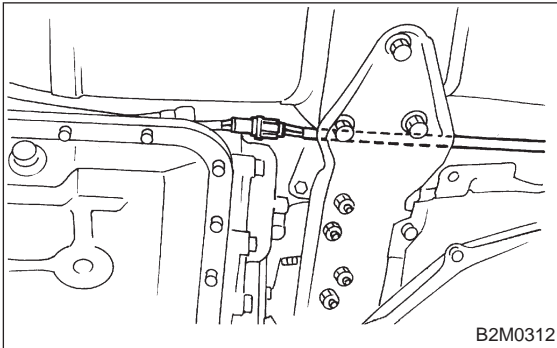

- 6) Lower the vehicle.
7) Connect battery ground cable.

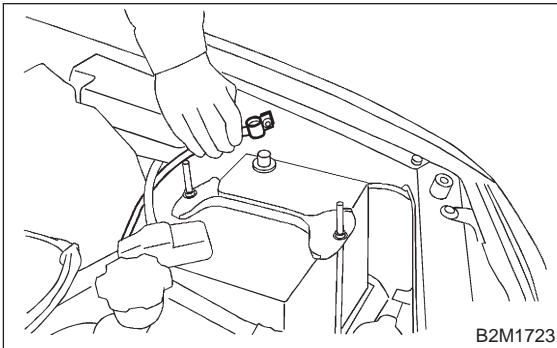


3. Canister

A: REMOVAL AND INSTALLATION

1. 2200 cc FWD AND TAIWAN SPEC. VEHICLES

- 1) Disconnect canister hoses from evaporation pipes.
- 2) Remove canister with bracket.

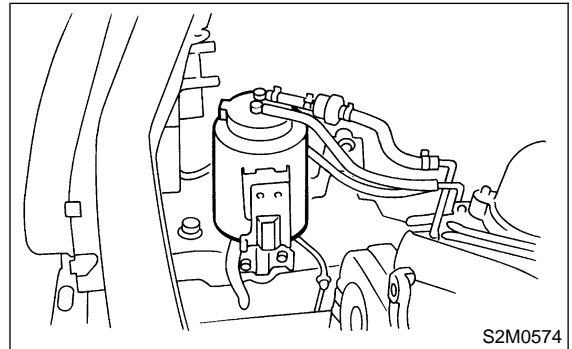


- 3) Installation is in the reverse order of removal.

CAUTION:


Insert air vent hose of canister into the hole on body.

2. 2200 cc AWD EXCEPT TAIWAN SPEC. VEHICLES AND 2500 cc MODEL

- 1) Lift-up the vehicle.
- 2) Disconnect evaporation hoses from canister.

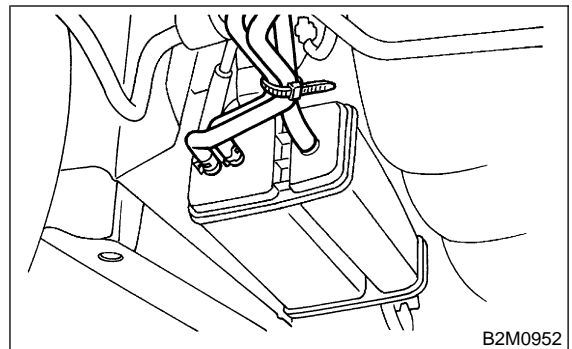


- 3) Remove canister from body.

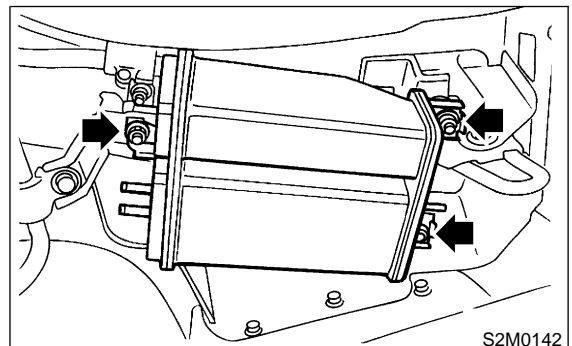

4) Installation is in the reverse order of removal.

Tightening torque:


22.5 ± 7 N·m (2.3 ± 0.7 kg·m, 16.6 ± 5.1 ft·lb)

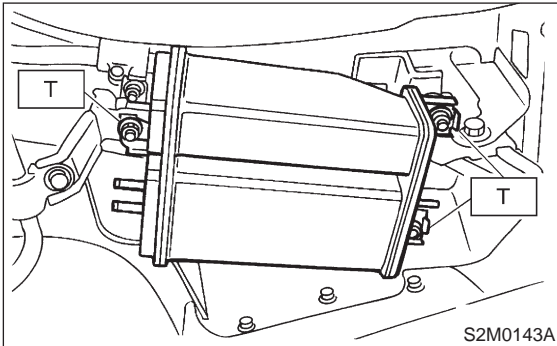


4. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

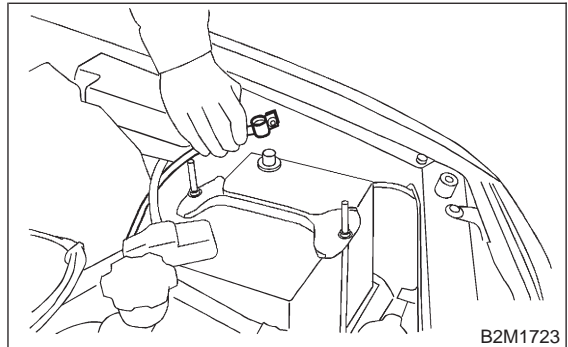

2) Remove air intake chamber and air intake duct as a unit. <Ref. to 2-7 [W18A0].>

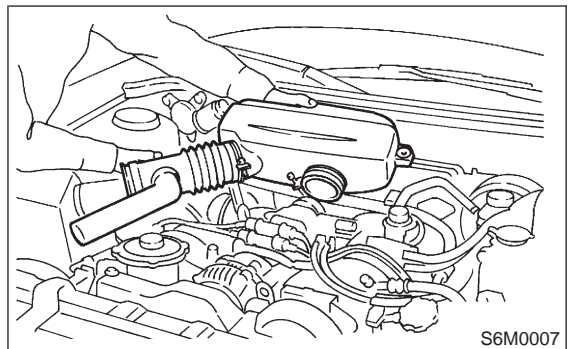

3) Remove bolt which installs purge control solenoid valve to intake manifold.

