


2-1 [W13A1]

SERVICE PROCEDURE

13. Air Filter (2200 cc AWD except Taiwan Spec. Vehicles and 2500 cc Model)


(1) Install the fuel level sensor by inserting its pawl into the cutout area of the mounting bracket.

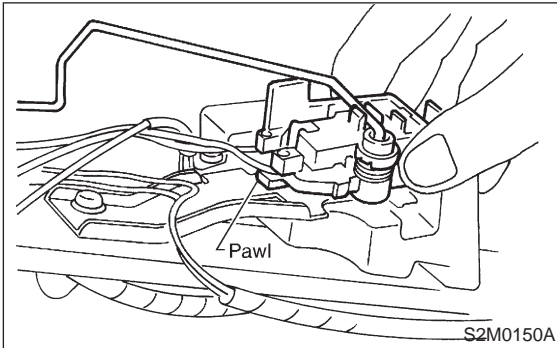

- (2) Always use new gaskets.
- (3) Ensure sealing portion is free from fuel or foreign particles before installation.
- (4) Tighten nuts in alphabetical sequence shown in figure to specified torque.

Tightening torque:

$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

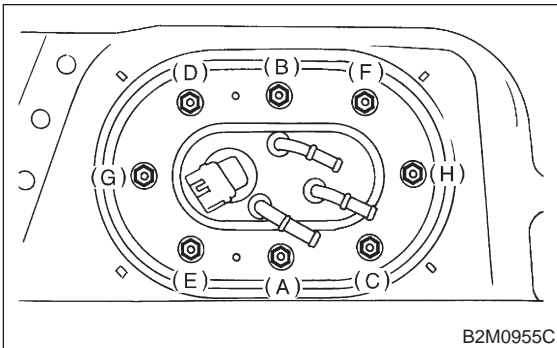


13. Air Filter (2200 cc AWD except Taiwan Spec. Vehicles and 2500 cc Model)


A: REMOVAL AND INSTALLATION

1. 2200 cc AWD EXCEPT TAIWAN SPEC. VEHICLES


- 1) Disconnect battery ground cable.

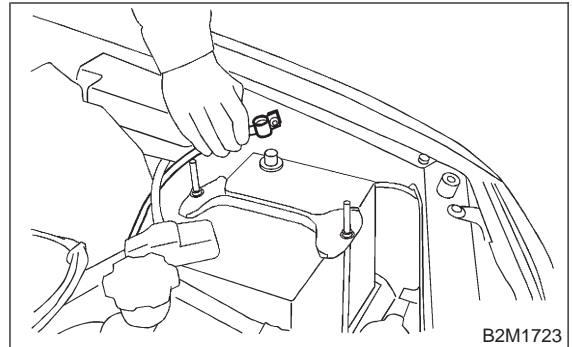

- 2) Lift-up the vehicle.
- 3) Remove canister. <Ref. to 2-1 [W3A2].>

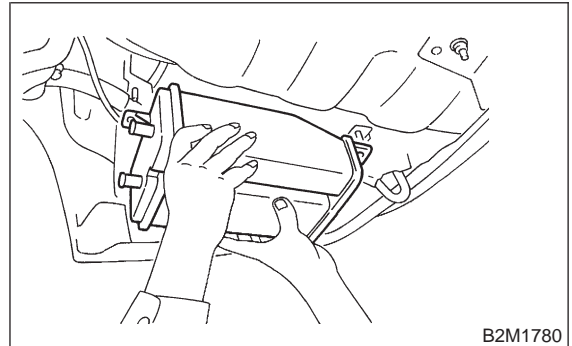

- 4) Disconnect connector from drain valve.

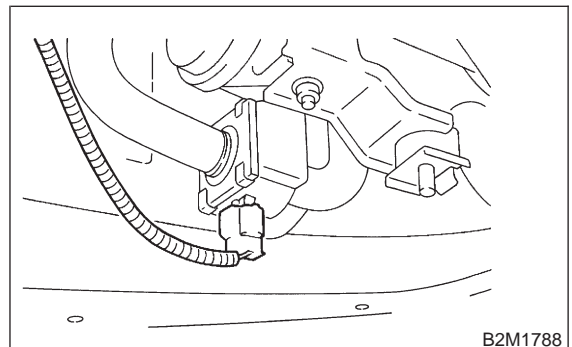


SERVICE PROCEDURE

[W13A2] 2-1


13. Air Filter (2200 cc AWD except Taiwan Spec. Vehicles and 2500 cc Model)

5) Disconnect evaporation hoses from joint pipes.

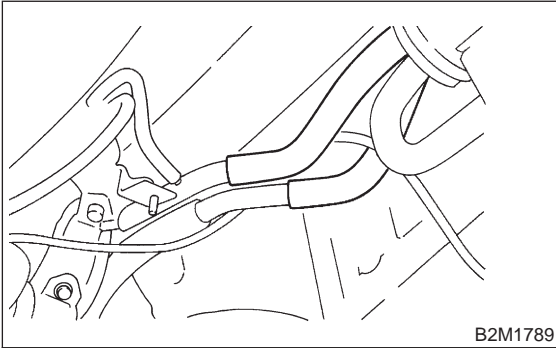


B2M1789

6) Remove nut which installs air filter and drain valve brackets on body, and remove them as a unit.

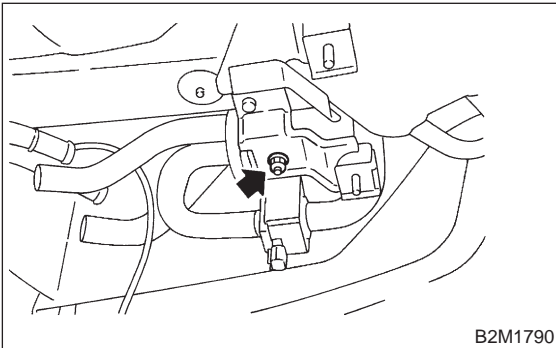

B2M1790


7) Disconnect evaporation hoses, and remove air filter.

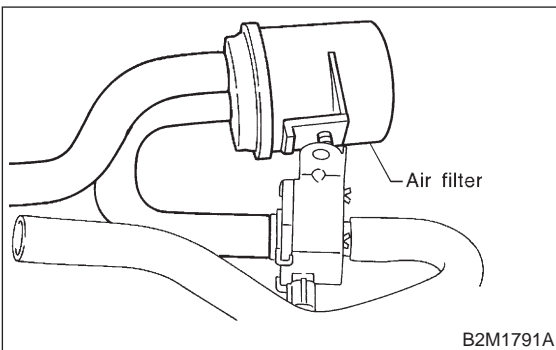

B2M1791A

8) Installation is in the reverse order of removal.


Tightening torque:
22.5±7 N·m (2.3±0.7 kg·m, 16.6±5.1 ft·lb)

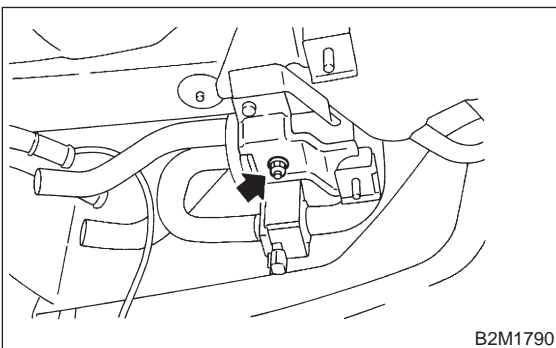

B2M1790


2. 2500 cc MODEL

1) Remove canister. <Ref. to 2-1 [W3A2].>

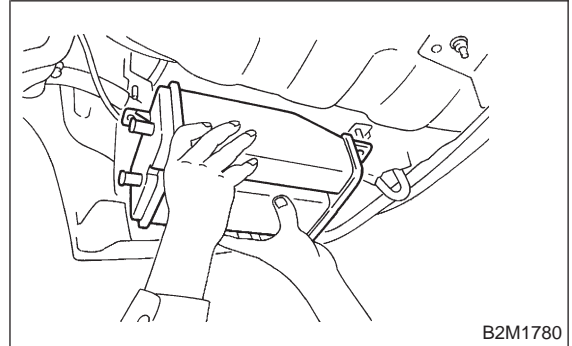

B2M1780

2) Disconnect two hoses from air filter.
3) Remove flange nut from bracket.

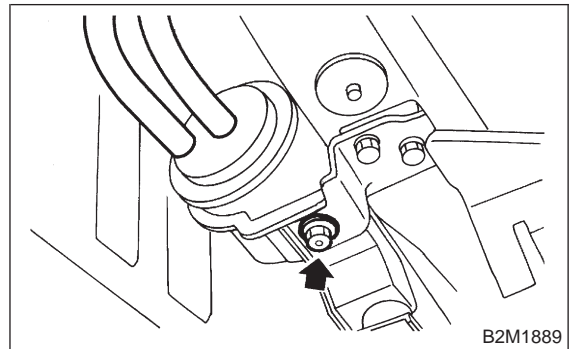

B2M1889

4) Installation is in the reverse order of removal.

Tightening torque:
22.5±7 N·m (2.3±0.7 kg·m, 16.6±5.1 ft·lb)