



14. Sub Fuel Level Sensor (AWD Model)

A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-8 [W1B0].>
- 2) Open fuel flap lid, and remove fuel filler cap.

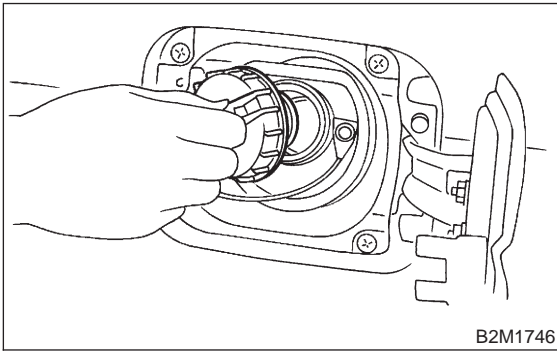


- 3) Disconnect battery ground cable.

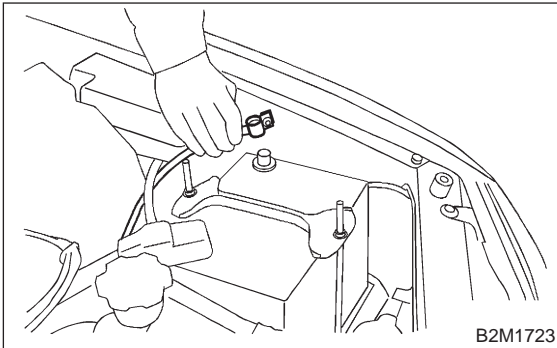


- 4) Remove service hole cover.

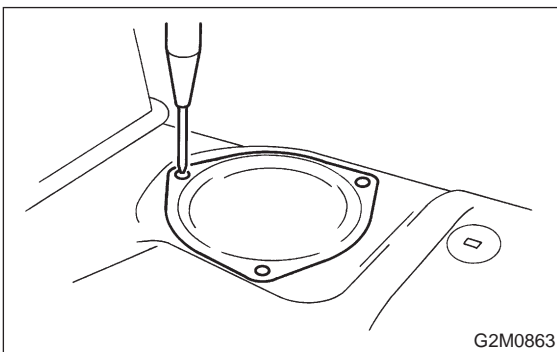


- 5) Disconnect connector from fuel sub meter, and disconnect jet pump hose.

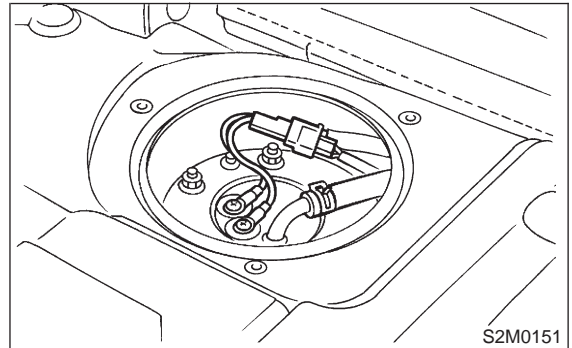

- 6) Remove bolts which install sub fuel level sensor on fuel tank.

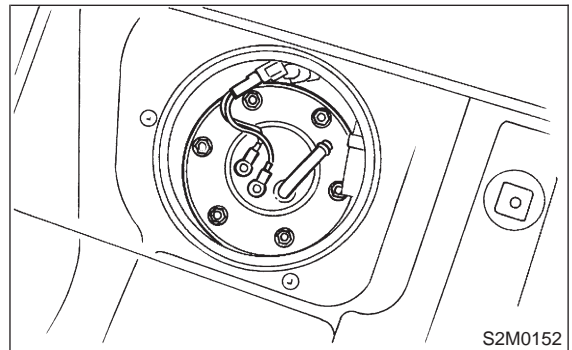

- 7) Remove sub fuel level sensor.

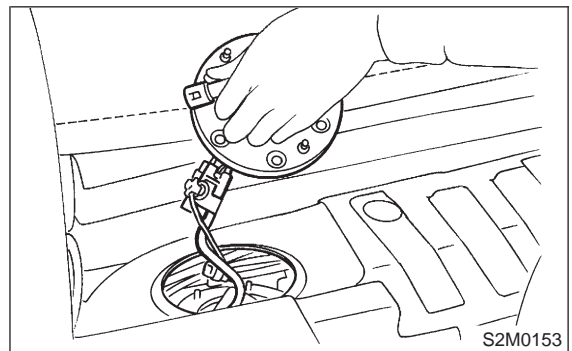

- 8) Installation is in the reverse order of removal.

Tightening torque:

T: 4.4 ± 1.5 N·m (0.45 ± 0.15 kg·m, 3.3 ± 1.1 ft·lb)

