

2-1 [W16A0]

SERVICE PROCEDURE

16. Shut Valve (2200 cc AWD except Taiwan Spec. Vehicles)


9) Installation is in the reverse order of removal.

CAUTION:

Replace rubber seat with a new one.

Tightening torque:


$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

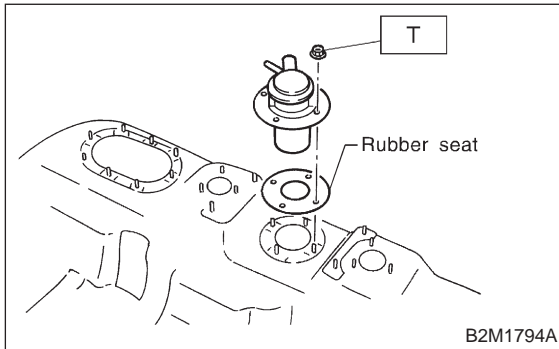


16. Shut Valve (2200 cc AWD except Taiwan Spec. Vehicles)

A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-8 [W1B0].>
- 2) Open fuel flap lid, and remove fuel filler cap.

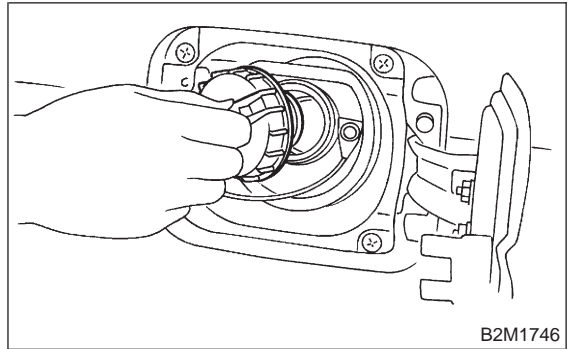


- 3) Disconnect battery ground cable.

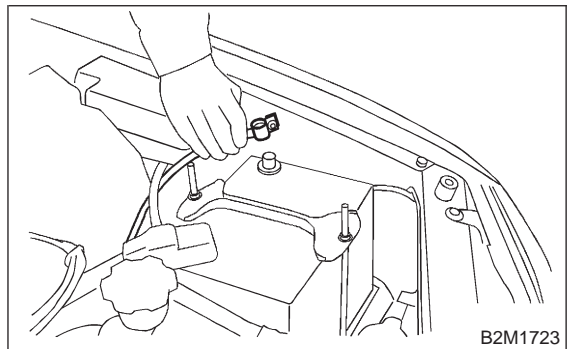


- 4) Drain fuel from fuel tank. <Ref. to 2-8 [W1C0].>

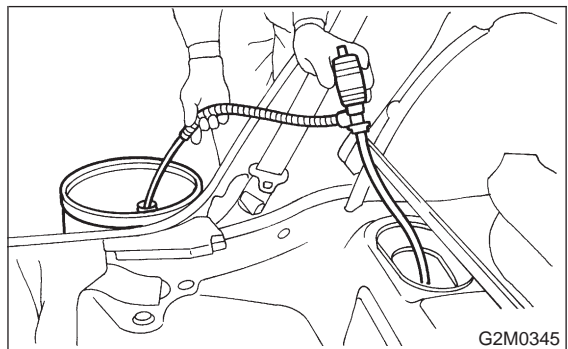


- 5) Remove fuel filler pipe. <Ref. to 2-8 [W3A2].>

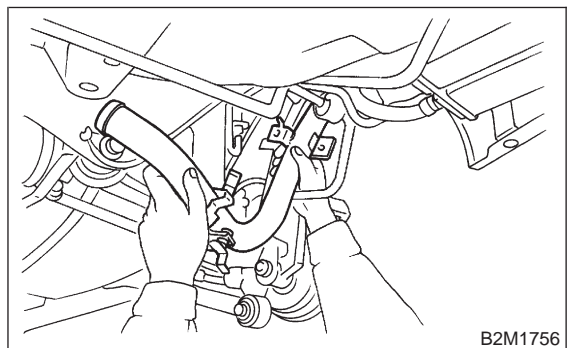

6) Disconnect evaporation hoses from shut valve.

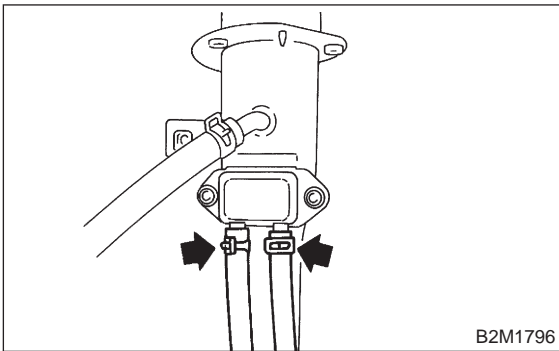


7) Remove shut valve from fuel filler pipe.

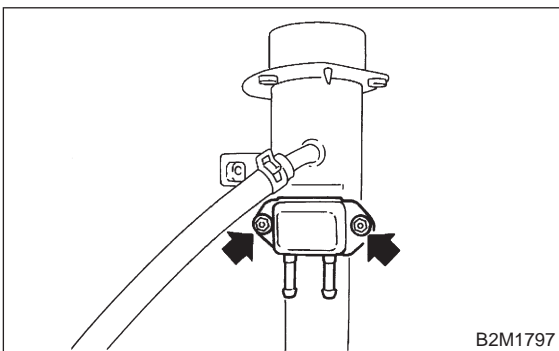

8) Installation is in the reverse order of removal.

Tightening torque:


$4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.15 \text{ kg}\cdot\text{m}$, $3.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

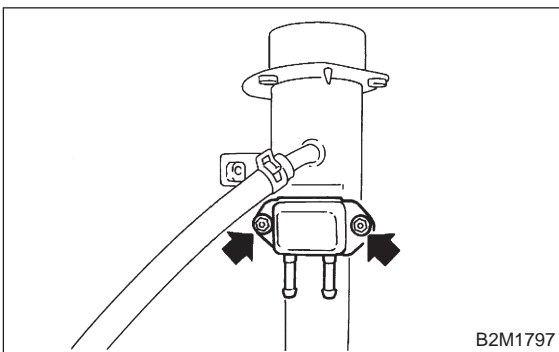

17. Drain Valve (2200 cc AWD except Taiwan Spec. Vehicles)


A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

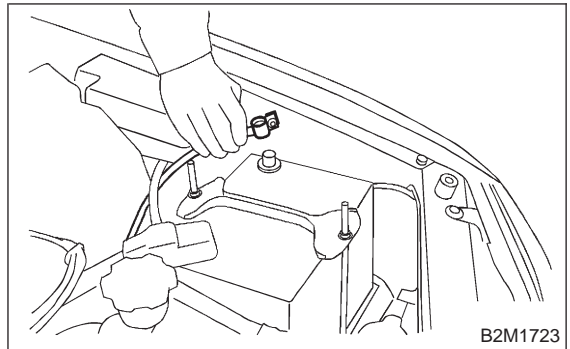


2) Lift-up the vehicle.

3) Remove canister. <Ref. to 2-1 [W3A2].>

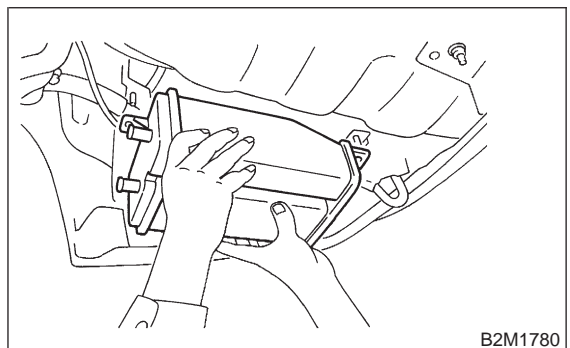

4) Disconnect connector from drain valve.

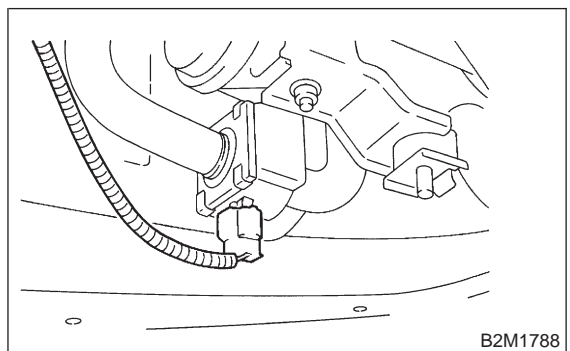

5) Disconnect evaporation hoses from drain valve.

