
3. Cylinder Head and Valve Assembly

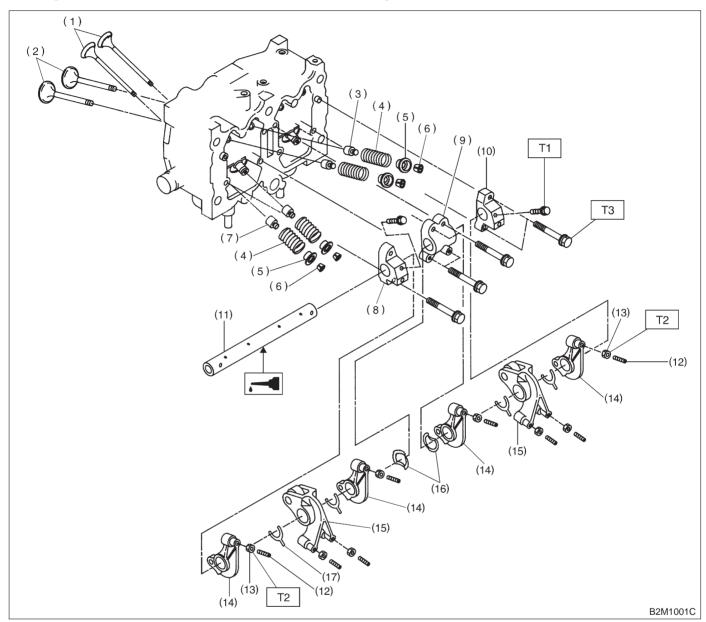

- (1) Exhaust valve
- (2) Intake valve
- (3) Intake valve oil seal
- (4) Valve spring
- (5) Retainer
- (6) Retainer key
- (7) Exhaust valve oil seal
- (8) Rocker shaft support

- (9) Rocker shaft support
- (10) Rocker shaft support
- (11) Rocker shaft
- (12) Valve rocker adjust screw
- (13) Valve rocker nut
- (14) Intake valve rocker arm
- (15) Exhaust valve rocker arm
- (16) Spring

(17) Plate

Tightening torque: N-m (kg-m, ft-lb)

T1: 5±1 (0.5±0.1, 3.6±0.7)

T2: 10±1 (1.0±0.1, 7.2±0.7)

T3: 12±1 (1.2±0.1, 8.7±0.7)