



7. Radiator Sub Fan and Fan Motor

A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

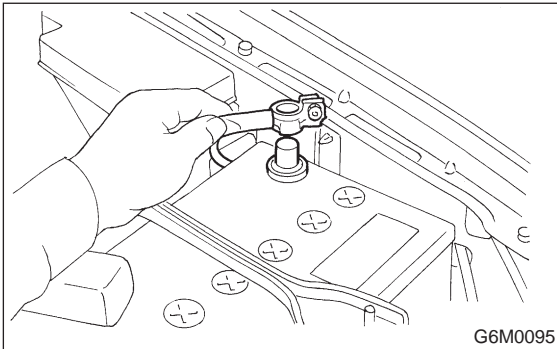


2) Lift-up the vehicle.
3) Remove under cover.

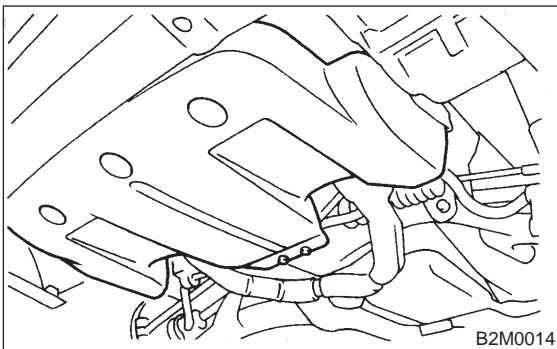


4) Loosen bolts which install the lower side of radiator sub fan shroud.

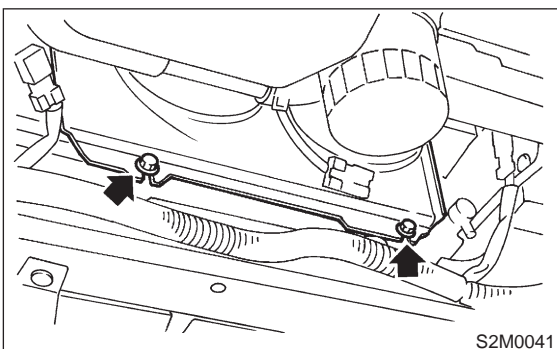


5) Disconnect connector of sub fan motor.

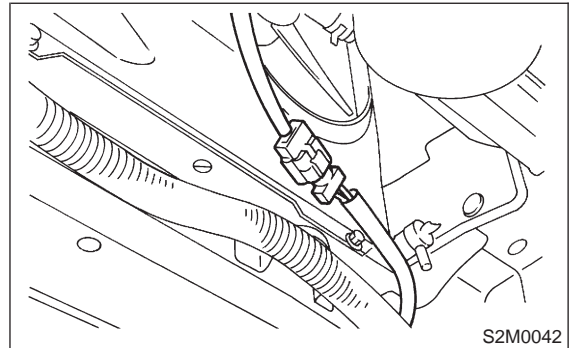


6) Lower the vehicle.
7) Remove V-belt covers.

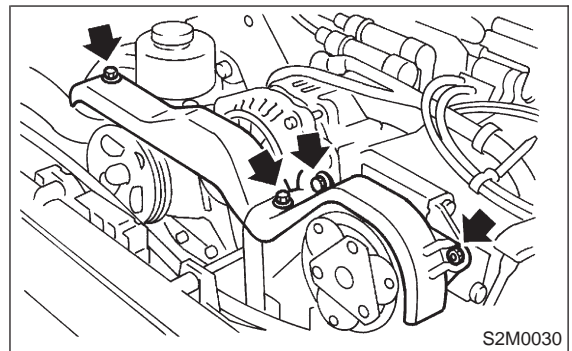

8) Remove bolts which hold sub fan shroud to radiator.

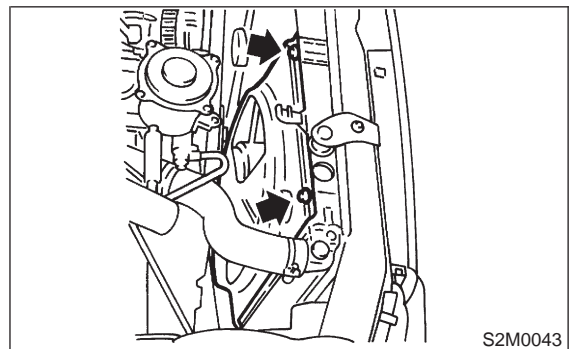


9) Remove radiator sub fan motor assembly.

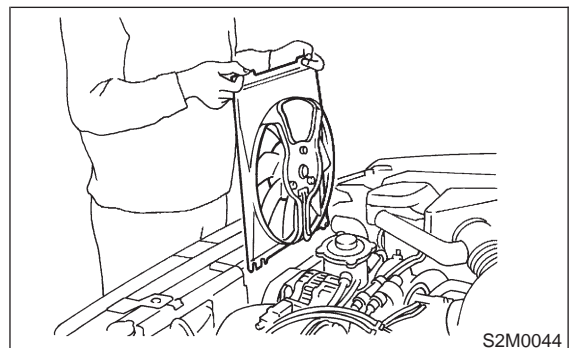


10) Installation is in the reverse order of removal.

Tightening torque:

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.20 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

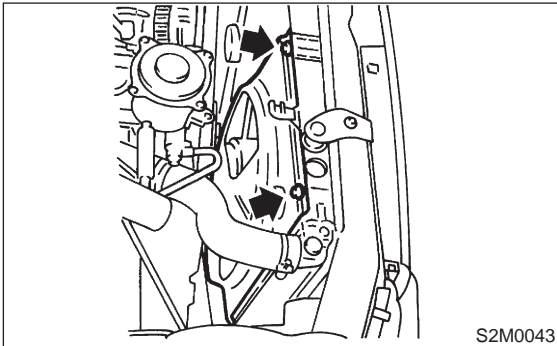


3) Remove bolts which install fan motor onto shroud.

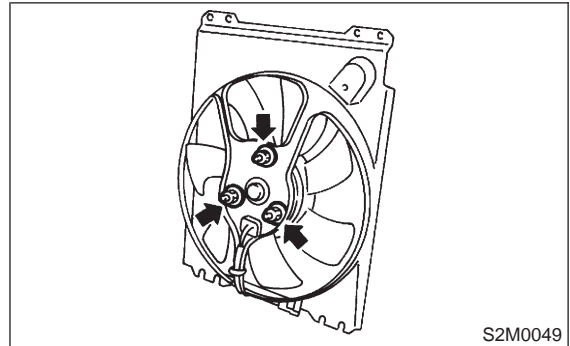

B: DISASSEMBLY AND ASSEMBLY


1) Remove clip which holds motor harness onto shroud.

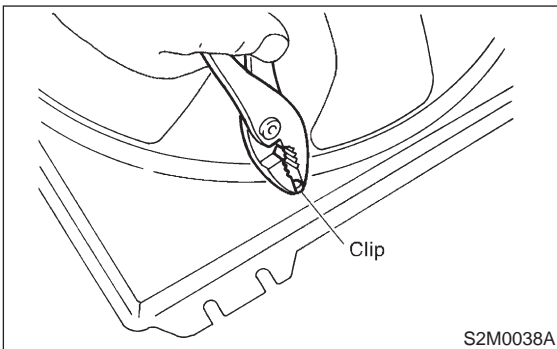

4) Installation is in the reverse order of removal.

Tightening torque:

$4.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.45 \pm 0.05 \text{ kg}\cdot\text{m}$, $3.3 \pm 0.4 \text{ ft}\cdot\text{lb}$)

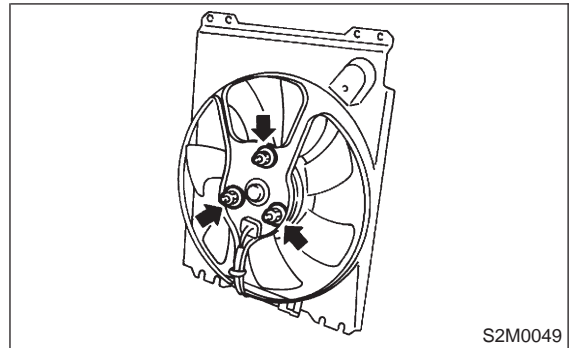

2) Cut band which holds motor harness on shroud.

