

SERVICE PROCEDURE

5) Tighten bolt which holds center exhaust pipe to hanger bracket.


Tightening torque: 35±5 N·m (3.6±0.5 kg-m, 26.0±3.6 ft-lb)

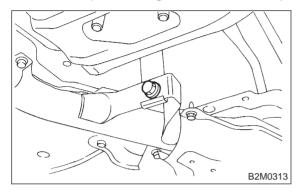

6) Connect rear oxygen sensor connector. (Except California spec. vehicles)

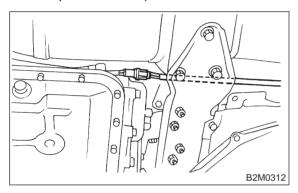


- 7) Lower the vehicle.
- 8) Connect battery ground cable.

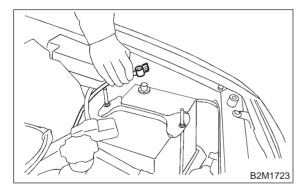

3. Rear Exhaust Pipe

A: REMOVAL


1) Separate rear exhaust pipe from center exhaust pipe.

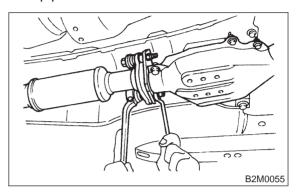

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.

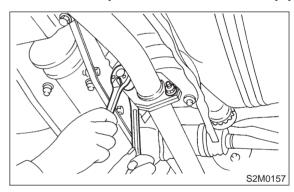


3) Remove rear exhaust pipe bracket from rubber cushion.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to pipe bracket in advance.

SUBARU CRC (Part No. 004301003)

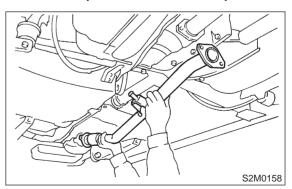

SERVICE PROCEDURE

B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

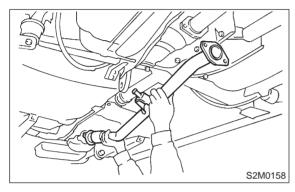

2) Install rear exhaust pipe to muffler.

Tightening torque:


48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

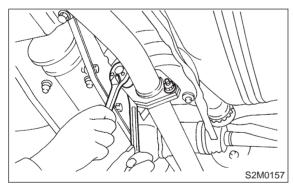

3) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:


18±5 N·m (1.8±0.5 kg-m, 13.0±3.6 ft-lb)

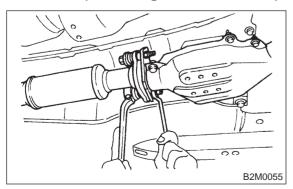

4. Muffler

A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

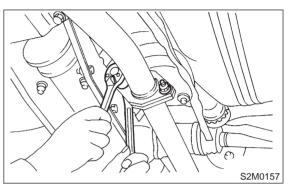

2) Remove left and right rubber cushions.


CAUTION:

Be careful not to pull down muffler.

NOTE

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

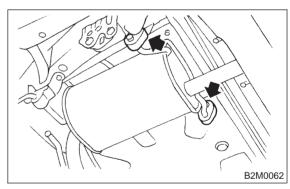

3) Remove front rubber cushion, and detach muffler assembly.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.

SUBARU CRC (Part No. 004301003)

