



2. Mass Air Flow Sensor

A: REMOVAL AND INSTALLATION


- 1) Loosen clamps which connect air intake duct to air intake chamber and mass air flow sensor.
- 2) Disconnect blow-by hose from air intake duct.

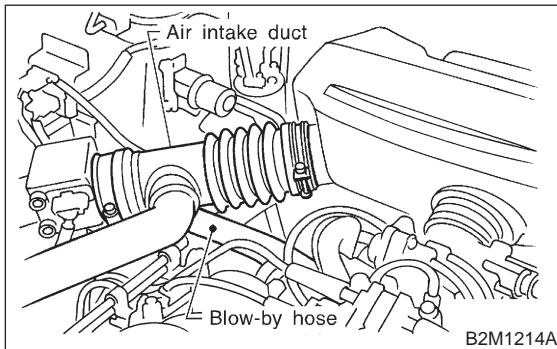


- 3) Remove air intake duct.
- 4) Disconnect connector from mass air flow sensor.

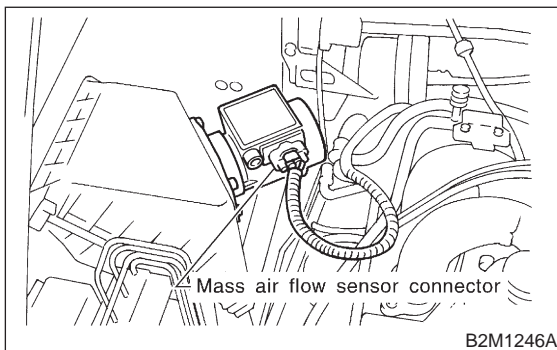

- 5) Remove two clips, then remove air cleaner upper cover.

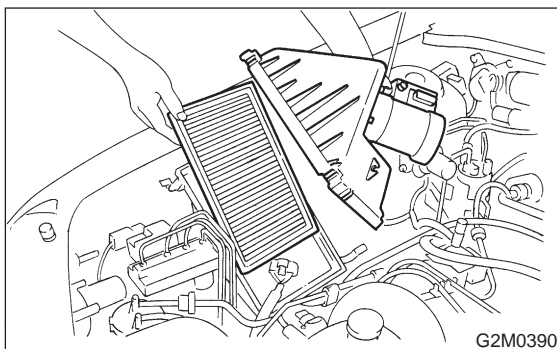

- 6) Remove mass air flow sensor from air cleaner upper cover.

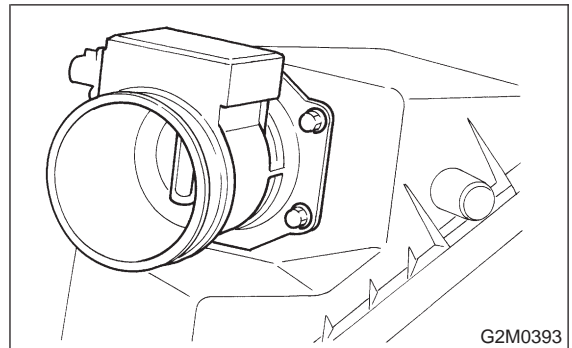

- 7) Installation is in the reverse order of removal.

Tightening torque:

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

CAUTION:

Before installing air cleaner upper cover, align holes with protruding portions of air cleaner lower case, then secure upper cover to lower case.