



## 15. Engine Control Module (ECM)

### A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

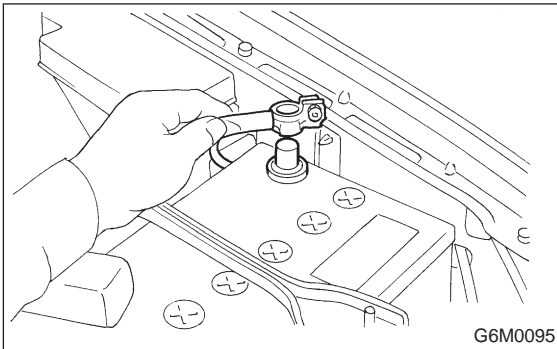


- 2) Remove front pillar lower trim.  
<Ref. to 5-3 [W5A1].>

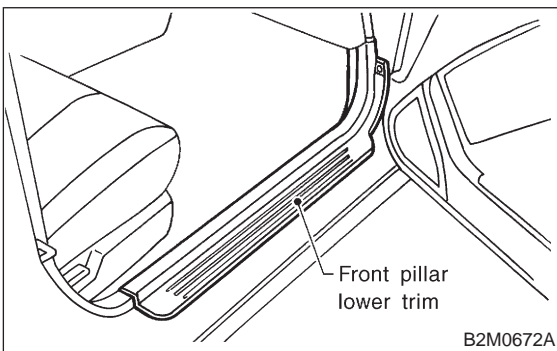


- 3) Detach floor mat of front passenger seat.

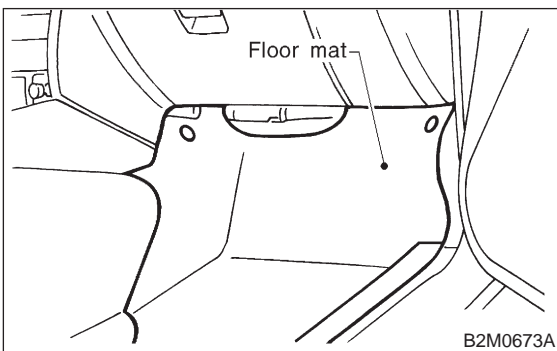


- 4) Remove protect cover.

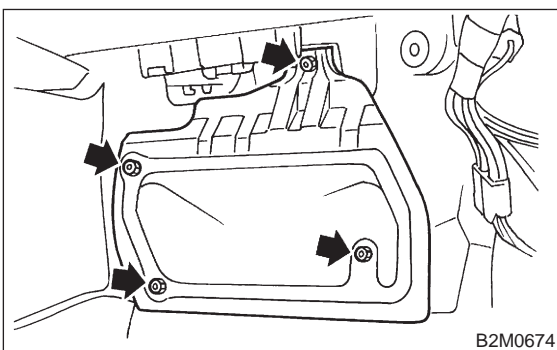


- 5) Remove vinyl cover and nuts which attach ECM to bracket.

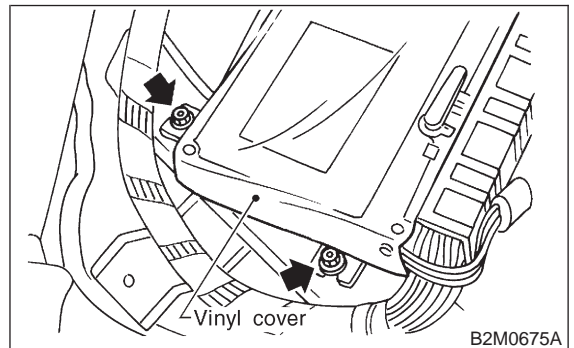


- 6) Detach clip from bracket.

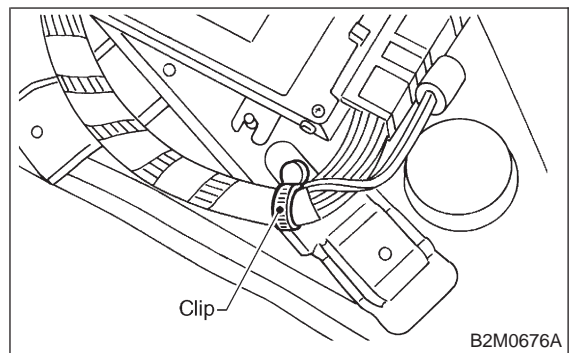


- 7) Remove connector cover.

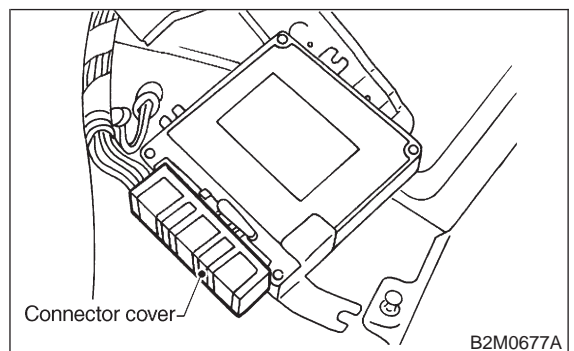

- 8) Disconnect ECM connector.

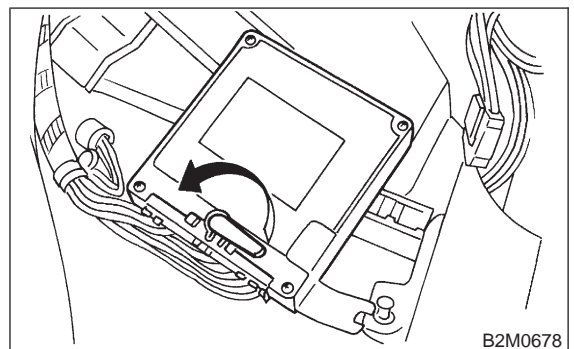

9) Take out ECM.

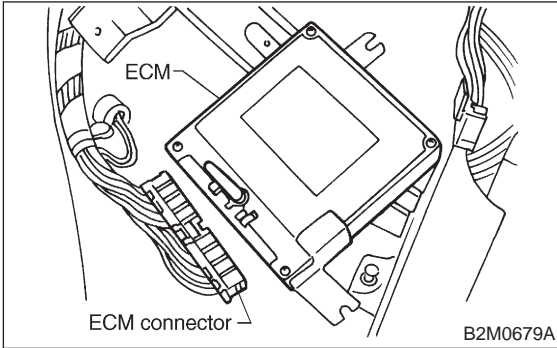


10) Installation is in the reverse order of removal.


## 16. Main Relay

### A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

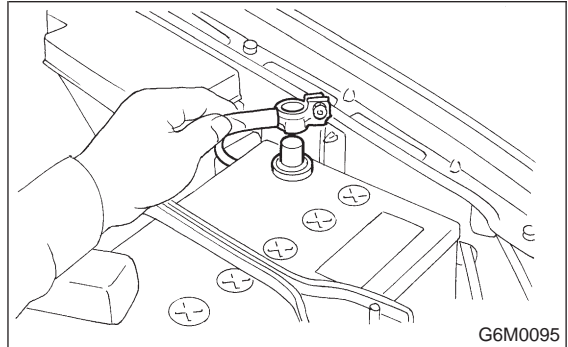

2) Remove lower cover and then disconnect connectors.

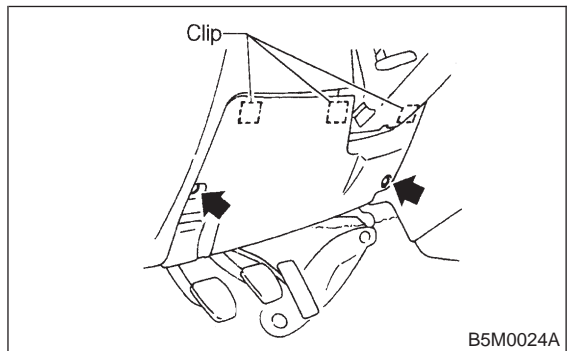

3) Lower transmission control module.

4) Remove the front pillar lower trim.

<Ref. to 5-3 [W5A1].>

5) Remove fuse box mounting nuts.

6) Lower fuse box.

7) Remove fuse box mounting bracket.

8) Remove screw which retains bracket of main relay and fuel pump relay.

