



5) Remove fuel sub meter unit.

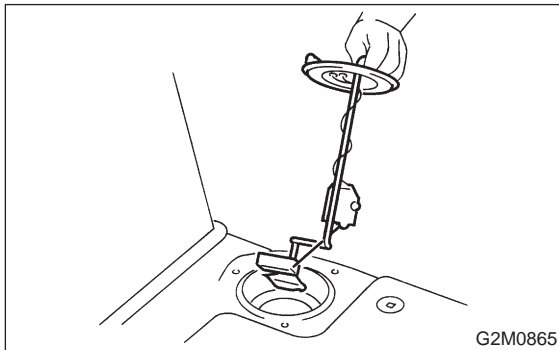

6) Installation is in the reverse order of removal.

Tightening torque:


T: 4.4 ± 1.5 N-m (0.45 ± 0.15 kg-m, 3.3 ± 1.1 ft-lb)

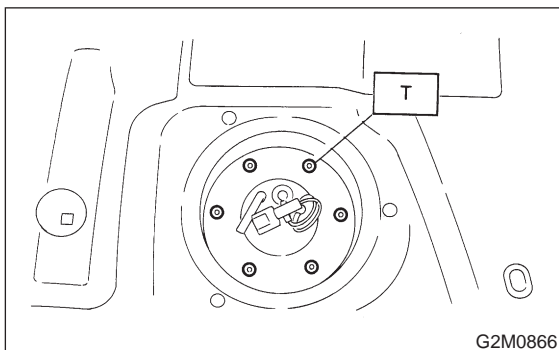


10. Fuel Cut Valve (AWD model only)

A: REMOVAL AND INSTALLATION

1) Remove fuel tank. <Ref. to 2-8 [W2A0].>

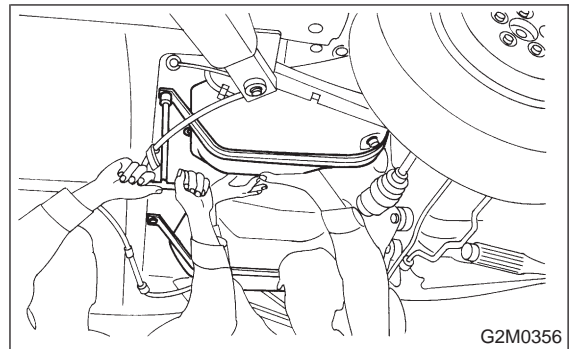

2) Disconnect evaporation hose from fuel cut valve.

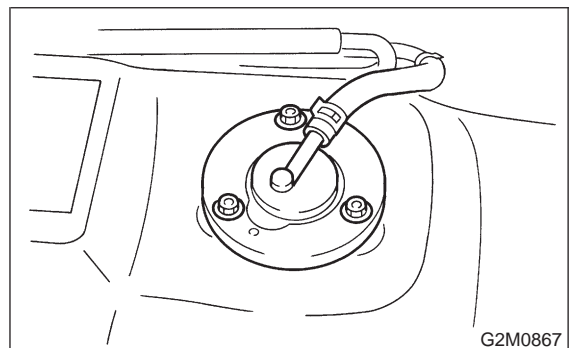

3) Remove fuel cut valve.

4) Installation is in the reverse order of removal.

Tightening torque:

4.4 ± 1.5 N-m (0.45 ± 0.15 kg-m, 3.3 ± 1.1 ft-lb)

