



3. Blower Motor Assembly

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box and pocket back panel.
<Ref. to 5-4 [W1A0].>
- 3) Disconnect blower motor harness connector.

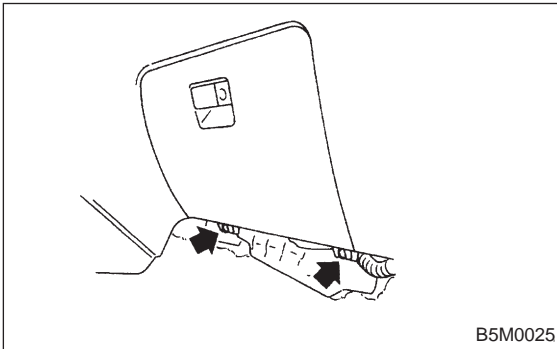

- 4) Disconnect aspirator pipe (A).
- 5) Remove blower motor mounting screw.

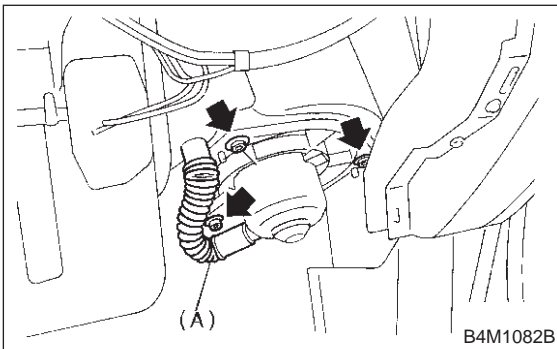

- 6) Remove blower motor assembly.
- 7) Installation is in the reverse order of removal.


4. Control Unit

A: REMOVAL AND INSTALLATION


- 1) Disconnect GND cable from battery.
- 2) Set temperature control lever to "FULL COLD" position.
- 3) Remove temperature control cable from heater unit.

NOTE:


Do not attempt to move link of heater unit during installation.

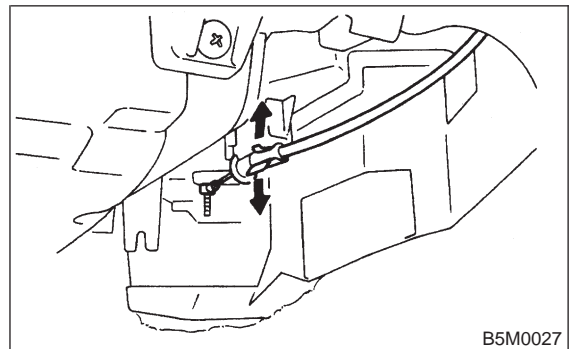

- 4) Remove cup holder.
- 5) Remove center panel and then disconnect connector.

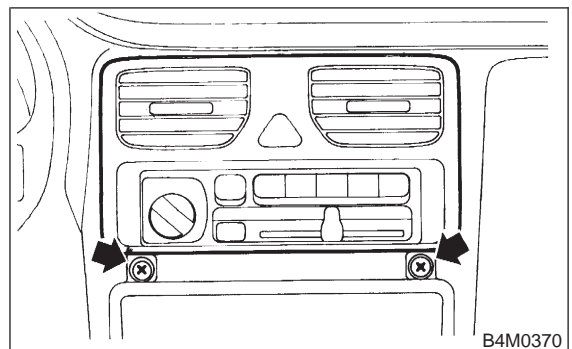

- 6) Remove control unit assembly and disconnect connector.

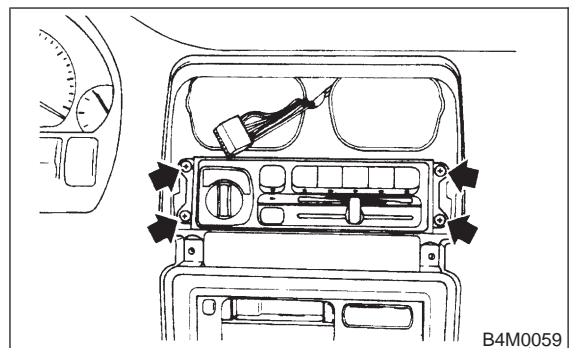

- 7) Installation is in the reverse order of removal.

NOTE:

Before control unit installation, set temperature control lever to "FULL COLD" position.

B: INSPECTION

1. FAN SWITCH

Check continuity between terminals at each switch position.

Switch position	Terminals					
	1	2	3	4	5	6
1	○	○				○
2	○		○			○
3	○			○		○
4	○				○	○
	GND					IGN

B4M1089A

2. CONTROL UNIT


Check circuit continuity between each terminal, when push control switch is turned ON.

Terminal No.	Mode selector switch					RECIRC switch		A/C switch	illumi.
	VENT	BI-LEV	HEAT	DEF/HEAT	DEF	RECIRC	FRESH		
1									
2									
3									○
4									
5									
6			○	○	○				
7	○	○							
8	○	○	○	○	○	○	○		
9							○		
10						○			
11									○
12	○	○	○	○	○				
13									
14	○				○				
15		○	○						
16	○								
17								○	
18								○	
19								○	

B4M1090A

C: ADJUSTMENT


- 1) Operate temperature control lever to "FULL COLD" position.
- 2) Install control cable to lever (A). While pushing outer cable, secure control cable with clip (B).

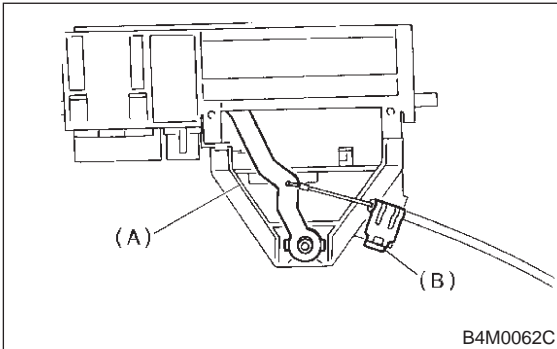


5. Intake Door Motor

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box and pocket back panel. <Ref. to 5-4 [W1A0].>

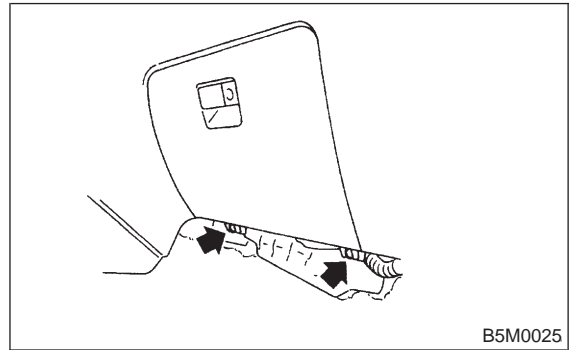


- 3) Remove heater duct or evaporator. (With A/C model). <Ref. to 4-7 [W14A0].>
- 4) Remove intake unit from the vehicle.

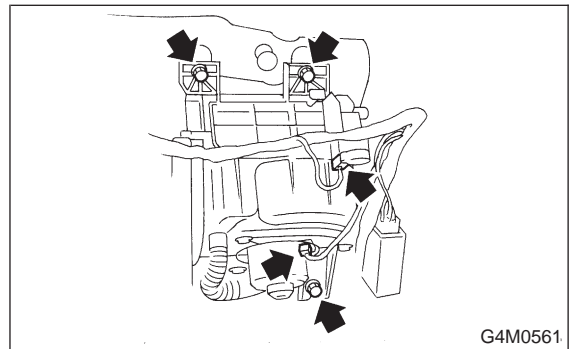

- 5) Remove screws which secure intake door motor to intake unit.

NOTE:

Ensure that RECIRC switch is set to "ON".

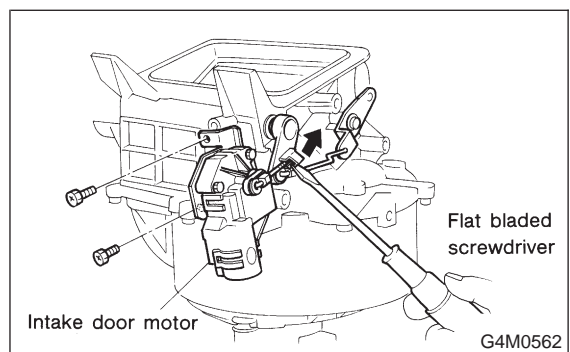

- 6) Installation is in the reverse order of removal.